


# Motor servostyring / Motor Servo Controller Type TR-EM-167

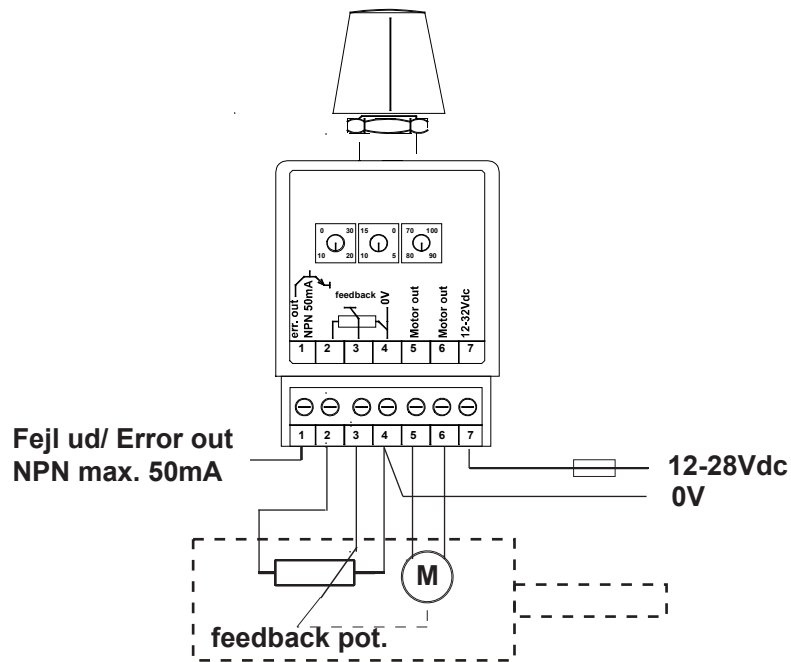

Tilslutning af aktuatorer ved hjælp af ledningsfarver / Connection of Actuators by the help of wire colors

	Terminal	LA12P	LA30/32P	LA23 Hall-pot	LA35 Hall-pot
Error out	1				
Ref. Out	2	S	S		
FB-value	3	GU	BL	V	V
0-	4	GR	BR	HV	HV
Actuator -	5	BL	HV/GR	BL	BL
Actuator +	6	R	GU/R	BR	BR
12/24V +	7				
POT					

BEMÆRK! Maks. køretid = 30 sek.  
Please NOTE! Max. run time = 30 sec.

Farvekoder / Color codes

- R = Rød / Red
- S = Sort / Black
- V = Violet
- BL = Blå / Blue
- BR = Brun / Brown
- GU = Gul / Yellow
- GR = Grøn / Green
- HV = Hvid / White
- none = Ingen ledning / No wire

For yderligere vejledning, henvises til brugsanvisningen på [www.linakthirdparty.com](http://www.linakthirdparty.com)

For detailed instructions please refer to the Instruction manual at [www.linakthirdparty.com](http://www.linakthirdparty.com)

Produceret af / Produced by Electromen OY ELECTROMEN OY

Specifikationerne kan ændre sig uden forudgående varsel. Det er brugerens ansvar at fastslå LINAK produktets egnethed til en specifik applikation. LINAK vil ved levering ombytte/reparere defekte produkter, som er dækket af garanti, hvis de straks returneres til LINAK Danmark A/S. Der påtages intet ansvar udover denne ombytning/reparation.

Specifications subject to change without prior notice. It is the responsibility of the product user to determine the suitability of the products for a specific application. LINAK Danmark will at point of delivery replace/repair defective products covered by the warranty if promptly returned to LINAK Denmark. No liability is assumed beyond such replacement/repair.

Forhandler / Distributor:

LINAK Danmark A/S  
Mønstedsvvej 9  
DK-8600 Silkeborg  
Tlf. +45 86803611 - [www.linak.dk](http://www.linak.dk)

