


CS16 - CS28 - CS32

Data sheet

CS16 - CS28 - CS32

The CS16 electronic limit switch is connected between the LINAK® actuator and a non-LINAK power supply, where it cuts out the current to the actuator in end position or if an obstacle is encountered. The PCB contains a variable current limit setting and is available in different versions, depending on which actuator it is to be used with.

The CS16 is an important component which ensures a long life for the actuator.

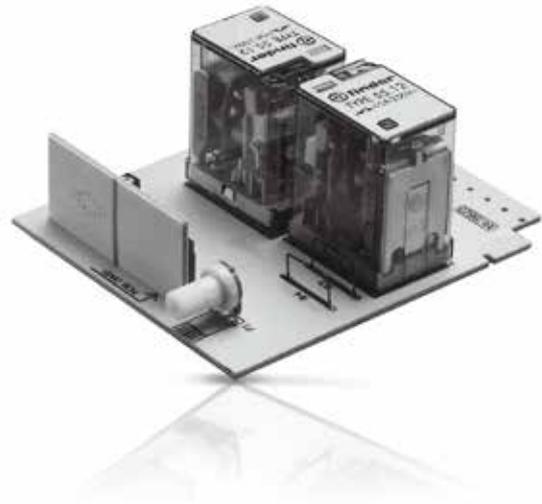

Features:

- CS16 is easily installed between the LINAK linear actuator and the power supply
- It may be used in connection with many types of signal sources such as the LINAK HB41 handset
- Control current: max. 100 mA
- Available with potentiometer (for current limit setting) ensuring that the CS16 cuts out the actuator in the end positions
- Possibility of parallel connection of CS16 units. With one handset push button it is possible to control several parallel connected CS16 units. The actuators will run simultaneously.
- LA28/LA28S/LA32 LINAK can deliver a built-in limit switch respectively CS28, CS28S and CS32
- CS28/CS28S/CS32 are connected between a LINAK actuator and the power supply and are mounted in the LA28/LA28S/LA32 motor housing; the actuator can thus be directly connected to a 24V power supply

- CS28/CS28S/CS32 trip out the current to the actuator in end position (or if an obstruction is encountered - overload)
- Control current to CS28/CS28S/CS32 is max. 100mA
- Supply voltage: it is important that the supply voltage 24 V DC connection is correct, otherwise the CS-circuit may be ruined

Options:

- Possible to mount the CS16 PCB inside an aluminium box (2 versions available) together with four different connection terminals

Current specifications:

Amp.	LA12	LA22	LA28	LA28S	LA30	LA30S	LA30/LA32	LA34		
								N	F	S
2*	24V		24V	24V						
4*	12V	24V								24V
5.5#				24V			24V			
9.0*		12V		12V	24V	24V		24V	24V	
14*										
20*					12V	12V		12V		


N = Normal LA34 motor; F = Fast motor; S = Small LA34 motor
 # = Cut-off current 5.5A ± 10% cannot be adjusted
 * = Cut-off current can be adjusted from the nominal value to:

2 Amp.:	1.3A to 2.7A
4 Amp.:	2.3A to 5.3A
9 Amp.:	5.0A to 10.0A
14 Amp.:	7.0A to 14.0A
20 Amp.:	12.5A to 25.5A


CS16

Ordering example:

CS16 04 24 0A

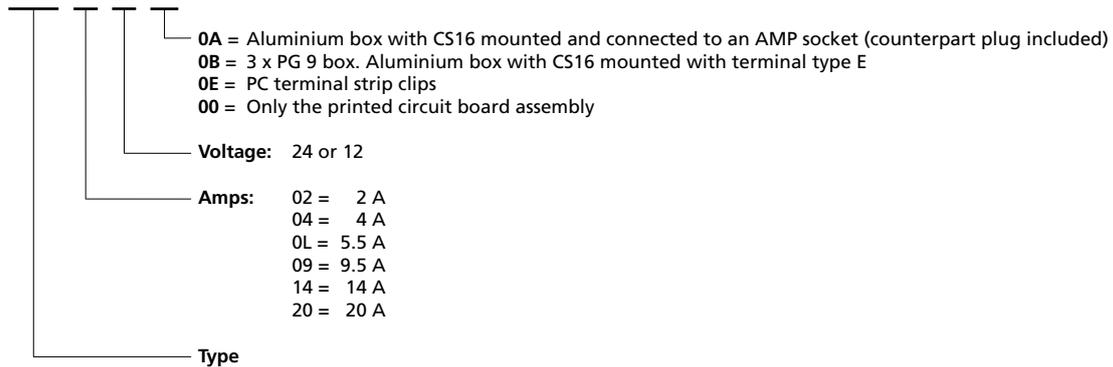

Connections:

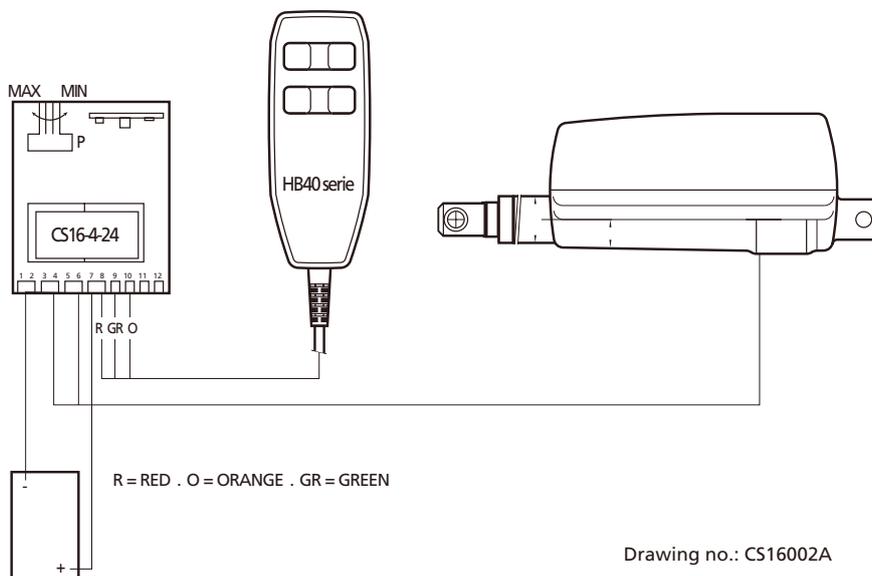


Adjustment of CS16:

The CS16 has a rotary potentiometer for adjusting the value of the cut-off current. To obtain the correct cut-off current, connect the CS16 and turn the potentiometer as far as it will go/clockwise (seen from the potentiometer) to set the maximum cut-off current. Load the actuator with the maximum load it will be exposed to in the application. At the same time turn the potentiometer anticlockwise, reducing the cut-off current, until the actuator stops (not in end position). Then turn the potentiometer approx. a quarter of a turn clockwise and the system is ready for use.


Drawing no.: CS16002A

Connection principle for controlling one CS16:

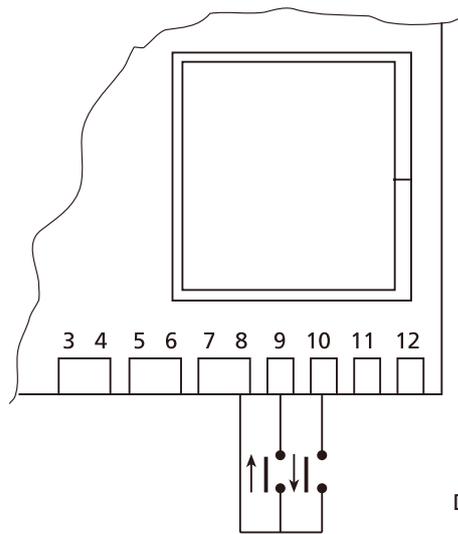


Drawing no.: CS16003A

Parallel connection for simultaneous operation:

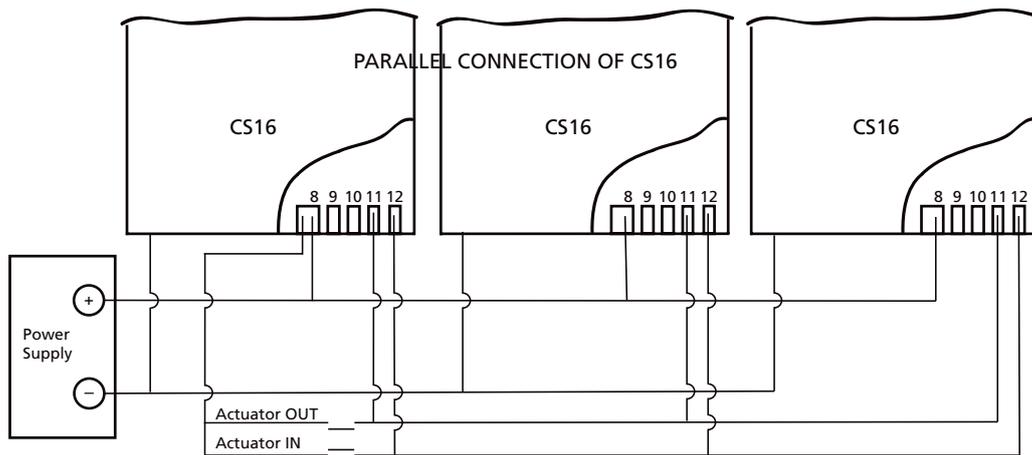


Drawing no.: CS16001A

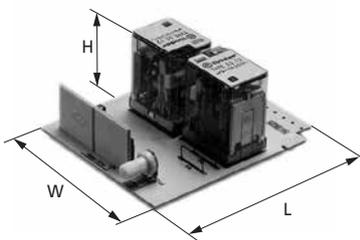

Type 0 H = 41; L = 87; W = 70




Type A H = 50; L = 131; W = 78
Type B H = 50; L = 133; W = 78

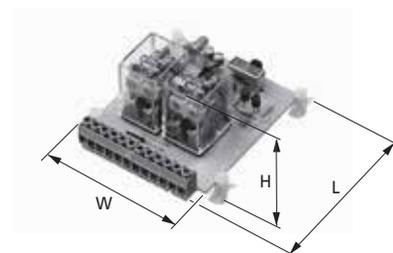

Type E H = 45 (strip clips); L = 87; W = 70

LA28C / LA32 CS:

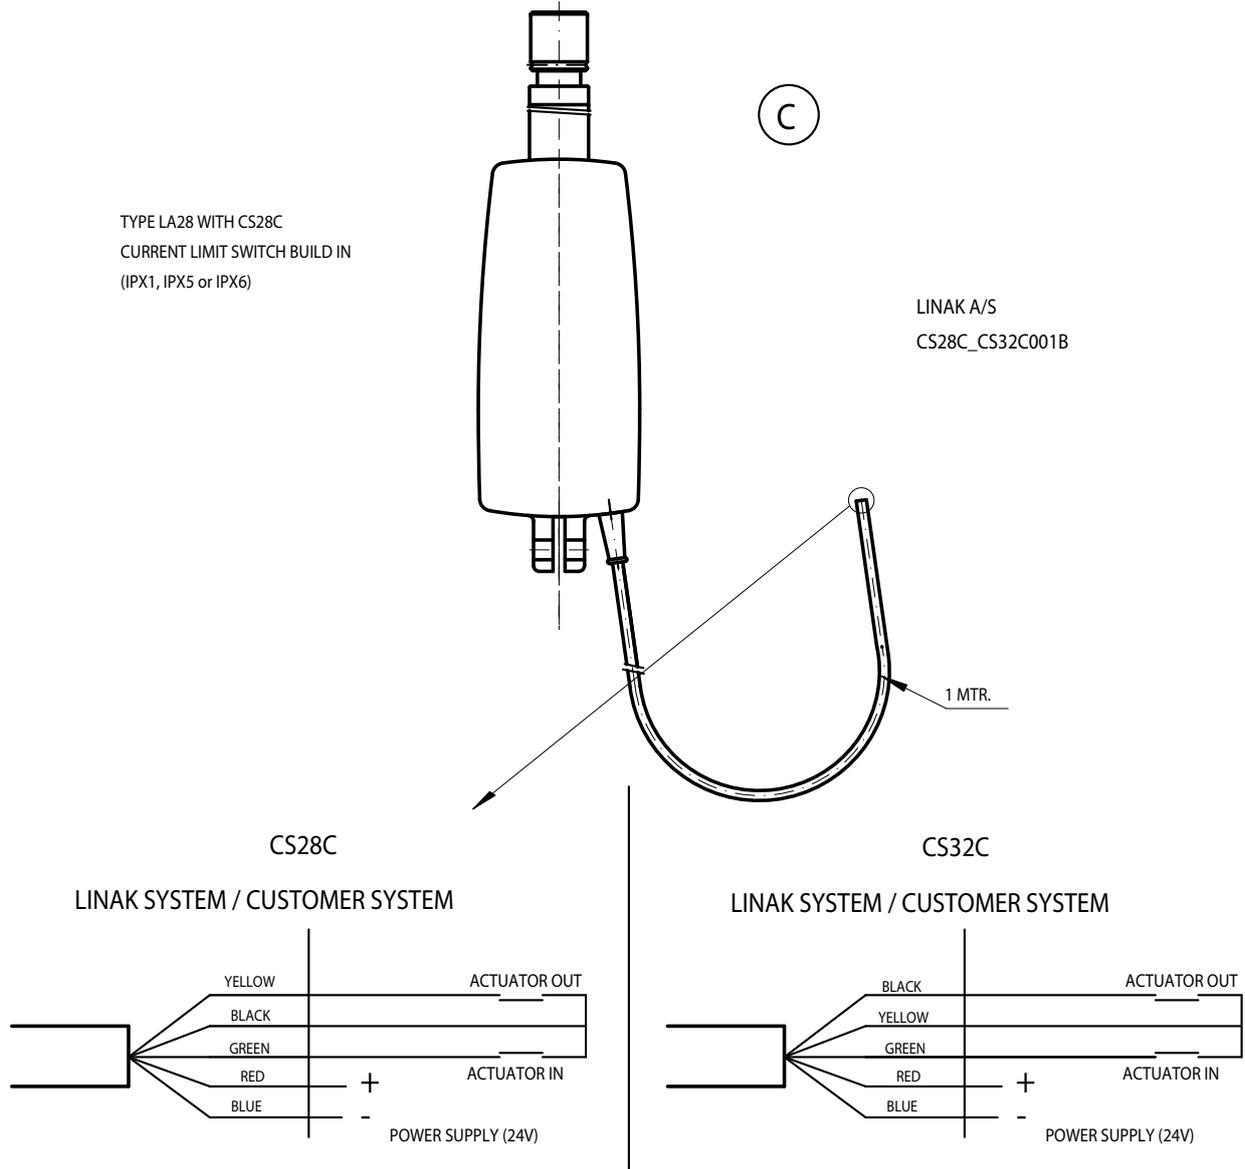

Following different types of built-in electronic limit switches are available:

- A: LA28/LA28S/LA32 with built-in **CS28A/CS28SA/CS32A** is standard IPX1 (can only be IPX1).
A female telephone plug is mounted on the motor housing for connection to LINAK handset type HB41-00-04 with coiled cable suitable with telephone plug (compare drawing).
- B: LA28/LA28S/LA32 with built-in **CS28B/CS28SB/CS32B** is standard IPX5, also if the actuator is ordered in IPX6.
For use together with LINAK HB-series with 8-pole DIN-plug (e.g. HB41-00-00 and HB41-00-01) (compare drawing).
The handset cable is always black.
- C: LA28/LA28S/LA32 with built-in **CS28C/CS28S/CS32C**: 5-core cable from the actuator has to be connected to power supply (2 wires) and control (3 wires). The IP degree for this type always follows the actuator.

Ordering example:

- CS28 A/B/C: For actuator type LA28
- CS28S A/B/C: For actuator type LA28S
- CS32 A/B/C: For actuator type LA32

Terms of use

The user is responsible for determining the suitability of LINAK products for specific application. LINAK takes great care in providing accurate and up-to-date information on its products.
However, due to continuous development in order to improve its products, LINAK products are subject to frequent modifications and changes without prior notice. Therefore, LINAK cannot guarantee the correct and actual status of said information on its products.
While LINAK uses its best efforts to fulfill orders, LINAK cannot, for the same reasons as mentioned above, guarantee the availability of any particular product. Therefore, LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or other written material drawn up by LINAK.
All sales are subject to the Standard Terms of Sale and Delivery for LINAK. For a copy hereof, please contact LINAK.