



DL8, DL9, DL10 and DL11 system  
with CBD6S  
**User manual**

# Contents

<b>Preface</b> .....	3
<b>Valid for</b> .....	4
<b>Important information</b> .....	5
<b>Safety instructions</b> .....	5
General .....	5
Before installation, reinstallation or troubleshooting .....	6
Before start-up .....	6
During operation .....	6
Misc. ....	6
Only for EU markets .....	7
Only for Non EU markets .....	7
Misuse .....	7
<b>Repairs</b> .....	8
<b>Manufacturer's declaration</b> .....	8
<b>Misc. on the DESKLINE® system</b> .....	9
Warranty .....	9
Maintenance .....	9
<b>ETL-markering</b> .....	10
<b>Description of the DESKLINE® system</b> .....	11
<b>Mounting guidelines for the DL8/DL9/DL10/DL11 (motor housing)</b> .....	12
<b>Mounting guidelines for the DL8/DL9/DL10/DL11 (foot part)</b> .....	13
<b>Mounting guidelines for the desk (misc.)</b> .....	14
<b>Mounting guidelines CBD6S (SMPS)</b> .....	16
<b>Electrical connection of the DL8/DL9/DL10/DL11 system</b> .....	17
<b>Initialisation of the DESKLINE DL8/DL9/DL10/DL11 parallel system</b> .....	18
<b>Anti-Collision™</b> .....	19
<b>DL9 and DL11 with PIEZO™: description of the feature</b> .....	20
<b>Disposal of LINAK's products</b> .....	21
<b>Main groups of disposal</b> .....	21
<b>Disposal of batteries</b> .....	21
<b>Labels</b> .....	22
<b>Drawing appendix</b> .....	23
<b>Declaration of conformity</b> .....	30
<b>Addresses</b> .....	32

# Preface

Dear User,

We are delighted that you have chosen a product from LINAK®.

LINAK systems are high-tech products based on many years of experience in the manufacture and development of actuators, electric control boxes, controls and chargers.

This User Manual does not address the end-user. It is intended as a source of information for the manufacturer of the equipment or system only, and it will tell you how to install, use and maintain your LINAK electronics. It is the responsibility of the manufacturer of the end-use product to provide a User Manual where relevant safety information from this manual is passed on to the end-user.

We are sure that your LINAK product will give you many years of problem-free operation.

Before our products leave the factory they undergo full function and quality testing. Should you nevertheless experience problems with your systems, you are always welcome to contact your local dealer.

LINAK subsidiaries and some distributors situated all over the world have authorised service centres, which are always ready to help you.

LINAK provides a warranty on all its products. This warranty, however, is subject to correct use in accordance with the specifications, maintenance being done correctly and any repairs being carried out at a service centre, which is authorised to repair LINAK products.

Changes in installation and use of LINAK systems can affect their operation and durability. The products are not to be opened by unauthorised personnel.

The User Manual has been written based on our present technical knowledge. We are constantly working on updating the information and we therefore reserve the right to carry out technical modifications.

**LINAK A/S**

## Valid for:

This User Manual is valid for the following products:

(See the first 3 - 5 characters on the label)

Columns: DL8, DL9, DL10 or DL11 (1 - 3 (4))

Control boxes: CBD6S 200W, CBD6S 300W

Controls: DP1U/DPF1M (if memory function is required)  
DP1C//DPT/DPF1C (if memory function and display is required) or  
DPA/DPB/DP1K/DP1V/DPF1K (if only up/down is required) or  
DPF1D (if display is required).

## Important information

Important information on LINAK® products can be found under the following headings:



### Warning!

Failure to comply with these instructions may result in accidents involving serious personal injury.



Failing to follow these instructions can result in the product being damaged or being destroyed.

---

## Safety instruction



### General

Safe use of the system is possible only when the operating instructions are read completely and the instructions contained are strictly observed.

Failure to comply with instructions marked with the "NOTE" symbol may result in serious damage to the system or one of its components.



It is important for everyone who is to connect, install, or use the systems to have the necessary information and access to this User Manual. Follow the instructions for mounting – risk of injury if these instructions are not followed.



The appliance is not intended for use by young children or infirm persons without supervision.



If there is visible damage on the product it must not be installed.



Note that during construction of applications, in which the actuator is to be fitted, there must be no possibility of personal injury, for example the squeezing of fingers or arms.



Assure free space for movement of application in both directions to avoid blockade.

## **Before installation, re-installation, or troubleshooting**

- Stop the DL8/DL9/DL10/DL11
- Switch off the power supply and pull out the mains plug.
- Relieve the DL8/DL9/DL10/DL11 of any loads, which may be released during the work.

## **Before start-up:**

- Make sure that the system has been installed as instructed in this User Manual.
- Make sure that the voltage of the control box is correct before the system is connected to the mains.
- System connection. The individual parts must be connected before the control box is connected to the mains. See the User Manual for LINAK actuators, if necessary.

## **During operation:**

- If the control box makes unusual noises or smells, switch off the mains voltage immediately.
- Ensure that the cables are not damaged.
- Unplug the mains cable on mobile equipment before it is moved.

## **Misc.**

The actuator system has a sound level below 55dB(A) in typical applications.

Updated manuals and declarations can always be found here:

*[www.linak.com/deskline](http://www.linak.com/deskline)*

### **Only for EU markets**



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

### **Only for Non EU markets**



Persons who do not have the necessary experience or knowledge of the product/products must not use the product/products. Besides, persons with reduced physical, sensory or mental abilities must not use the product/products, unless they are under surveillance or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.



Moreover, children must be under surveillance to ensure that they do not play with the product.



It is the operator's responsibility to ensure that there is free space for the application to move without risk for the operator or bystanders before operating the application.

### **Misuse**



Do not overload the actuators – this can cause danger of personal injury and damage to the system.



Do not use the actuator system for lifting persons. Do not sit or stand on a table while operating – risk of personal injury.



Do not use the system in environments other than the intended indoor use

## Repairs

In order to avoid the risk of malfunction, all DESKLINE® repairs must only be carried out by authorised LINAK workshops or repairers, as special tools must be used and special gaskets must be fitted. Lifting units under warranty must also be returned to authorised LINAK workshops.



### Warning!

If any of the DESKLINE® products are opened, there will be a risk of subsequent malfunction.



### Warning!

The DESKLINE® systems do not withstand cutting oil.

---

## DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY

**LINAK A/S**  
Smedevænget 8  
DK - 6430 Nordborg

Herewith declares that LINAK DESKLINE® products as characterized by the following models and types:

Control Boxes            CBD4, CBD5, CBD6, CBD6S

And

Linear Actuators        LA31, DB4, DB5, DB6, DB7, DB9, DB12, DB14, DB16, LA23

Lifting Columns        DL1A, DL2, DL4, DL5, DL6, DL7, DL8, DL9, DL10, DL11, DL12, DL14, DL15,  
DL16, DL17, LP2, LP3, BASE1

And

Desk Panels            DP, DPA, DPB, DPH, DPF, DPT, DP1C, DP1K, DP1L, DP1V, DP1U, WDPL1

RF Controls            HB10, HB20, RFR and RFT

And

Accessories            SLS

comply with the following parts of the Machinery Directive 2006/42/EC, ANNEX I, *Essential health and safety requirements relating to the design and construction of machinery*.

### 1.5.1 Electricity supply

The relevant technical documentation is compiled in accordance with part B of Annex VII and that this documentation or part hereof will be transmitted by post or electronically to a reasoned request by the national authorities.

**This partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC where appropriate.**

Nordborg, 2014-04-10

**LINAK A/S**  
John Kling, B.Sc.E.E.  
Certification and Regulatory Affairs  
Authorized to compile the relevant technical documentation

## Misc. on the DESKLINE® DL8/DL9/DL10/DL11 system

### Warranty - 60 months on DESKLINE® (NEW)

This will be valid for all DESKLINE® products produced after the 1<sup>st</sup> of May 2015.

Products produced before 1<sup>st</sup> of May 2015 will still be covered by 36 months.

Products used in DESKLINE application: If these products are used in another application, they will be covered by 18 months warranty.

If there is any doubt that returned products are within the warranty period it is to be treated as if they are covered by the warranty. We recommend that you use the date of the Control box or actuator as reference if possible. We will have our purchase no. printed on the label.

### Maintenance

Clean dust and dirt on the outside of the system at appropriate intervals and inspect them for damage and breaks. Inspect the connections, cables, and plugs and check for correct functioning as well as fixing points.

### Service of double-insulated products:



#### Class II

A Class II or **double insulated** electrical appliance is one which has been designed in such a way that it does not require a safety connection to electrical earth (US: ground).

The basic requirement is that no single failure can result in dangerous voltage becoming exposed so that it might cause an electric shock and that this is achieved without relying on an earthed metal casing. This is usually achieved at least in part by having two layers of insulating material surrounding live parts or by using reinforced insulation.

There is no earthing/grounding means provided on the product, and no earthing/grounding means is to be added to the product.

In Europe, a double insulated appliance must be labelled "Class II", "double insulated" or bear the double insulation symbol (a square inside another square).

Servicing a double-insulated product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace.



**The cleaners and disinfectants must not be highly alkaline or acidic (pH value 6-8).**

# ETL-marking

Due to space limitations, the complete ETL-marking demands are not represented on the marking plates.  
The full ETL Recognized Component markings are shown here.



C/N 120690  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States



C/N 9901916  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States



C/N 4008003  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States



C/N 4008004  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States



C/N 4008005  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States



C/N 4008671  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States



C/N 4009507  
Conforms to UL962  
Cert. to CSA Std. C22.2 No. 68-09  
ETL Recognized Component mark for Canada and United States

## Description of the DESKLINE® system

Each DESKLINE® actuator/column is equipped with a motor and parallel/memory drive is ensured by means of software in the CBD6S that also takes account of an uneven load on the desk. Soft start and stop are also part of this software, which ensures a soft start and stop when adjusting the desk.

### Application of the DESKLINE® system:

Irrespective of the load the **duty cycle 10% ~ 6 min./ hour or max. 2 min. at continuous use** stated in the data sheets, must **NOT** be exceeded as this will result in an overheating of the motor and control box. Exceeding the duty cycle will result in a dramatic reduction of the life of the system.


The system range contains the following products:

- 1 control box CBD6S 200W or CBD6S 300W (SMPS - Switch Mode Power Supply)
- DL8, DL9, DL10 or DL11 (1 - 3 (4))
- 1 exchangeable mains cable
- motor cables (1 - 3 (4))
- 1 DP1U/DPF1M (if memory function is required) DP1C//DPT/DPF1C (if memory function and display is required) or 1 DPA/DPB/DP1K/DP1V/DPF1K (if only up/down is required) or DPF1D (if display is required).


## Mounting guidelines for the DL8/DL9/DL10/DL11 system

### Mounting guidelines for DL8/DL9/DL10/DL11 (motor housing)

The motor housing is supplied with 6 M6 threaded holes meant for mounting onto the desk frame. We advise you to fasten the desk frame by means of 6 pcs. M6 screws of a good quality (min. 8.8) and a suitable length, which must not go further into the motor housing than max.10 mm. The thrust moment must not exceed 7.5 Nm.

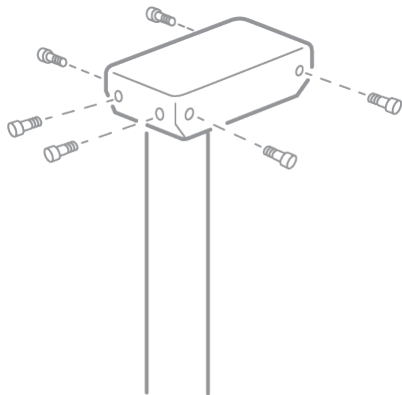

Use all 6 threaded mounting holes M6 for screws.  
Thrust moment is 7.5Nm

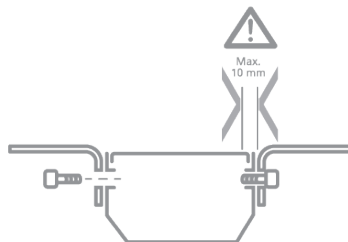

DL motor housing: be aware of the screw length.



It is recommended to use all six M6 threaded holes to mount the desk frame. The values of the bending moments of the lifting units are only valid if the desk frame is mounted in this way. Tests with fixing the motor housing only by means of the 4 threaded holes have proved that this is not enough to obtain a sufficient torsional stability of the desk.



The column may not be twisted. If the column is twisting / rotated it may cause a failure. The maximum moment that the column can adapt in the rotation direction is 200 Nm.


## Mounting guidelines for the DL8 and DL9 (foot part)

The DL8/DL9 is supplied with 4 M6 threaded holes for the mounting of the foot.

We advise you to fasten the foot by means of 4 pcs. M6 screws of a good quality (min. 8.8) and of a suitable length, which must not go further into the DL8/DL9 column than 20 mm.

The thrust moment must not exceed 10 Nm in the bottom plate thread. The 4 holes in the bottom of the DL8/DL9 are placed on a  $\varnothing 42$  mm diameter circle.

The holes in the foot must be sufficiently larger than  $\varnothing 6$  so that it is possible to bring the foot to a level line at assembly/mounting.

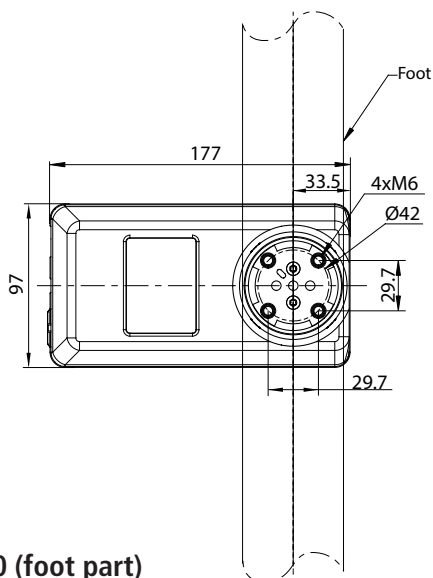


## Mounting guidelines for the DL10 (foot part)

The DL10 is supplied with 4 M6 threaded holes for the mounting of the foot.

We advise you to fasten the foot by means of 4 pcs. M6 screws of a good quality (min. 8.8) and of a suitable length, which must not go further into the DL10 column than 20 mm.


The thrust moment must not exceed 10 Nm in the bottom plate thread. The 4 holes in the bottom of the DL10 are placed on a  $\varnothing 46$  mm diameter circle.

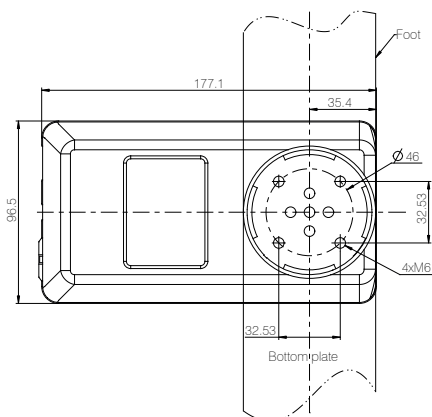

# Mounting guidelines for the DL11 (foot part)

The DL11 is supplied with 4 M6 and 2 M8 threaded holes for mounting of the foot. We advise you to fasten the foot by means of 4 pcs. M6 screws or 2 pcs M8 screws of a good quality (min. 8.8) and of a suitable length. The holes in the foot ought to be sufficiently larger than  $\varnothing 6$  so that it is possible to bring the foot to a level line at assembly/mounting.

The 4 M6 holes in the bottom of the column are placed on an  $\varnothing 46$ mm pitch circle. The 2 M8 holes have their center 25 mm from the center of the column.

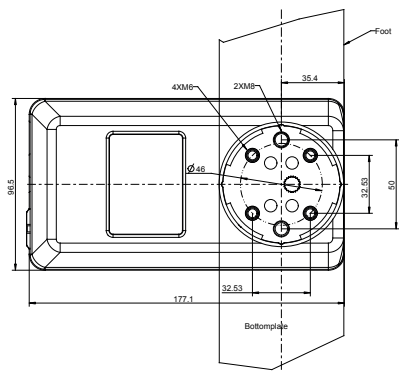


## Mounting of the foot part of standard DL11


M6 screws must not go further than 20mm into the DL11 column. M8 screws must go min. 9 mm and not further than 11 mm into the column. The thrust moment must not exceed 10Nm in the bottom plate thread.

## Mounting of the foot part of standard DL11 with PIEZO™

M6 screws must not go further than 16mm into the DL11 column. M8 screws must go min. 9 mm and not further than 11 mm into the column. The thrust moment must not exceed 10Nm in the bottom plate thread.

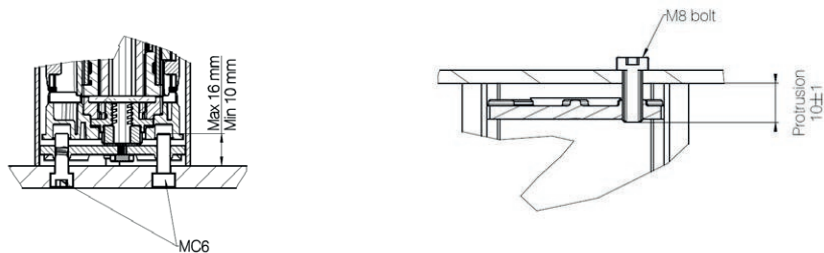


## Mounting of the desk (misc.)

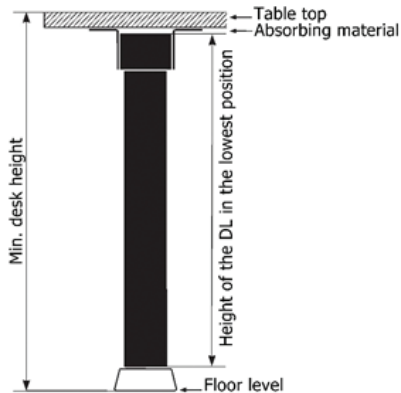

As the desktop amplifies the sound, we advise you to place a vibration/ shock absorbing material between the desktop and the desk frame.

With a desktop thickness of 25 mm, it is necessary for the lowest edge of the lifting unit to be mounted max. 15 mm above floor level to obtain a desk height of only 600 mm in the lowest position. If e.g. 2 mm vibration absorbing material is placed between the desktop and the desk frame the lifting unit must be mounted max. 13 mm above floor level.

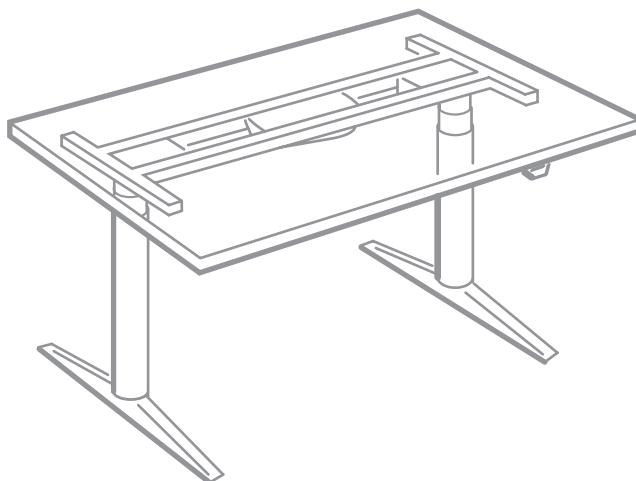

Example of how to mount a 2 parallel DESKLINE® DL8/DL9/DL10/DL11 system

Placement of a monitor directly above the motor housing may cause malfunction of the monitor. Magnets inside the motor may interrupt the picture on the monitor depending on the distance and type of monitor. If this is the case, the problem may be solved by placing an iron plate/tube or another magnetic material, somewhat larger than the motor housing, between the motor and the desktop.



LINAK recommends that the DESKLINE® DL8/DL9/DL10/DL11 system should only be used in push applications with the motor housing uppermost.



Placement of a monitor directly above the motor may cause malfunction of the monitor. Magnets inside the motor may interrupt the picture on the monitor depending on the distance and type of monitor. If this is the case the problem may be solved by placing an iron plate/tube or another magnetic material, somewhat larger than the profile between the motor and the tabletop.



The mounting screws on the DP, DPA or DPB must be fastened with a max. torque of 1 Nm.

## Mounting guidelines CBD6S (SMPS)

The control box is to be fastened with 1 - 2 screws with a head diameter between  $\varnothing 8$  and  $\varnothing 10$  mm. Out of regard for the tension surface  $\varnothing 10$  mm is preferable due to lower surface tension. See drawing appendix for placing of mounting holes and the space the CBD takes up.




CBD6S 200W and CBD6S 300W

The CBD must not be packed in heat insulating material, but must be placed so that it can emit waste heat into the surroundings. There are no ventilation holes to consider, the CBD emits heat through the surface. The plug must be visible when the CBD is mounted so that the supply to the CBD can be disconnected at replacement, if any. The mounting screws on the control box must be fastened with a max. torque of 1 Nm. The mounting surface to which the control box is attached should have a surface evenness of better than  $\pm 0.5$  mm.

### Bottom with cable grooves

The bottom of CBD6S (SMPS) is equipped with two cable grooves improving the cable management when mounting. The grooves can be used to bypass the CBD for both motorcables and the mains cable (EU version only) from one side to the other, giving a cleaner design.

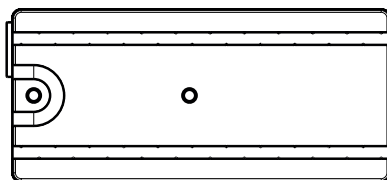

Remember to lead the cables through the grooves before mounting the control box.

**For mounting and operation of the desk panel, please see the separate user manual for desk panels.**

# Electrical connection of the DL8/DL9/DL10/DL11 system

The systems is to be connected as shown on figure 1. Each DL8/DL9/DL10/DL11 is to be connected to the sockets on the control box by means of the motor cables, which have a 6-pin plug in each end.



Finally the mains cable is to be mounted and power switched on. Please note that the control box must only be connected to the voltage stated on the label.

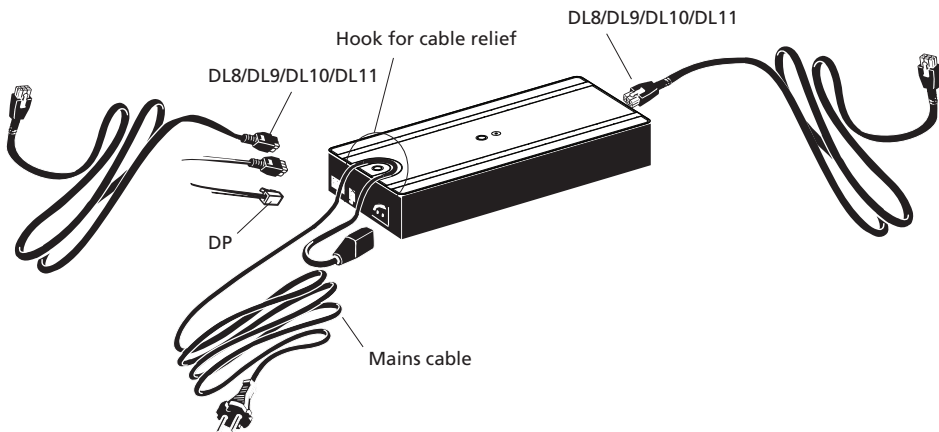


Figure 1

## Initialisation of the DESKLINE DL8/DL9/DL10/DL11 parallel system


Press the down button and the legs/actuators run down to the “buffer” causing cut-off due to excess current. Hereafter they run approx. 3 mm (from software version 1.66, previously 5 mm) upwards and thereby free of the “buffer”. When the movement stops, the system is initialised. During the entire initialisation procedure, the down button must be pressed down.



If the button is released before the sequence is completed then the initialisation is interrupted and must be started again from the beginning.

It is sometimes necessary to press the down button twice to start the initialisation. This is because the system can be in different modes when the initialisation starts. There will be a 1.25 sec. delay. If an error situation occurs at the end stop positions or the DL8/DL9/DL10/DL11 are changed to another stroke length, then the CBD6S has to be initialised again.

The first two times the system runs into the outward end stop, it will automatically run approx. 3 mm back in inward direction.

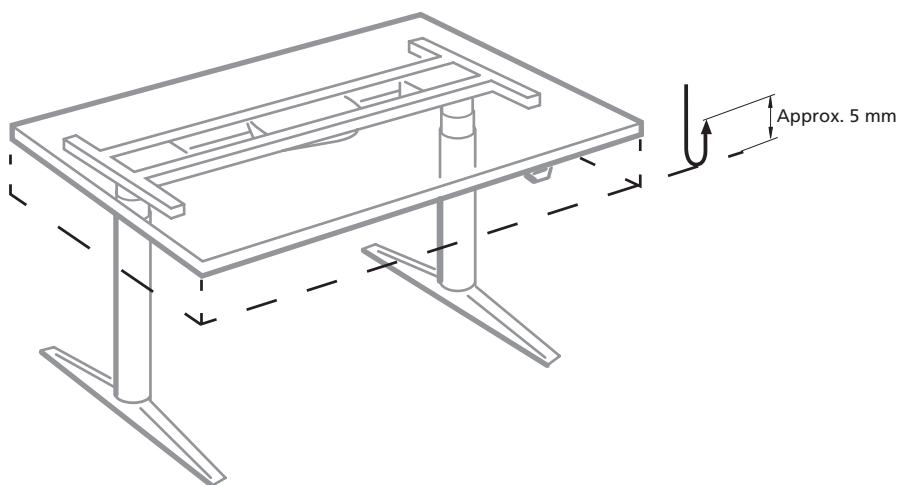

## Anti-Collision™

The function (anti-collision) is an option for the standard CBD6S (SMPS) control box. A system with anti-collision can limit material damages on a desk if a collision with a solid object should occur.

### Enabling the anti-collision

To enable the anti-collision function a little plug called a dongle must be mounted in one of the 2 control ports. The function is only active when the dongle is mounted. – If you remove the dongle again you disable the function.

### Method of operation

When the DL's are running the CBD6S (SMPS) monitors the current consumption on each channel using a special algorithm. If the current consumption on one channel is increased more than a predefined slope, a collision is assumed and all channels are stopped immediately and all DL's will start to run in the opposite direction (approx. 50 mm). This return drive is done automatically and continues with or without any control key pressed (for max. 2.5 sec.).

The anti-collision sensitivity is different in upward and downward direction. Upwards the force is approx. 20 kg. Downwards the load will be approx. 40 kg + the load on the DL (the desk + what is on top of the desk). The 40 kg are needed to activate the anti-collision function.

### Situations where the anti-collision does not work

There are situations where the anti-collision will not be activated. These situations are:

- If the collision happens during the initialisation phase
- If the collision happens within the first 1000 msec or after the control button has been released
- If the collision happens between the floor and the table and the load on the desk + the weight of the legs are lower than 40 kg
- If the collision happens over too long time, e.g. if the collision is with a soft object.

## DL9 and DL11 with PIEZO™: description of the feature

For optimised safety against squeezing and blocking on a desk, LINAK has developed a DL9 and DL11 columns with integrated sensor, called PIEZO. The option minimises the risk for damages on a desk caused by squeezing or blocking of obstacles in up and down direction. Examples could be driving down into an office chair or into a container or up into a windowsill. To a certain extent, the system also increases the personal safety, but it does not comply with legislation describing personal safety.

PIEZO allows the DL9 and DL11 columns to have the standard built-in dimension and the standard stroke length. There are no visible changes to the column.



Do not use the DL9 and DL11 with PIEZO in combination with a crossbar or a foot construction where you place the column in a tube welded on the foot.



Examples where PIEZO avoids squeezing situations.

# Disposal of LINAK's products

As LINAK's customers often ask us how our products can be disposed of or scrapped we have prepared this guidance that enables a classification to different waste fractions for recycling or combustion.

## Guidance

We recommend that our products be disassembled as much as possible and divided into different waste groups for recycling or combustion.

For example, waste can be sorted into metals, plastics, cable scrap, combustible material, and recoverable resources.

Some of these main groups can be further divided into subgroups; e.g. metal can be divided into steel/aluminium/copper and plastic can be divided into ABS/PA/PE/PP.

As an example, the table below breaks down the different components in LINAK products to various recycling groups:

Product	Components	Recycling group
Columns/ Actuator :	Spindle and motor Plastic housing Cable PCB boards	Scrap Plastic recycling or combustion Cable scrap or combustion Electronics scrap
Control Box :	PCB boards Plastic housing Cable Transformer	Electronics scrap Plastic recycling or combustion Cable scrap or combustion Metal scrap
Handset/Control :	Plastic housing Cable PCB board	Plastic recycling or combustion Cable scrap or combustion Electronics scrap

By now almost all our casted plastic parts are supplied with an interior code for plastic type and fibre contents, if any.

## Main groups of disposal

Product main groups	Metal scrap	Cable scrap	Electronics scrap	Plastic recycling or combustin	Comments
DLX	x	x	x	x	
CBD6S (SMPS)	x	x	x	x	
DPXX		x	x	x	
WDPL		x	x	x	

## Disposal of batteries

Details regarding safe disposal of used and leaking batteries:

Batteries should be disposed in accordance with appropriate federal, state and local regulations. LINAK recommends that used or leaking batteries are disposed through local recycling system. Please do not throw used or leaking batteries in normal household waste or in nature. This will cause damage to the enviroment.

### How to deal with leaking batteries.

Leaking batteries should be disposed as described above.



If leaking batteries are discovered in the product the batteries must be removed at once to minimise damage to the product. If leaking batteries are left in the product it might become defect.

It is recommended to use plastic gloves when handling leaking batteries. The contents of a leaking batteries can cause chemical burns and respiratory irritation.



If exposed to the contents of a leaking battery, please wash with soap and water. If irritation persists, please seek medical attention. In case of eye contact, please flush eyes thoroughly with water for 15 minutes and seek medical attention."

# Labels

Labels for DL8 and DL9

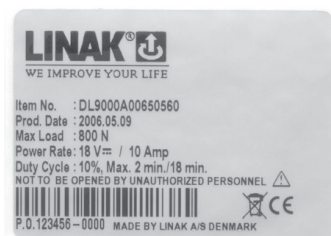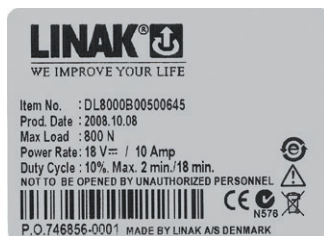

Labels for DL10 and DL11

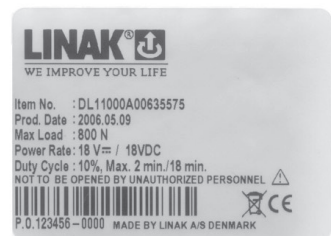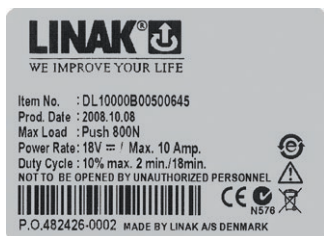

Label for CBD6S 200W (SMPS)




Label for CBD6S 300W (SMPS)  
up to 4 channels




DRAWING APPENDIX


DL8

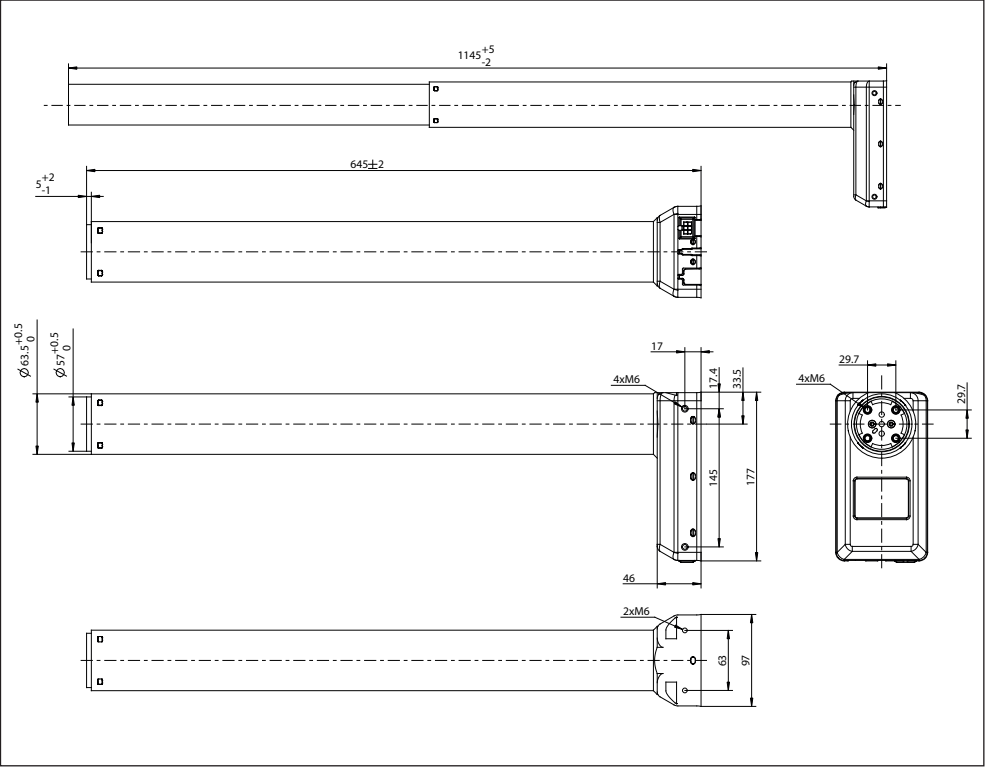



Standard DL9

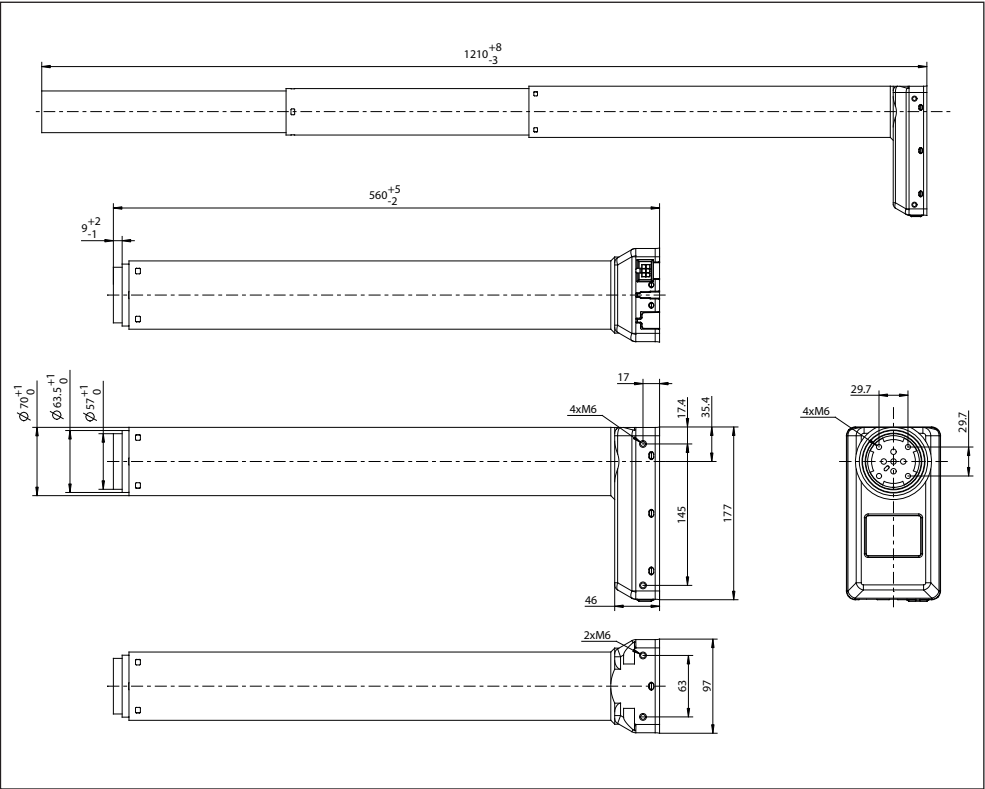


Extended version DL9XL

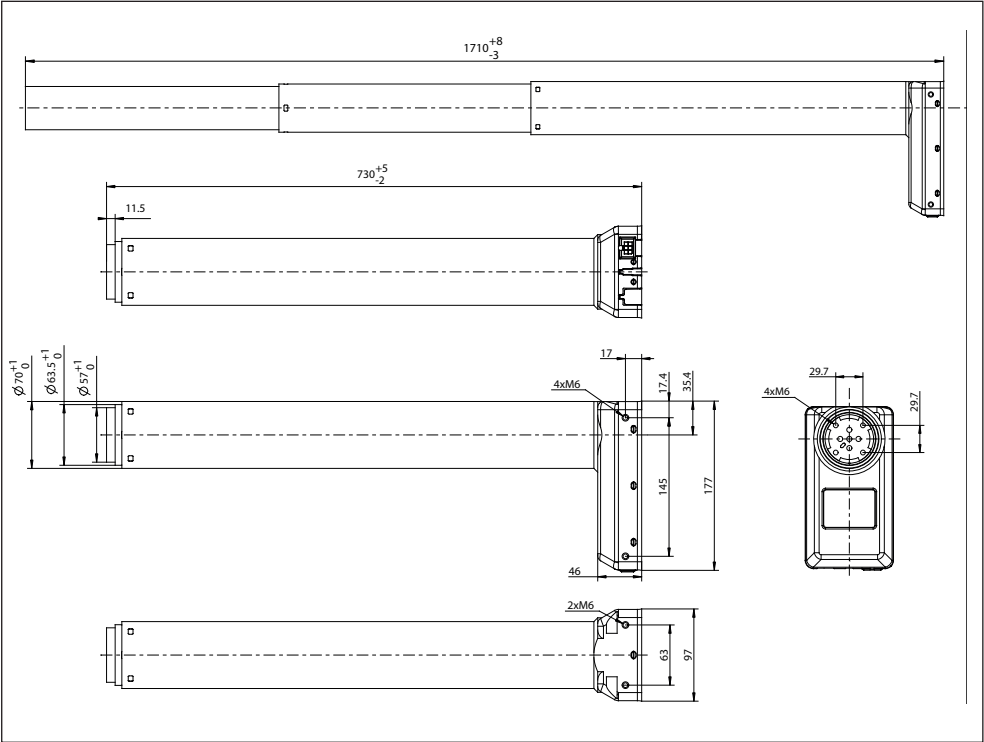


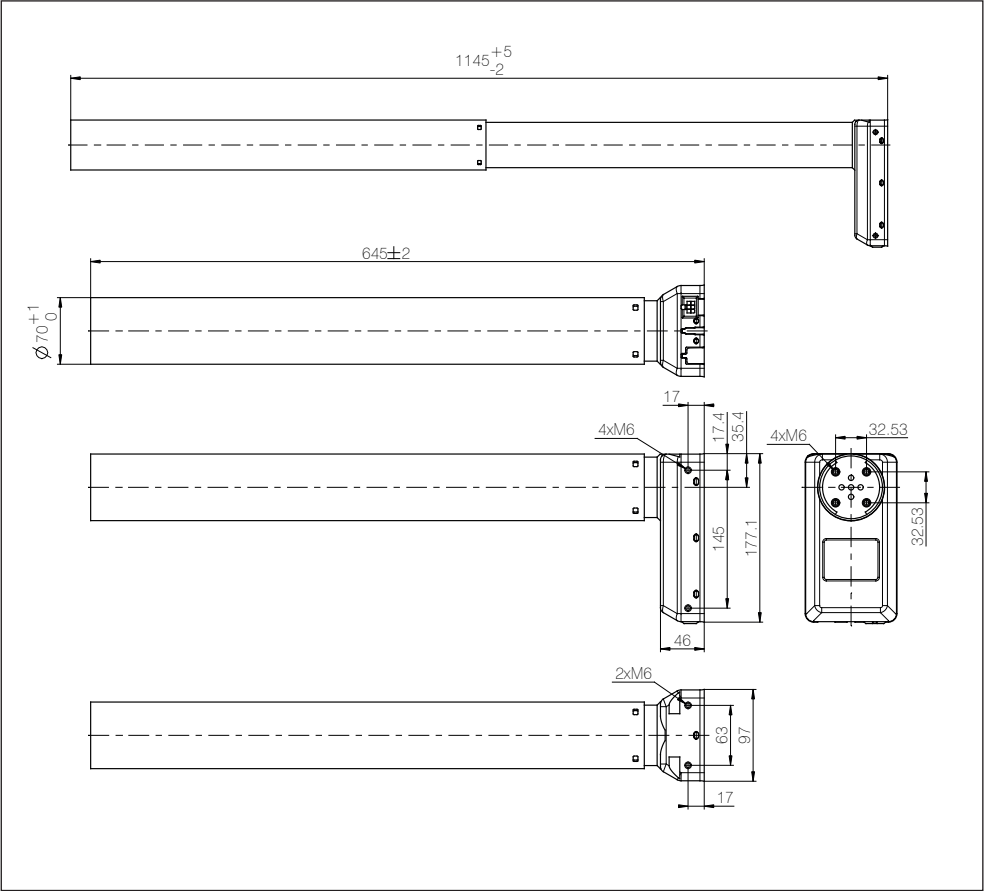

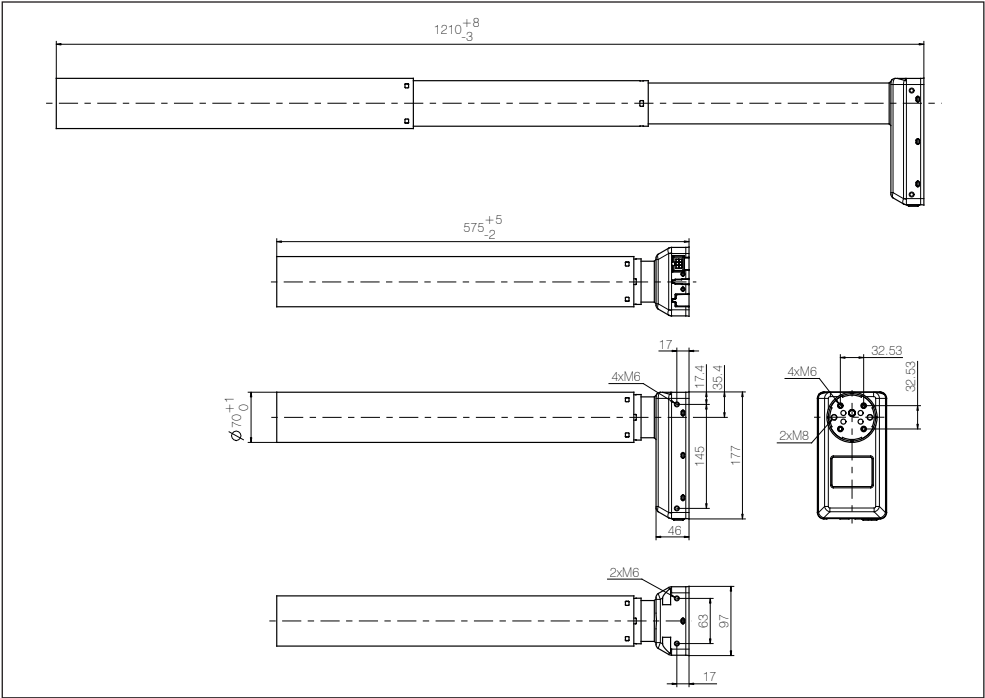



DL11 PIEZO™

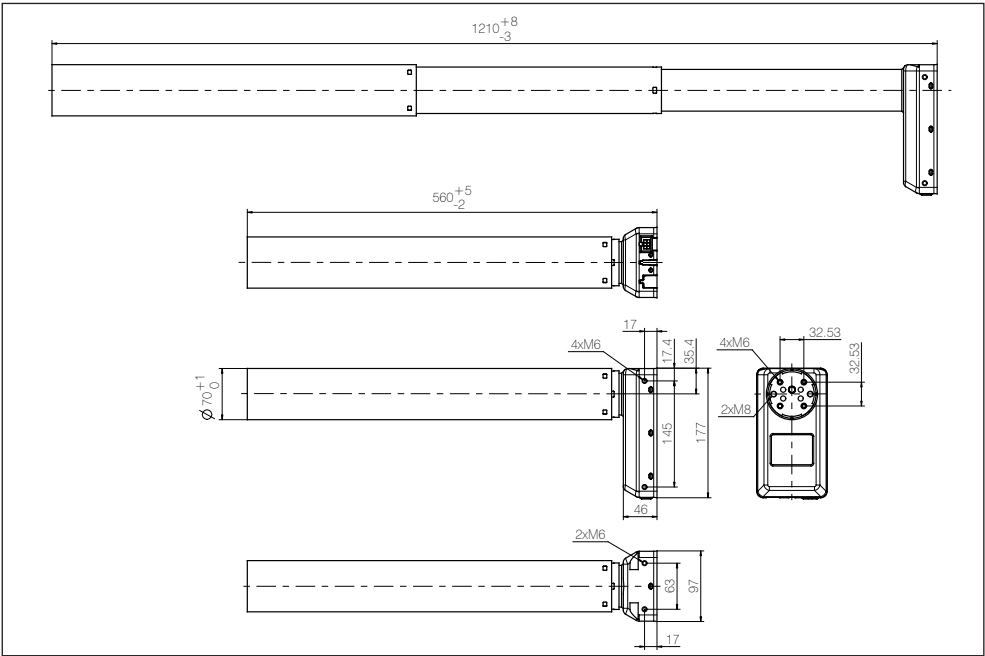

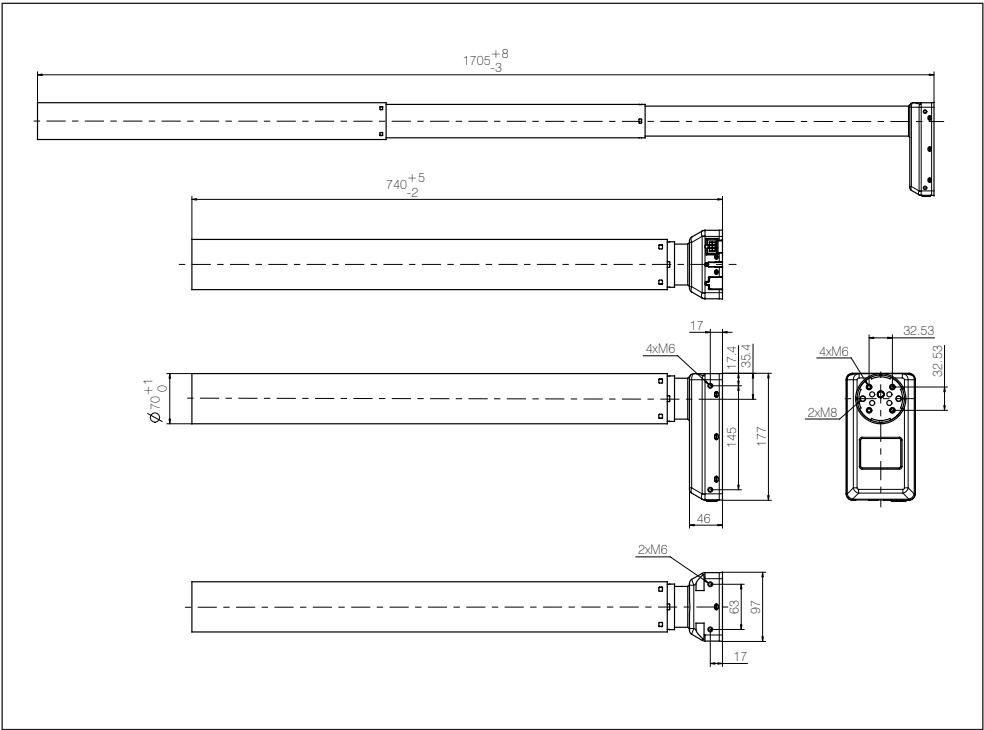

CBD6S 200W (SMPS)

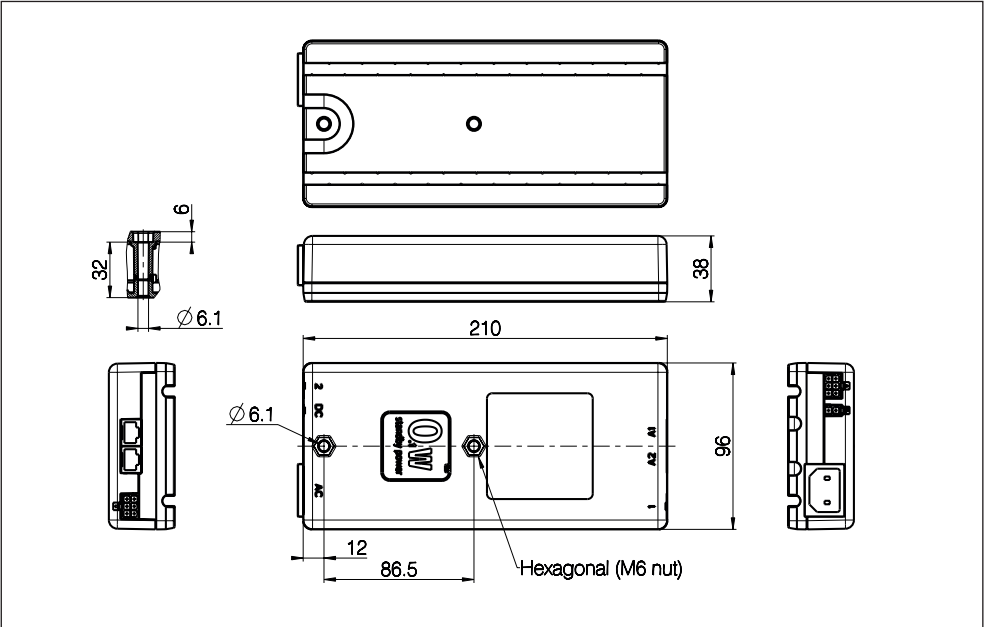

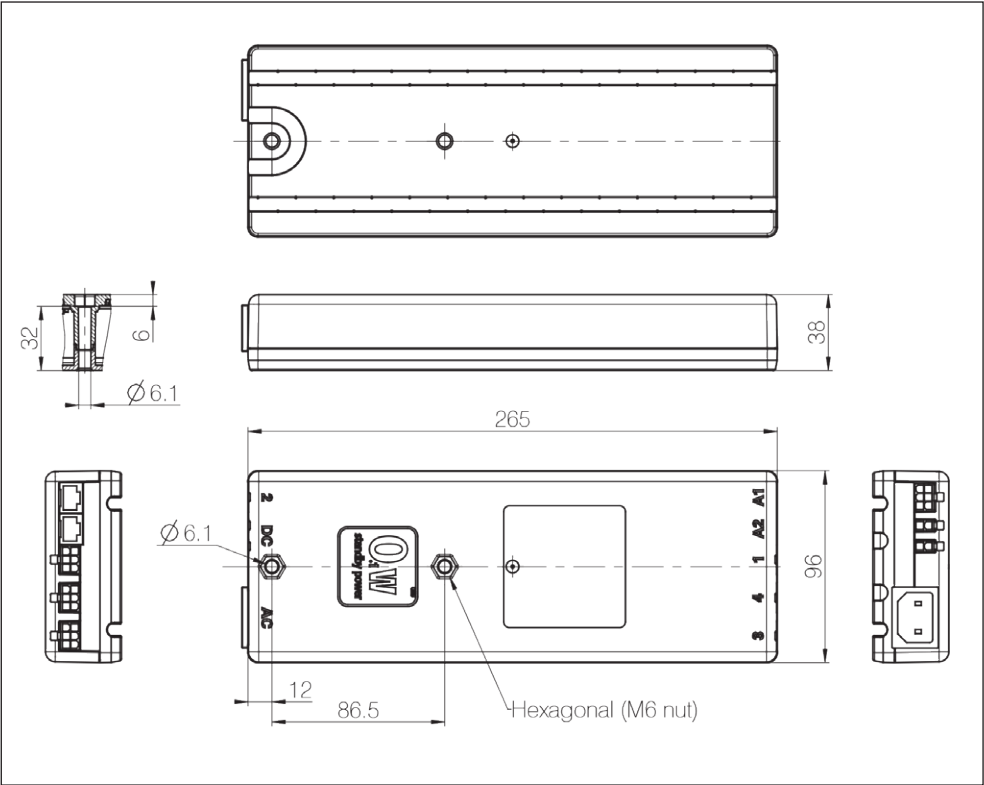

**LINAK APPLICATION POLICY**

The purpose of the application policy is to define areas of responsibilities in relation to applying a LINAK product defined as hardware, software, technical advice, etc. related to an existing or a new customer application.

LINAK products as defined above are applicable for a wide range of applications within the Medical, Furniture, Desk and Industry areas. Yet, LINAK cannot know all the conditions under which LINAK products will be installed, used, and operated, as each individual application is unique.

The suitability and functionality of the LINAK product and its performance under varying conditions (application, vibration, load, humidity, temperature, frequency, etc.) can only be verified by testing, and shall ultimately be the responsibility of the LINAK customer using any LINAK product.

LINAK shall be responsible solely that LINAK products comply with the specifications set out by LINAK and it shall be the responsibility of the LINAK customer to ensure that the specific LINAK product can be used for the application in question.

# DECLARATION OF CONFORMITY

LINAK A/S  
Smedevænget 8  
DK - 6430 Nordborg

hereby declares that LINAK Actuator System composed of:

Control Box(s)                      CBD6S

And

Linear Actuator(s)                31xxH-xxxx50S, DB4, DB5, DB6, DB7, DB9, DB12, DB14, DB16, LA23                and / or

Lifting Column(s)    DL1A, DL2, DL4, DL5, DL6, DL7, DL8, DL9, DL10, DL11, DL12, DL14, DL15, DL16, DL17, BASE1

And

Desk Panel(s)                      DP1C, DP1K, DP1L, DP1V, DP1U, DPA, DPB, DPF, DPH, DPT, WDPL1                and / or

Handset(s)                          RFT000, RFRL00x, HB1xRF3000, HB2xRFx000

complies with EMC Directive: 2004/108/EC according to following standards:  
EN 61000-6-1:2007, EN 61000-6-3:2007, EN 55014-1:2007+A1+A2, EN 55022:2011 Class B,

complies with Low Voltage Directive 2006/95/EC according to the standard:  
EN 60335-1:2012

complies with Machinery Directive 2006/42/EC according to the standard:  
EN 13849-1:2008 SRP/CS Cat. B, PL = b and SRESW PL = b

complies with RoHS2 Directive 2011/65/EU according to the standard:  
EN 55581:2012

and

RF Controls:	RF-transmitter: HB1xRF3000	and/or
	RF-transmitter: HB2xRFx000	and/or
	RF-receiver: RFT000, RFRL	

complies with the Radio equipment and Telecommunications terminal equipment Directive 1999/5/EC:  
EN 300220-2:2007, EN 61000-6-1:2007, EN 61000-6-3:2007,  
EN 60335-1:2012, EN 62311:2008

Nordborg, 2014-04-09



**LINAK A/S**  
John Kling, B.Sc.E.E.  
Certification and Regulatory Affairs  
Authorized to compile the relevant technical documentation

Original Declaration

## FACTORIES

### China

LINAK (Shenzhen) Actuator Systems, Ltd.  
Phone: +86 755 8610 6656  
Phone: +86 755 8610 6990  
E-mail: sales@linak.cn  
www.linak.cn

### Denmark - Headquarters

#### LINAK A/S - Group Headquarters

Phone: +45 73 15 15 15  
Fax: +45 74 45 80 48  
Fax (Sales): +45 73 15 16 13  
E-mail: info@linak.com  
www.linak.com

### USA

#### LINAK U.S. Inc.

North and South American Headquarters  
Phone: +1 502 253 5595  
Fax: +1 502 253 5596  
E-mail: info@linak-us.com  
www.linak-us.com

## SUBSIDIARIES

### Australia

LINAK Australia Pty. Ltd.  
Phone: +61 3 8796 9777  
Fax: +61 3 8796 9778  
E-mail: sales@linak.com.au  
www.linak.com.au

### Austria

LINAK Repräsentanz - Österreich (Wien)  
Phone: +43 (1) 890 7446  
Fax: +43 (1) 890 744615  
E-mail: info@linak.de  
www.linak.at

### Belgium

LINAK Actuator-Systems NV/SA  
(Belgium & Luxembourg)  
Phone: +32 (0)9 230 01 09  
Fax: +32 (0)9 230 88 80  
E-mail: beinfo@linak.be  
www.linak.be - www.fr.linak.be

### Brazil

LINAK DO BRASIL COMÉRCIO DE  
ATUADORES LTDA.  
Phone: +55 (11) 2832 - 7070  
Fax: +55 (11) 2832 - 7060  
E-mail: info@linak.com.br  
www.linak.com.br

### Canada

LINAK Canada Inc.  
Phone: +1 502 253 5595  
Fax: +1 416-255-7720  
E-mail: info@linak.ca  
www.linak-us.com

### Czech Republic

LINAK C&S S.R.O.  
Phone: +420581741814  
Fax: +420581702452  
E-mail: info@linak.cz  
www.linak.cz

### Denmark - International

LINAK International  
Phone: +45 73 15 15 15  
E-mail: info@linak.com  
www.linak.com

### Denmark - Sales

LINAK DANMARK A/S  
Phone: +45 86 80 36 11  
Fax: +45 86 82 90 51  
E-mail: linak@linak-silkeborg.dk  
www.linak.dk

### Finland

LINAK OY  
Phone: +358 10 841 8700  
E-mail: linak@linak.fi  
www.linak.fi

### France

LINAK FRANCE E.U.R.L  
Phone: +33 (0) 2 41 36 34 34  
Fax: +33 (0) 2 41 36 35 00  
E-mail: linak@linak.fr  
www.linak.fr

### Germany

LINAK GmbH  
Phone: +49 6043 9655 0  
Fax: +49 6043 9655 60  
E-mail: info@linak.de  
www.linak.de

### India

LINAK A/S India Liaison Office  
Phone: +91 120 4531797  
Fax: +91 120 4786428  
E-mail: info@linak.in  
www.linak.in

### Ireland

LINAK UK Limited (Ireland)  
Phone: +44 (0)121 544 2211  
Fax: +44 (0)121 544 2552  
+44 (0)796 855 1606 (UK Mobile)  
+35 387 634 6554 (Republic Of  
Ireland Mobile)

E-mail: sales@linak.co.uk  
www.linak.ie

### Italy

LINAK ITALIA S.r.l.  
Phone: +39 02 48 46 33 66  
Fax: +39 02 48 46 82 52  
E-mail: info@linak.it  
www.linak.it

### Japan

LINAK K.K.  
Phone: 81-45-533-0802  
Fax: 81-45-533-0803  
E-mail: linak@linak.jp  
www.linak.jp

### Malaysia

LINAK Actuators Sdn. Bhd.  
Phone: +60 4 210 6500  
Fax: +60 4 226 8901  
E-mail: info@linak-asia.com  
www.linak.my - www.linak.co.id  
www.linak.pk - www.linak.ph

### Netherlands

LINAK Actuator-Systems B.V.  
Phone: +31 76 5 42 44 40 /  
+31 76 2 00 11 10  
E-mail: info@linak.nl  
www.linak.nl

### New Zealand

LINAK New Zealand Ltd  
Phone: +64 9580 2071  
Fax: +64 9580 2072  
E-mail: nzsales@linak.com.au  
www.linak.com.au

### Norway

LINAK Norge AS  
Phone: +47 32 82 90 90  
E-mail: info@linak.no  
www.linak.no

### Poland

LINAK Polska  
LINAK Danmark A/S (Spółka Akcyjna)  
Phone: +48 22 295 09 70 /  
+48 22 295 09 71  
E-mail: info@linak.pl  
www.linak.pl

### Republic of Korea

LINAK Korea Ltd.  
Phone: +82 2 6231 1515  
Fax: +82 2 6231 1516  
E-mail: info@linak.kr  
www.linak.kr

### Russia

LINAK LLC  
Phone: +7 495 780 31 61  
Fax: +7 495 687 14 26  
E-mail: info@linak.ru  
www.linak.ru

### Spain

LINAK Actuadores, S.L.U  
Phone: +34 93 588 27 77  
Fax: +34 93 588 27 85  
E-mail: esma@linak.es  
www.linak.es

### Sweden

LINAK Scandinavia AB  
Phone: +46 8 732 20 00  
Fax: +46 8 732 20 50  
E-mail: info@linak.se  
www.linak.se

### Switzerland

LINAK AG  
Phone: +41 43 388 31 88  
Fax: +41 43 388 31 87  
E-mail: info@linak.ch  
www.linak.ch - www.fr.linak.ch  
www.it.linak.ch

### Taiwan

LINAK (Shenzhen) Actuator systems Ltd.  
Taiwan Representative office  
Phone: +886 2 27290068  
Fax: +886 2 27290096  
E-mail: sales@linak.com.tw  
www.linak.tw

### Turkey

LINAK İth. İhr. San. ve Tic. A.Ş.  
Phone: +90 312 4726338  
Fax: +90 312 4726635  
E-mail: info@linak.com.tr  
www.linak.com.tr

### United Kingdom

LINAK UK Limited  
Phone: +44 (0)121 544 2211  
Fax: +44 (0)121 544 2552  
E-mail: sales@linak.co.uk  
www.linak.co.uk

## DISTRIBUTORS

### Argentina

NOVOTEC ARGENTINA SRL  
Phone: 011-4303-8989 / 8900  
Fax: 011-4032-0184  
E-mail: info@novotecargentina.com  
www.novotecargentina.com

### Colombia

MEM Ltda  
Phone: +57 (1) 334-7666  
Fax: +57 (1) 282-1684  
E-mail: servicioalcliente@memltda.com.co  
www.mem.net.co

### India

Mechatronics Control Equipments India Pvt Ltd  
Phone: +91-44-28558484, 85  
E-mail: bala@mechatronicscontrol.com  
www.mechatronicscontrol.com

### Indonesia

PT. HIMALAYA EVEREST JAYA  
Phone: +6 221 544 8956, +6 221 544 8965  
Fax: +6 221 619 1925  
Fax (Sales): +6 221 619 4658  
E-mail: hejplastic-div@centrin.net.id  
www.hej.co.id

### Israel

NetivTech LTD  
Phone: +972 55-2266-535  
Fax: +972 2-9900-560  
Email: info@NetivTech.com  
www.netivtech.com

### Russia

OOO FAM  
Phone: +7 812 3319333  
Fax: +7 812 3271454  
E-mail: purchase@fam-drive.ru  
www.fam-drive.ru

### Singapore

Servo Dynamics Pte Ltd  
Phone: +65 6844 0288  
Fax: +65 6844 0070  
E-mail: servodynamics@servo.com.sg

### South Africa

Industrial Specialised Applications CC  
Phone: +27 011 466 0346  
E-mail: gartht@isagroup.co.za  
www.isaza.co.za

### United Arab Emirates

Mechatronics  
Phone: +971 4 267 4311  
Fax: +971 4 267 4312  
E-mail: mechtron@emirates.net.ae

## Terms of use

The user is responsible for determining the suitability of LINAK products for specific application. LINAK takes great care in providing accurate and up-to-date information on its products.

However, due to continuous development in order to improve its products, LINAK products are subject to frequent modifications and changes without prior notice. Therefore, LINAK cannot guarantee the correct and actual status of said information on its products.

While LINAK uses its best efforts to fulfil orders, LINAK cannot, for the same reasons as mentioned above, guarantee the availability of any particular product. Therefore, LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or other written material drawn up by LINAK.

All sales are subject to the Standard Terms of Sale and Delivery for LINAK. For a copy hereof, please contact LINAK.



WE IMPROVE YOUR LIFE