

# Kick & Click™ User manual

# Contents

<b>Preface</b> .....	3
<b>Important information</b> .....	4
<b>Safety instructions</b> .....	4
Before installation, re-installation or troubleshooting .....	5
Before start-up .....	5
During operation .....	5
Misc. ....	5
<b>Only for EU markets</b> .....	6
<b>Only for Non EU markets</b> .....	6
<b>Misuse</b> .....	6
<b>Repairs</b> .....	7
<b>Manufacturer's declaration</b> .....	7
<b>Misc. on the DESKLINE® system</b> .....	8
Warranty .....	8
Maintenance .....	8
<b>Description of the DESKLINE® Kick &amp; Click™ system</b> .....	9
Kick & Click™ Adjustable.....	10
Kick & Click™ Fixed.....	10
Kick & Click™ Base .....	11
Kick & Click™ 3 <sup>rd</sup> leg kit .....	12
<b>Mounting guidelines for the Kick &amp; Click™ system</b> .....	13
<b>Assembling a three-legged desk</b> .....	17
<b>Mounting tabletop</b> .....	18
<b>Disassembly</b> .....	20
<b>Accessories and repair</b> .....	21
<b>Disposal of LINAK's products</b> .....	22
<b>Drawing appendix</b> .....	23
<b>Declaration of conformity</b> .....	31
<b>Addresses</b> .....	32

# Preface

Dear User,

We are delighted that you have chosen a product from LINAK®.

LINAK systems are high-tech products based on many years of experience in the manufacture and development of actuators, electric control boxes, controls and chargers.

This User Manual does not address the end-user. It is intended as a source of information for the manufacturer of the equipment or system only, and it will tell you how to install, use and maintain your LINAK electronics. It is the responsibility of the manufacturer of the end-user product to provide a User Manual where relevant safety information from this manual is passed on to the end-user.

We are sure that your LINAK product/system will give you many years of problem-free operation.

Before our products leave the factory, they undergo full function and quality testing. Should you nevertheless experience problems with your LINAK product/system, you are always welcome to contact your local contact. LINAK subsidiaries and some distributors situated all over the world have authorised service centres, which are always ready to help you.

LINAK provides a warranty on all its products. This warranty, however, is subject to correct use in accordance with the specifications, maintenance being done correctly and any repairs being carried out at a service centre, which is authorised to repair LINAK products.

Changes in installation and use of LINAK products/systems can affect the operation and durability of the products/systems. The products are not to be opened by unauthorised personnel.

The User Manual has been written based on our present technical knowledge. We are constantly working on updating the information and we therefore reserve the right to carry out technical modifications.

**LINAK A/S**

## Important information

Important information on LINAK® products can be found under the following headings:



### Warning!

Failure to comply with these instructions may result in accidents involving serious personal injury.



Failing to follow these instructions can result in the product being damaged or being destroyed.

---

## Safety instruction



### General

Safe use of the system is possible only when the operating instructions are read completely and the instructions contained are strictly observed.

Failure to comply with instructions marked with the "NOTE" symbol may result in serious damage to the system or one of its components.



It is important for everyone who is to connect, install, or use the systems to have the necessary information and access to this User Manual. Follow the instructions for mounting – there is a risk of injury if these instructions are not followed.



The appliance is not intended for use by young children or infirm persons without supervision.



If there is visible damage to the product, do not install it.



Please note that during construction of applications in which the actuator is to be fitted, there must be no possibility of personal injury, for example squeezing of fingers or arms.



Assure free space for movement of the application in both directions to avoid blockades.

## **Before installation, re-installation, or troubleshooting:**

- Stop the columns.
- Switch off the power supply and pull out the mains plug.
- Relieve the columns of any loads, which may be released during the work.

## **Before start-up:**

- Make sure that the system has been installed as instructed in this User Manual. Describing the motor system.
- Make sure that the voltage of the control box is correct before connecting the system to the mains.
- System connection. The individual parts must be connected before connecting the control box to the mains. See the User Manual for LINAK actuators, if necessary.

## **During operation**

- If the control box makes unusual noise or smells, switch off the mains voltage immediately.
- Duty Cycle: 10%, Max. 2 min./18 min. pause
- Take care that the cables are not damaged.
- Unplug the mains cable on mobile equipment before moving it.
- The products must only be used in an environment, that corresponds to their IP protection.

## **Misc.**

For further information, installation guidelines etc. for the motor system, please see the relevant user manual: [www.linak.com/deskline](http://www.linak.com/deskline).

Updated manuals and declarations can always be found here:  
[www.linak.com/deskline](http://www.linak.com/deskline).

### **Only for EU markets**



This appliance can be used by children aged from aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

### **Only for Non EU markets**



Persons who do not have the necessary experience or knowledge of the product/products must not use the product/products. Besides, persons with reduced physical, sensory or mental abilities must not use the product/products, unless they are under surveillance or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.



Moreover, children must be under surveillance to ensure that they do not play with the product.



It is the operator's responsibility to ensure that there is free space for the application to move without risk for the operator or bystanders before operating the application.

### **Misuse**



Do not overload the actuators – this can cause danger of personal injury and damage to the system.



Do not use the actuator system for lifting persons. Do not sit or stand on a table while operating – risk of personal injury.



Do not use the system in environments other than the intended indoor use

## Repairs

In order to avoid the risk of malfunction, all DESKLINE® repairs must only be carried out by authorised LINAK workshops or repairers, as special tools must be used and special gaskets must be fitted. Lifting units under warranty must also be returned to authorised LINAK workshops.



### Warning!

If any of the DESKLINE® products are opened, there will be a risk of subsequent malfunction.



### Warning!

The DESKLINE® systems do not withstand cutting oil.

## DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY

**LINAK A/S**  
Smedevænget 8  
DK - 6430 Nordborg

Herewith declares that LINAK DESKLINE® products as characterized by the following models and types:

Control Boxes	CBD6S
Linear Actuators	DB5, DB6, DB7, DB9, DB12, DB14, DB16, LA23, LA31
Lifting Columns	DL1A, DL2, DL4S, DL5, DL6, DL7, DL8, DL9, DL10, DL11, DL12, DL14, DL15, DL16, DL17, DL19, BASE1
Desk Panels	DPA, DPB, DPH, DPF, DPG1K, DPG1M, DPG1B, DPG1C, DPT, DP1, DP1CS, DP1K, DP1V, DP1U
RF Controls	HB10RF, HB20RF, RFT, RFRL
Accessories	BA001, SLS, Kick & Click

comply with the following parts of the Machinery Directive 2006/42/EC, ANNEX I, *Essential health and safety requirements relating to the design and construction of machinery*:

### 1.5.1 Electricity supply

The relevant technical documentation is compiled in accordance with part B of Annex VII and that this documentation or part hereof will be transmitted by post or electronically to a reasoned request by the national authorities.

**This partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC where appropriate.**

Nordborg, 2017-12-08

**LINAK A/S**  
John Kling, B.Sc.E.E.  
Certification and Regulatory Affairs  
Authorized to compile the relevant technical documentation

## **Misc. on the DESKLINE® system**

This system is a DESKLINE system developed for desks and for indoor use in offices. Do not use it in industrial kitchens or in other environments that have to be cleaned with aggressive detergents.

### **Warranty - 60 months on DESKLINE®**

There is a 60 month warranty on Kick & Click™ systems.

Read more about the warranty period of the motorsystems in the standard user manuals found on [www.linak.com/deskline](http://www.linak.com/deskline).

### **Maintenance**


Clean dust and dirt off the outside of the system at appropriate intervals and inspect them for damage and breaks. Inspect the connections, cables, and plugs and check for correct functioning as well as fixing points.



## Description of the DESKLINE® Kick & Click™ system

The Kick & Click™ system is the smart and intuitive solution for mounting DESKLIFT™ columns to the tabletop. The solution is perfect for various office desks. The unique feature of Kick & Click is the way of mounting. Click the system together without using tools and screws, simply clever. Kick & Click is a modular concept compatible with all DESKLINE® columns with motor housing leaving the design to the desk manufacturer. Kick & Click comes standard in 3 versions: Kick & Click Adjustable, Kick & Click Fixed and Kick & Click Base. Additionally, Kick & Click can be used for creating large three-legged office desks by joining a Kick & Click 3rd leg kit with a Kick & Click system.

**Kick & Click™:** names of the different parts

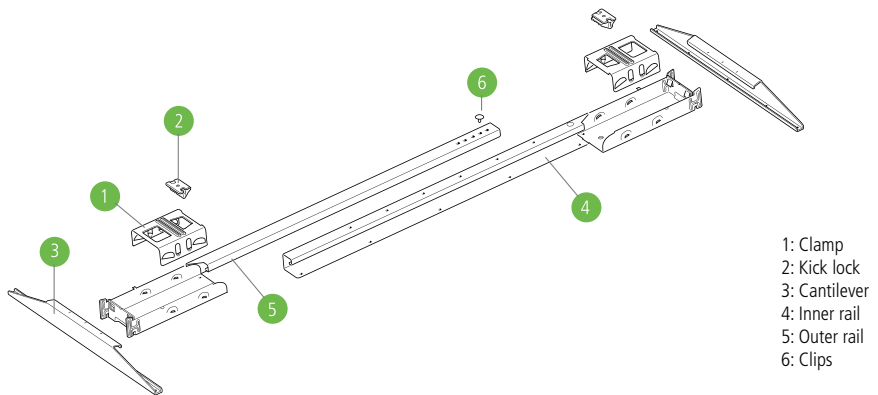

### Features for all versions:

- Colours (all metal parts): Black (RAL 9005), grey (RAL 9006) or white (RAL 9016)
- Cantilever length: 550 mm
- Oval holes ensure flexibility as regards predrilling holes in tabletop
- Central or off-centre placement of columns (T-desk and C-desk)

### Kick & Click™ Adjustable:

- Fits desks from 1400 to 2000 mm (frame width 1340 to 1940 mm)
- Set-packed or bulk deliveries
- Optional to order screws for mounting the tabletop


### Kick & Click™ fixed:

- Fits desks of 1200 mm (frame width 1140 mm)
- Set-packed or bulk deliveries
- Optional to order screws for mounting the tabletop

### Kick & Click™ Base:


- Base consists of Cantilever (x2), Base (x2), Clamp (x2) and Kick Lock (x2) for a two-legged desk
- Bulk deliveries only

**Kick & Click™ Adjustable**

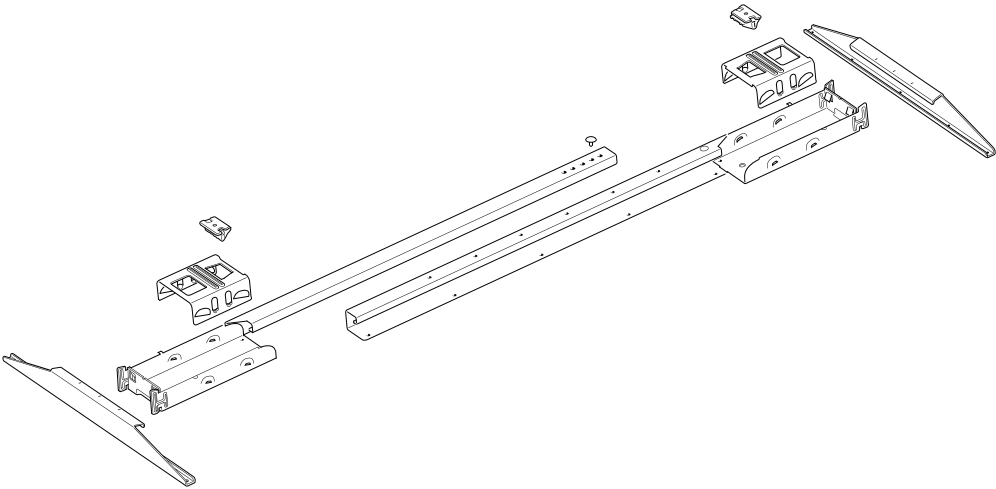


The Adjustable system includes a telescopic inner and outer rail onto which the base is welded.

**Kick & Click™ Fixed**

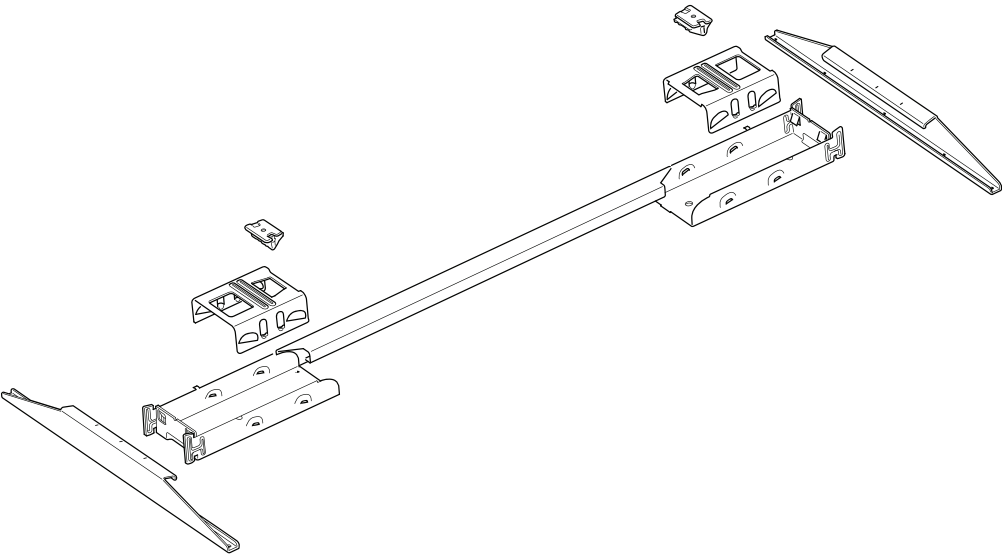


Compared to the Adjustable system the Fixed system only consists of one rail which is welded onto the base in both ends.

Kick & Click™ Base

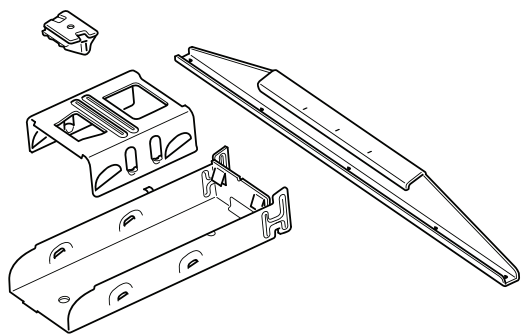


The Base system is without the inner and the outer rail. The system is preferred if the OEM want to weld his own rail onto the Base, or if the desk design does not need a rail e.g. due to tabletop thickness. The Base system could also be used for a 3 leg desk.

The allowed welding area on the base is shown here:

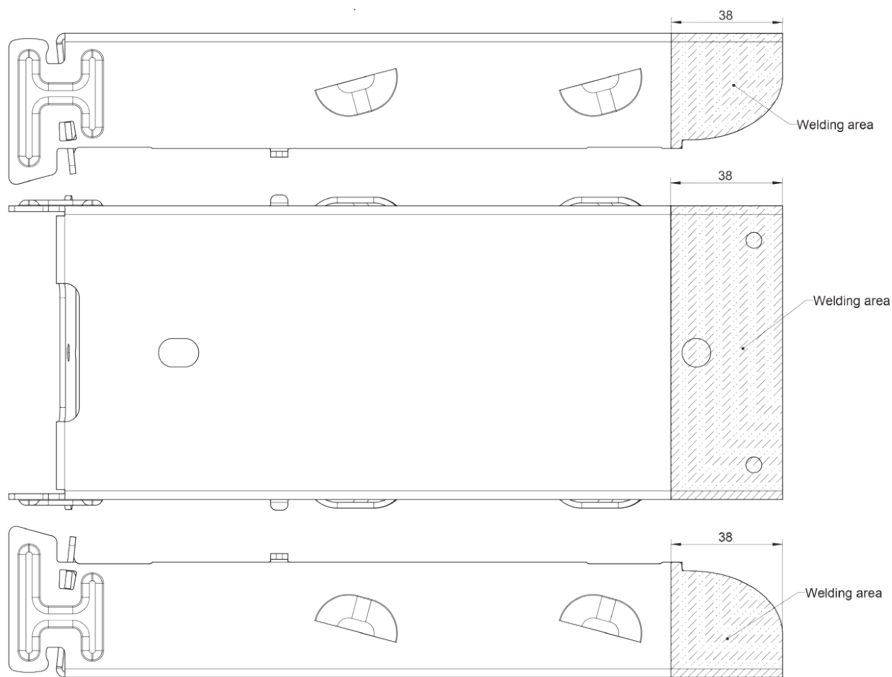

The Kick & Click base must only be used in connection with a Kick & Click cantilever.  
Do not develop your own cantilever!

**Kick & Click™ 3<sup>rd</sup> leg kit**

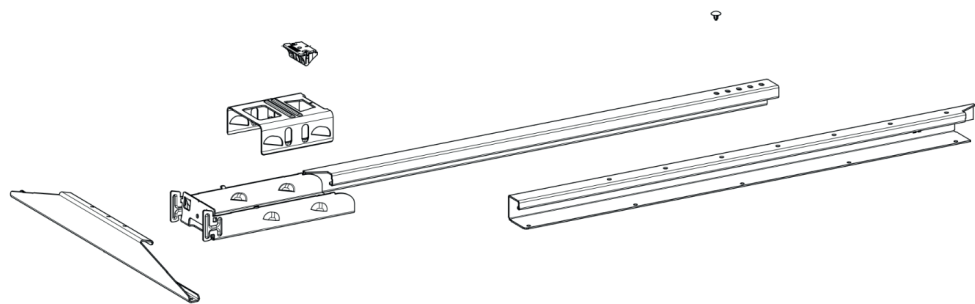


The 3<sup>rd</sup> leg kit system includes a telescopic inner and outer rail with a base welded onto the outer rail.

# Mounting guidelines for the Kick & Click™ system

Kick & Click Adjustable


1. Gather all parts for desk

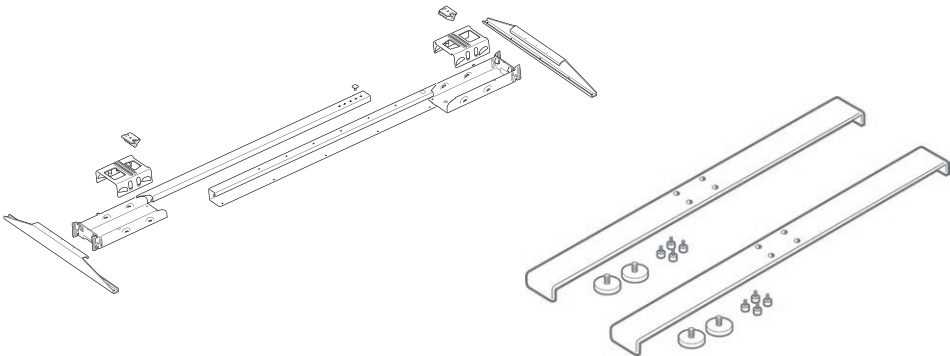


2. Fix inner rail with outer rail (only Kick & Click Adjustable).

2.1. Extend rails to required length  
(frame width from 1140 to 1940 mm)  
using holes on rails as a length indicator.

2.2. Fix length with clip.

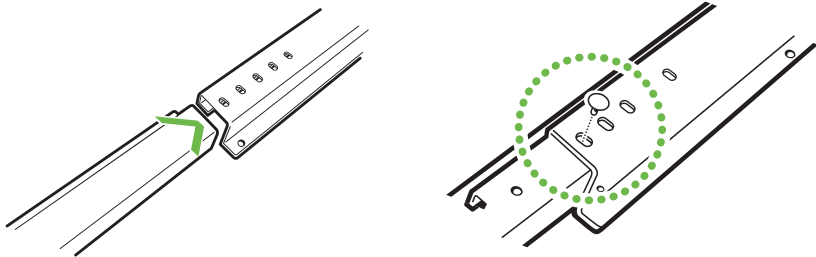


3. Slide cantilevers onto base of inner and outer rails.

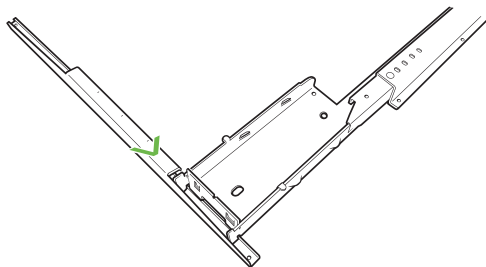


#### 4. Align cantilever

T-desk

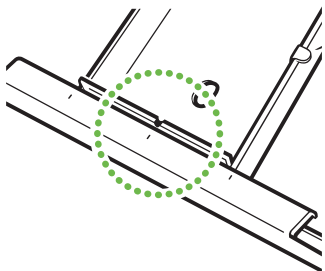


Align middle marker on cantilever with centre on inner rail/outer rail

C-desk



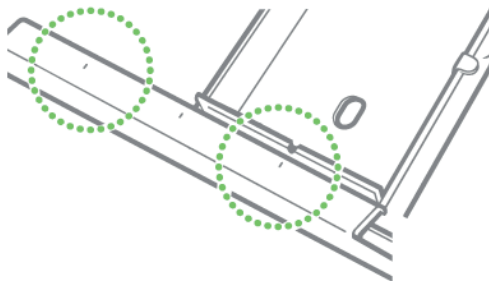


Outer markers on cantilever indicate 50 mm maximum displacement from centre on inner rail/outer rail



#### 5. Mount column by placing it in base.

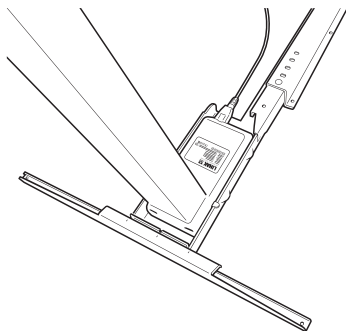


Column is prepared for Kick & Click™ with slots on backside of housing (see drawings)

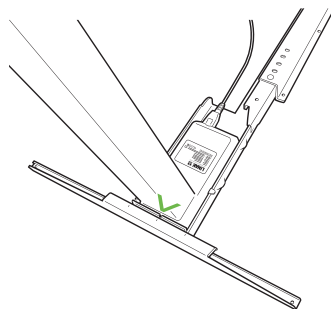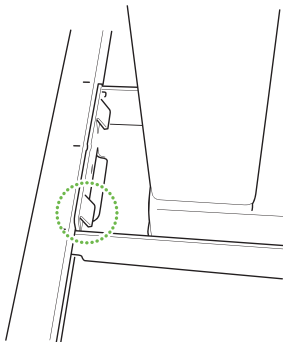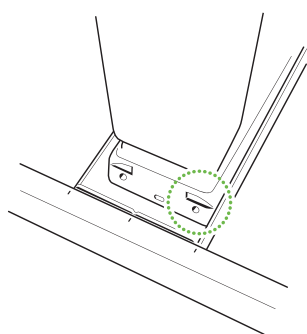




6. Place clamp on column housing, press it down gently. It will still be possible to move clamp a little when placed.

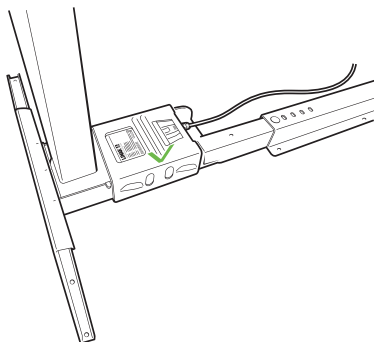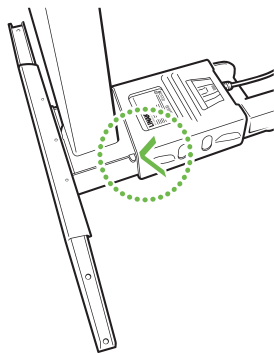


7. Place Kick Lock in clamp. Arrow on Kick Lock must face arrow on clamp.

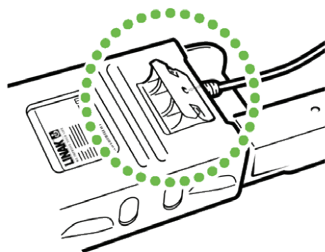


8. Fix Kick Lock in clamp with your foot. When you hear a "click", Kick Lock is mounted and column is fixed together with Kick & Click parts.  
Repeat mounting in the other end.

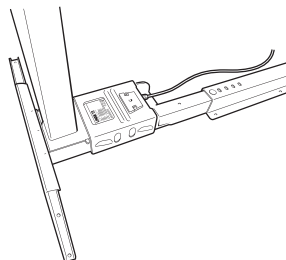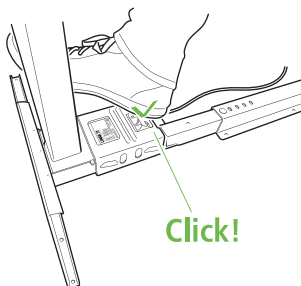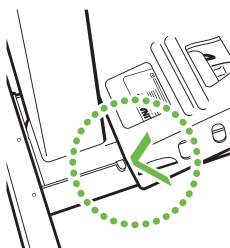


9. Turn tabletop upside down.
10. Place assembled Kick & Click in preferred position.
11. Mark and predrill holes in tabletop, if not done yet.
12. Fasten Kick & Click to tabletop with screws (in inner/outer rails and cantilevers).
13. Mount and connect electronics.
14. Hide cables. Rails are designed so cables from columns and control box can be hidden inside rail.

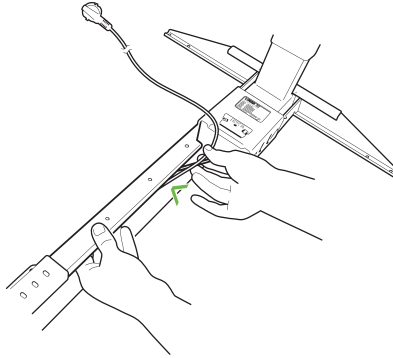

15. Mount feet on columns using supplied screws. Max. torque: 10 Nm.

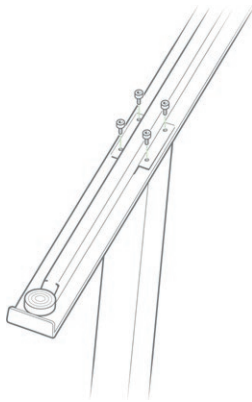

16. Mount adjustment screws.

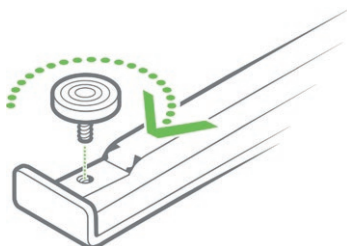



## Assembling a three-legged desk

The 3<sup>rd</sup> leg kit has only one base which is welded onto the outer rail.



Mount Kick & Click Adjustable system as described above.

1. Gather all 3<sup>rd</sup> leg kit system parts.

2. Fix inner rail with outer rail.

2.1. Extend rails to required length (frame width from 1100 to 1700 mm) using holes on rails as a length indicator.

2.2. Fix length with clip.

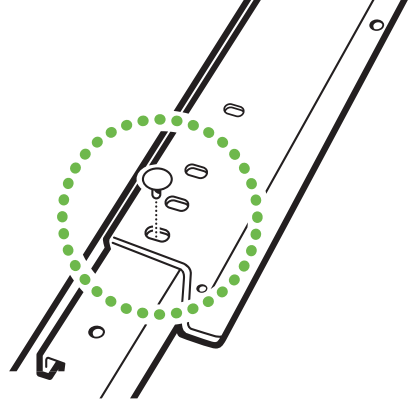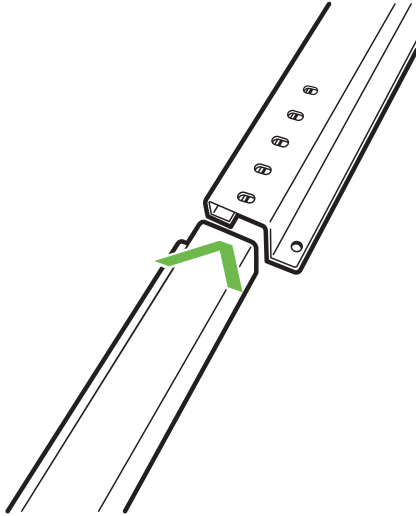

3. Finish mounting Kick & Click 3<sup>rd</sup> leg kit following the same procedure as in Assembling Kick & Click system, steps 4 to 8.

# Mounting tabletop

The oval holes in the inner and outer rails and in the cantilevers of the Kick & Click system facilitate mounting of tabletops with predrilled holes.



## Old Kick & Click versions with circular holes

Do **not** predrill holes for all the parts.

The combination of hole tolerances on each part, e.g. cantilever and rail, will cause uncertainty about the overall tolerances on the assembled Kick Click system. Therefore, we recommend drilling the holes when the assembled frame is mounted to the tabletop.

Exceptions:

- Fixing the Kick & Click Adjustable to a tabletop  
With a Kick & Click Adjustable system, a customer can predrill the holes for the cantilevers to fix the system to the tabletop. This can be done because the rails are adjustable. The hole size is  $5.3 \pm 0,2$  mm and the tolerances on the distance between the holes are  $\pm 0.2$  mm.
- Fixing the Kick & Click Fixed to a tabletop  
With a Kick & Click Fixed system, a customer can predrill the holes for the rail to fix the system to the tabletop. The hole size is  $5.3 \pm 0.2$  mm and the tolerances on the distance between the holes are  $\pm 0.5$  mm.



- |  |        |
|--|--------|
| Max. distance from centre of base to edge of tabletop:     | 550 mm |
| Max. distance from centre of base to centre of cantilever: | 50 mm  |



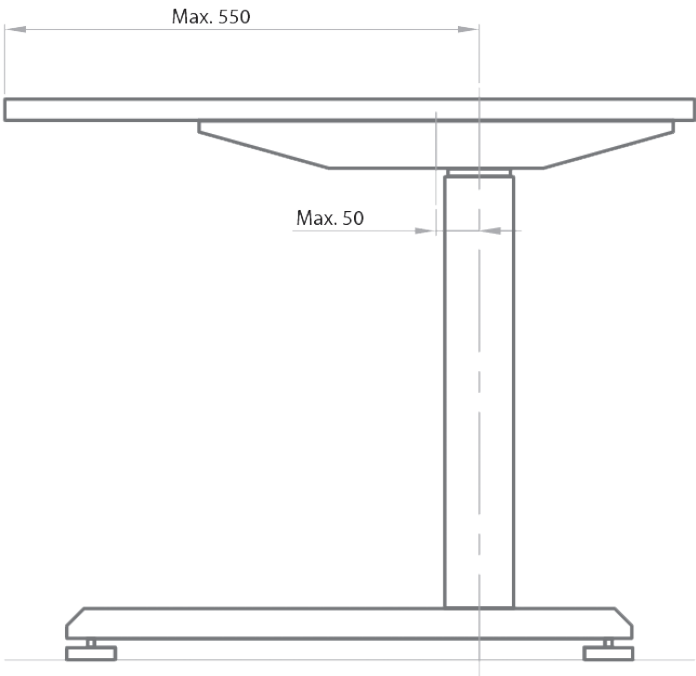


Figure 9 Kick & Click tabletop alignment measurements in mm

1. Turn tabletop upside down.
2. Place assembled Kick & Click in preferred position.
3. Mark and predrill holes in tabletop, if not done yet.
4. Fasten Kick & Click to tabletop with screws (in inner/outer rails and cantilevers).
5. Mount and connect electronics.
6. Hide cables. Rails are designed so cables from columns and control box can be hidden inside rail.

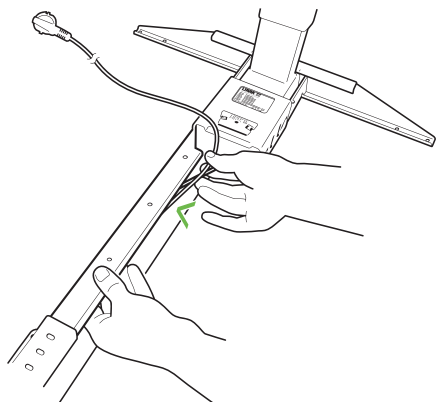

### Example of Kick & Click three-legged desk

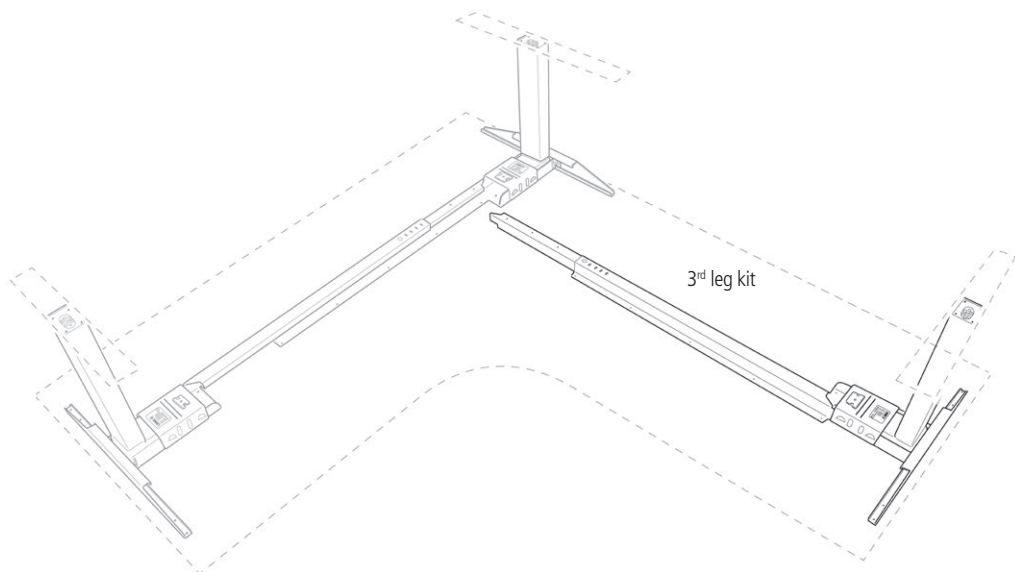


# Disassembly


A disassembling instruction video is available [here](#).

## Disassembling Kick & Click.

1. Remove Kick Lock.

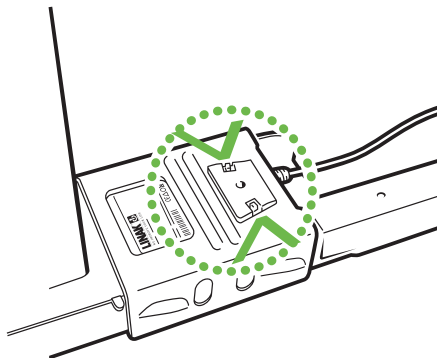


Gently press two pins on side of Kick Lock

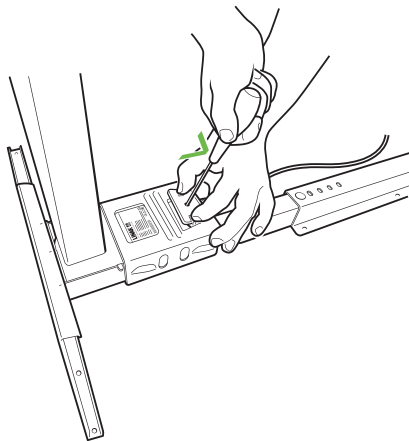


Keep pressing while removing Kick Lock using a screwdriver

2. Gently hit end of clamp to loosen it, e.g. using screwdriver handle

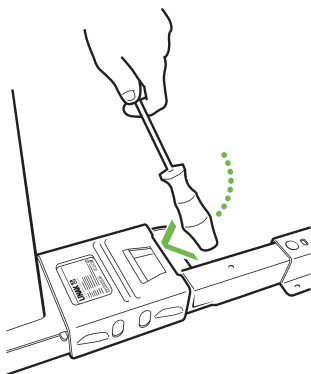

3. Place screwdriver in one of holes on clamp and twist it a bit until clamp is released from base part.

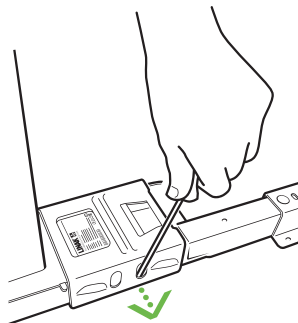

4. Remove clamp.

5. Disassemble rest of system.

## Accessories and repair

### Ordering accessories

Order from your nearest LINAK® contact, distributor or subsidiary.

### Accessories

Please contact your nearest LINAK® contact, distributor or subsidiary.

### Repairs

Systems should only be repaired by an authorised LINAK service centre or engineer. Systems to be repaired under warranty must be sent to an authorised LINAK service centre.



### Warning!

By unauthorised opening of the system there is a risk that it may malfunction at a later date.

### Spare parts

Please contact your nearest LINAK contact for information on spare parts.

# Disposal of LINAK product

As LINAK's customers often ask us how our products can be disposed or scrapped we have prepared this guide that enables a classification to different waste fractions for recycling or combustion.

## Guide

We recommend our products to be disassembled as much as possible and divided into different waste groups for recycling or combustion.

For example, waste can be sorted into metals, plastics, cable scrap, combustible material, and recoverable resources.

Some of these main groups can be further divided into subgroups; e.g. metal can be divided into steel/aluminium/copper and plastic can be divided into ABS/PA/PE/PP.

As an example, the table below breaks down the different components in LINAK products to various recycling groups:

Product	Components	Recycling group
Columns/ Actuator :	Spindle and motor Plastic housing Cable PCB boards	Scrap Plastic recycling or combustion Cable scrap or combustion Electronics scrap
Control Box :	PCB boards Plastic housing Cable Transformer	Electronics scrap Plastic recycling or combustion Cable scrap or combustion Metal scrap
Handset/Control :	Plastic housing Cable PCB board	Plastic recycling or combustion Cable scrap or combustion Electronics scrap
Kick & Click	Metal parts	Scrap


By now almost all our casted plastic parts are supplied with an interior code for plastic type and fibre content, if any.

## Main groups of disposal


Product main groups	Metal scrap	Cable scrap	Electronics scrap	Plastic recycling or combustion	Comments
Kick & Click™ cantilever	X				
Kick & Click™ inner + outer rail	X				
Kick & Click™ clamp	X				
Kick & Click™ kick lock				X	
Kick & Click™ clips				X	
DESKLIFT™ Feet	X			X	

DRAWING APPENDIX

Kick & Click Adjustable

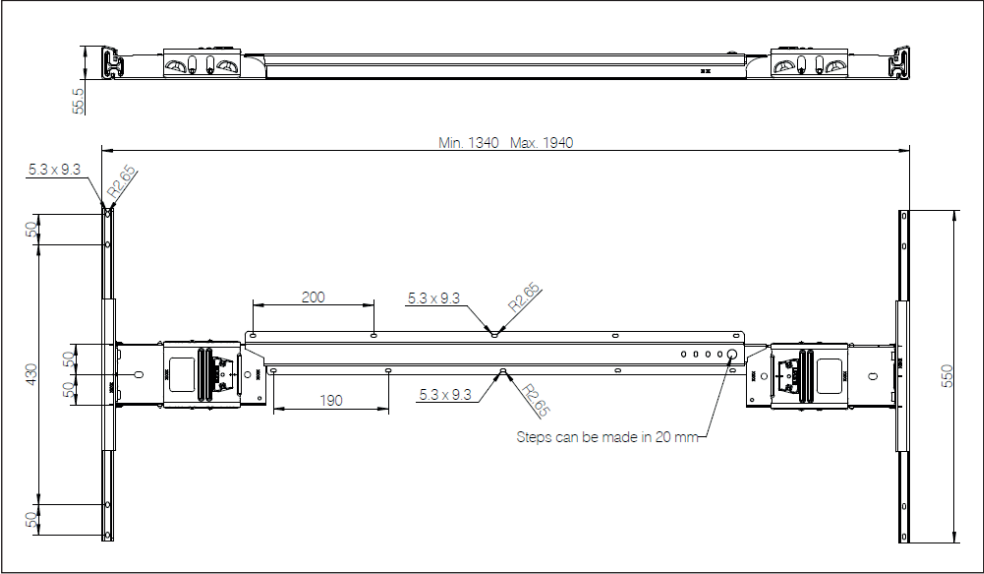

Kick & Click Fixed

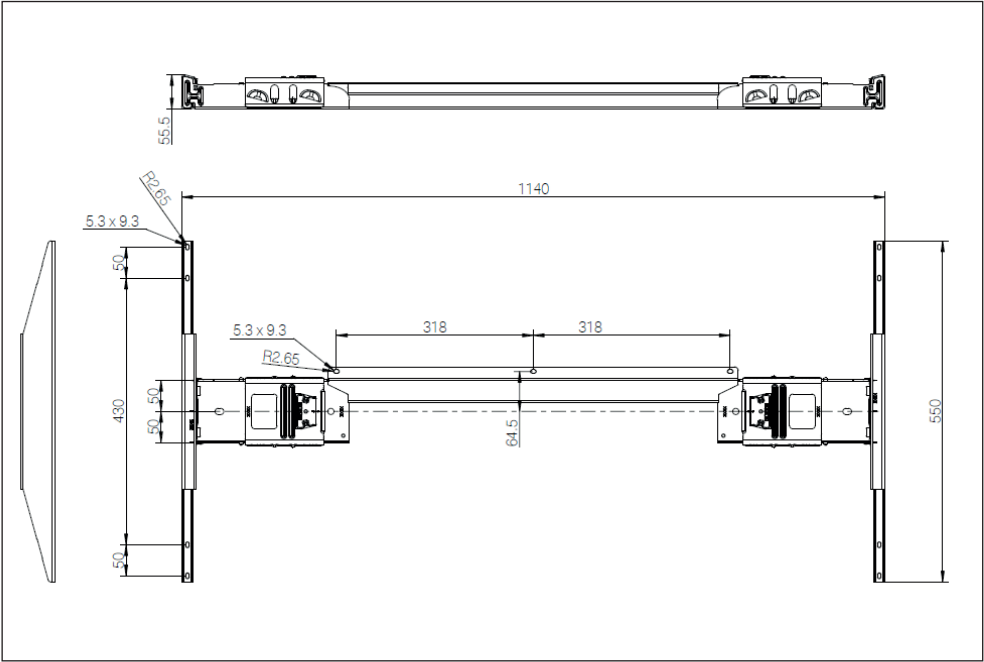

Technical drawing of the THERMOLUX THERMO 10000 BTU model, showing front, side, and top views with dimensions.

**Front View (Top):** Shows a width of 271 and a height of 55.5.

**Side View (Left):** Shows a depth of 50 and a total height of 430. The mounting bracket has a width of 50 and a height of 9.3. The mounting holes are labeled  $\varnothing 5.3^*$ .

**Side View (Right):** Shows a depth of 50 and a total height of 550. The mounting bracket has a width of 50 and a height of 9.3. The mounting holes are labeled  $\varnothing 5.3^*$ .


**Top View (Bottom):** Shows a width of 271 and a height of 55.5. The mounting bracket has a width of 50 and a height of 9.3. The mounting holes are labeled  $\varnothing 5.3^*$ .

\* The holes on the unpainted base are  $\varnothing 5.5$  mm.


[illegible]




DL5/DL6 on top mounted column, 560 mm

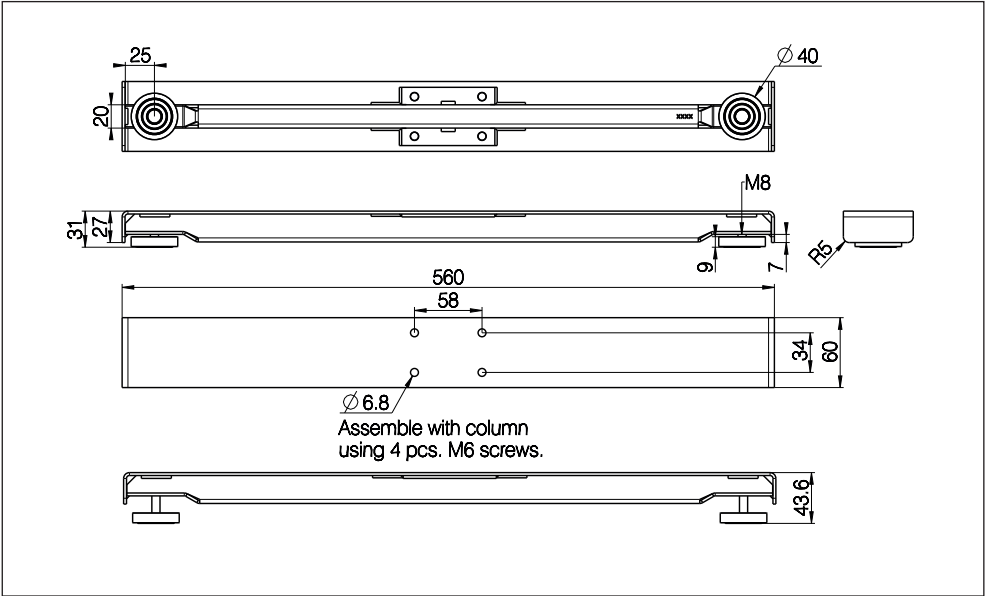


DL5/DL6 on top mounted column, 710 mm

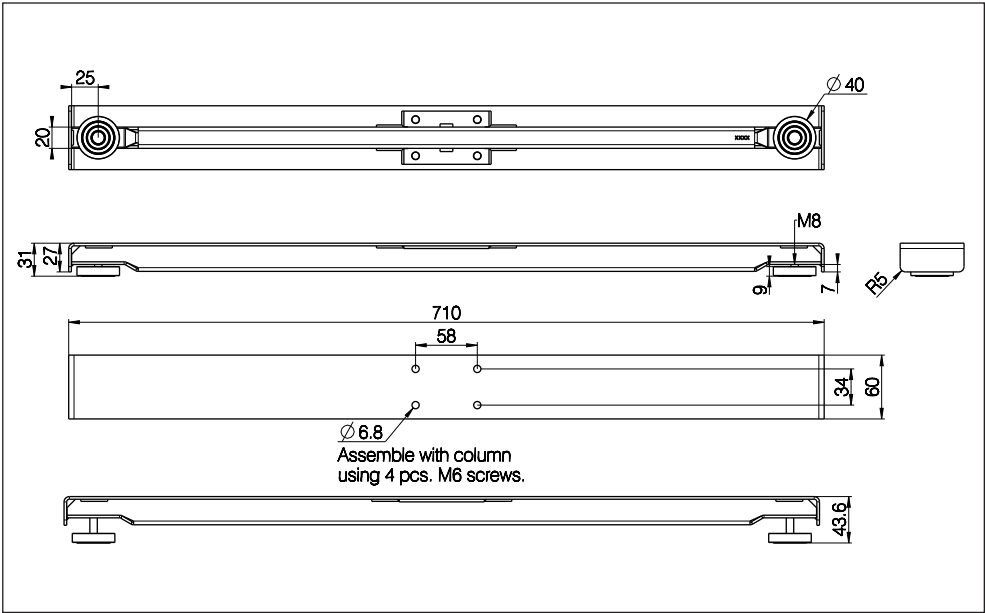


**DL10/DL11/DL14/DL17/DL19 on top mounted column, 560 mm**

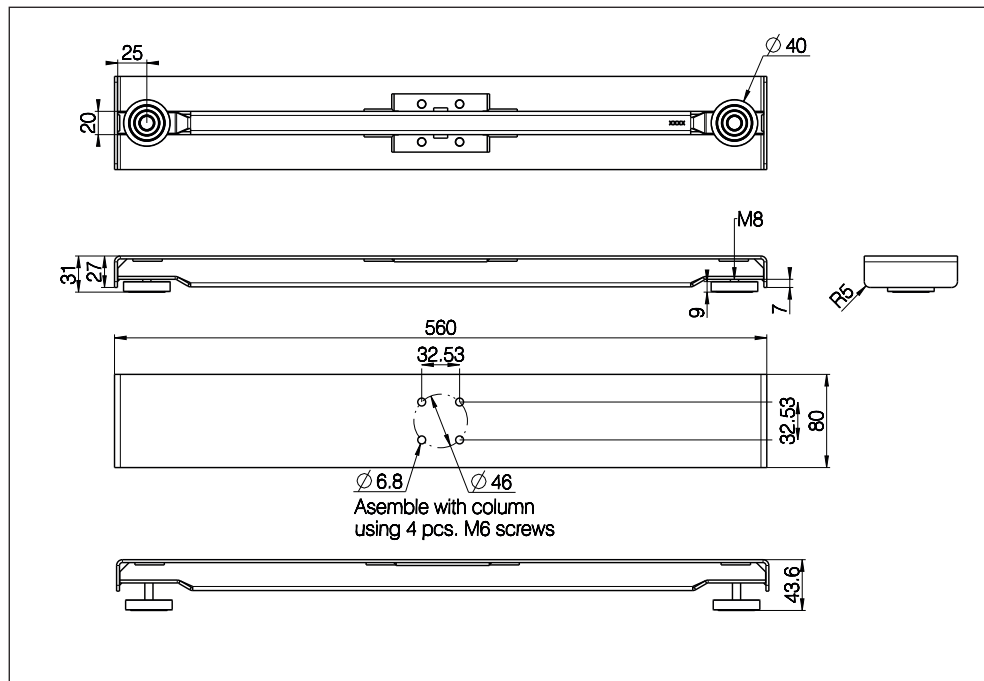


## DL10/DL11/DL14/DL17/DL19 on top mounted column, 710 mm

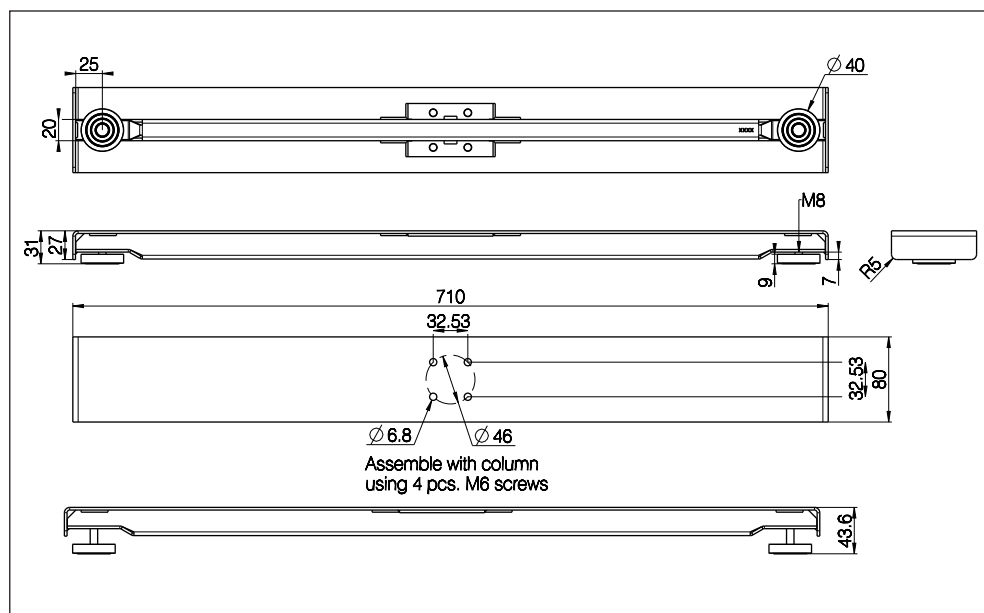


DL5/DL6 recessed mounted column, 560 mm

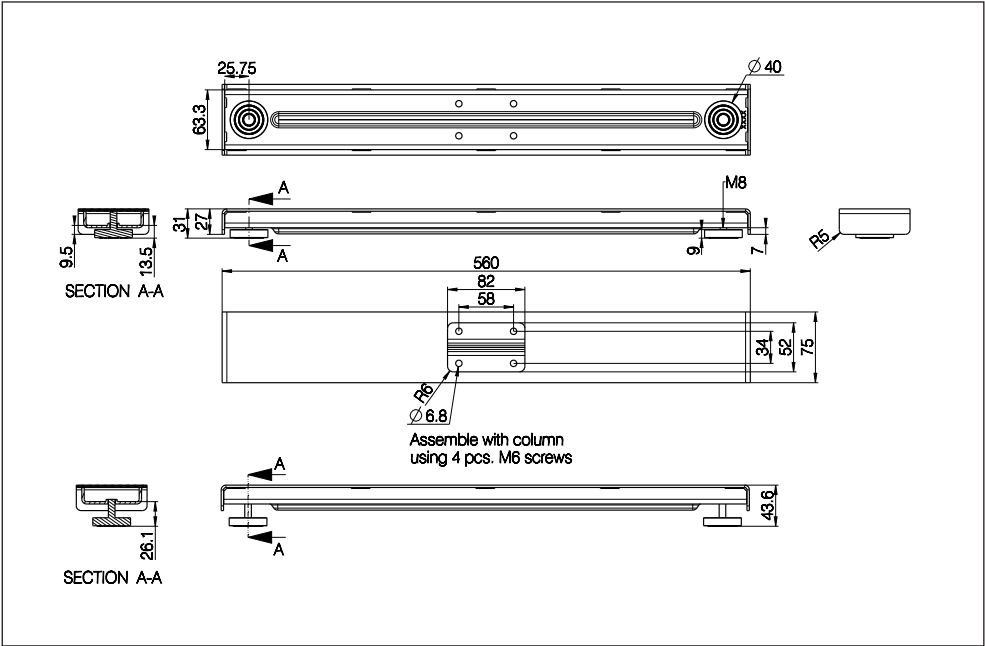


DL5/DL6 recessed mounted column, 710 mm

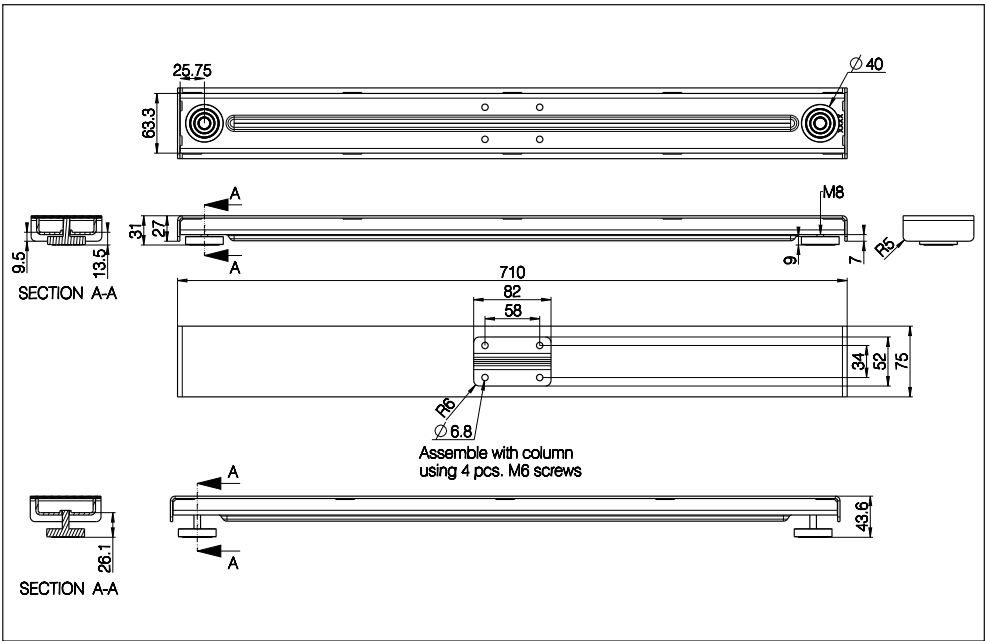


DL10/DL11/DL14 recessed mounted column, 560 mm

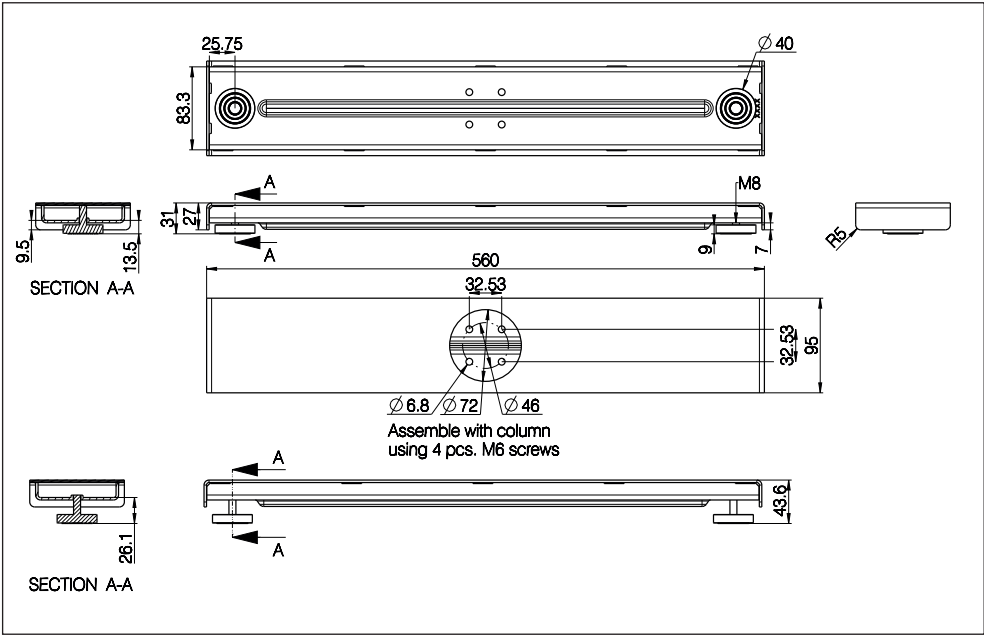


DL10/DL11/DL14 recessed mounted column, 710 mm

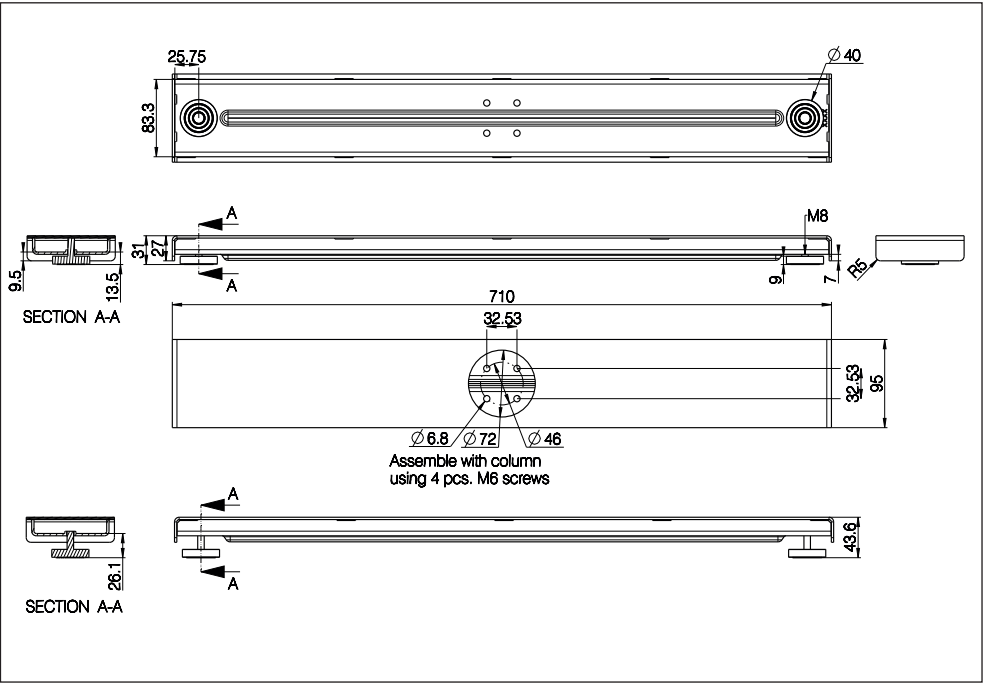


DL17/DL19 recessed mounted column, 560 mm

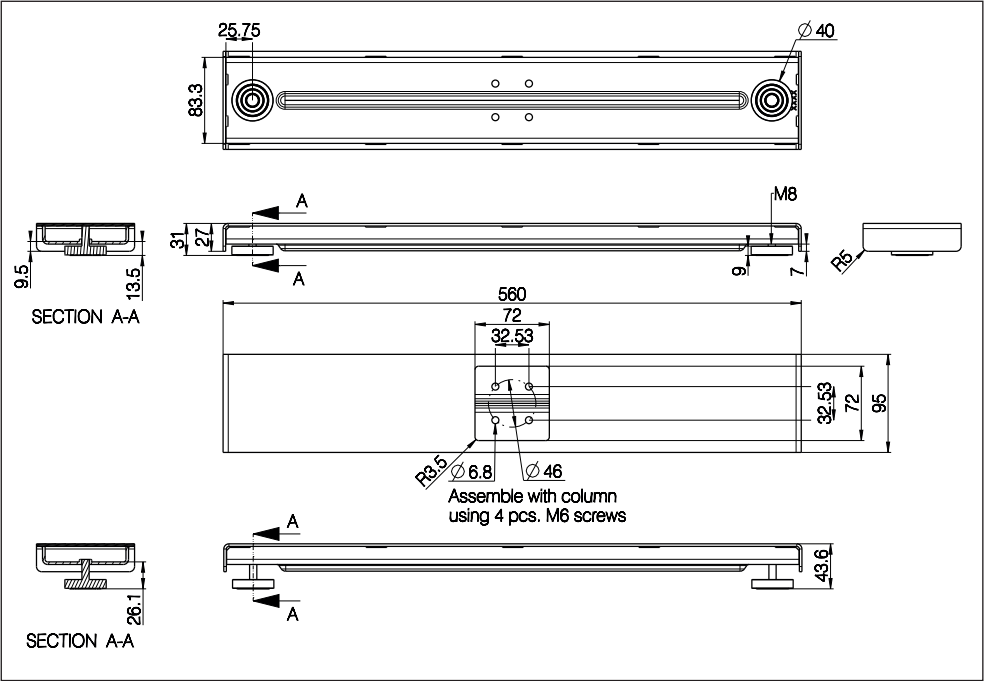

DL17/DL19 recessed mounted column, 710 mm

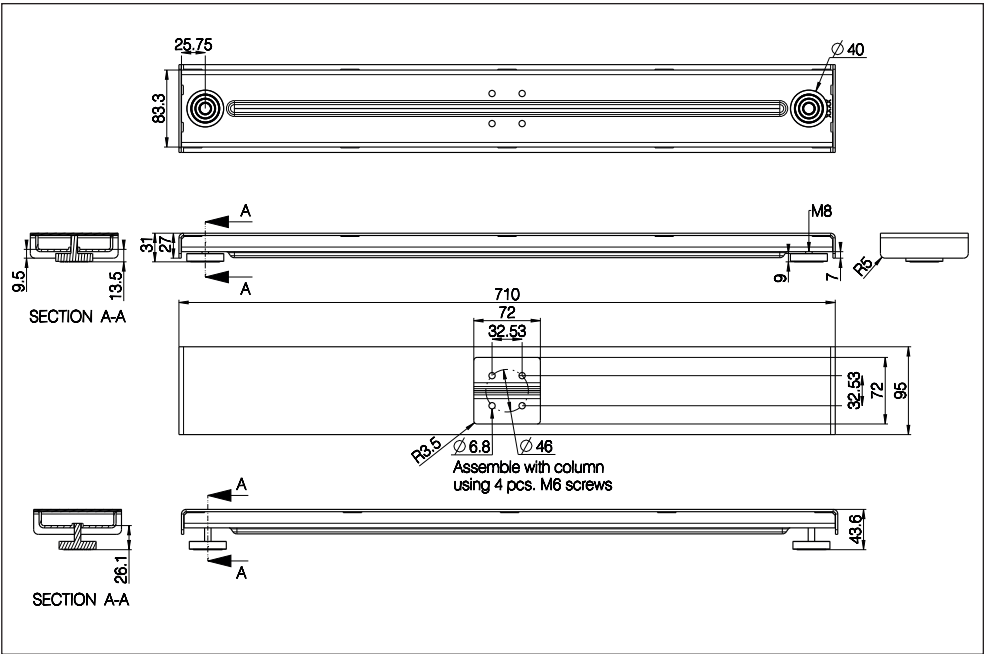

Adjustment screw

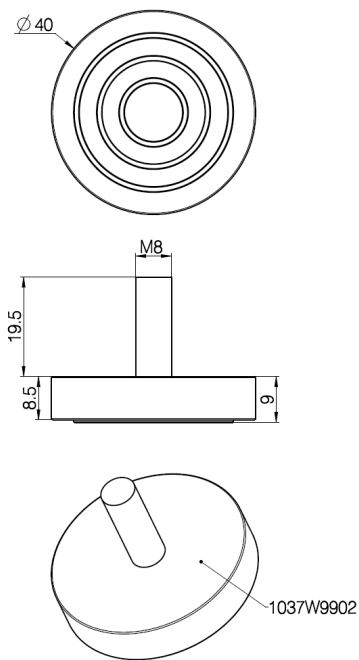

# DECLARATION OF CONFORMITY

LINAK A/S  
Smedevænget 8  
DK - 6430 Nordborg

hereby declares that LINAK Actuator System composed of:

Control Box(s)      CBD6SP00020A-309  
                             CBD6S\*000\*0A-709

(The "\*" in the product description can either be a character or a number, thereby defining the variation of the product)

And

Linear Actuator(s)      31, DB4, DB5, DB6, DB7, DB9, DB12, DB14, DB16, LA23 series      and / or  
Lifting Column(s)      DL1A, DL2, DL4, DL5, DL6, DL7, DL8, DL9, DL10, DL11, DL12, DL14, DL15, DL16, DL17, DL19,  
                             BASE1 series

And

Desk Panel(s)      DP1C, DP1K, DP1L, DP1V, DP1U, DPA, DPB, DPF, DPG, DPH, DPT, WDPL1 series

complies with EMC Directive: 2014/30/EU according to following standards:  
EN 61000-6-1:2007, EN 61000-6-3:2007+A1:2011+AC:2012

complies with Low Voltage Directive 2014/35/EU according to the standard:  
EN 60335-1:2012+A11:2014

complies with RoHS2 Directive 2011/65/EU according to the standard:  
EN 55581:2012

Additional information:

The system does also comply with the standard: EN 13849-1:2015 SRP/CS Cat. B, PL = b and SRESW PL = b  
Note 1: Exempted CBD6S with SW03003007 printed on the label.

Nordborg, 2017-12-08



**LINAK A/S**  
John Kling, B.Sc.E.E.  
Certification and Regulatory Affairs  
Authorized to compile the relevant technical documentation

Original Declaration

---

## LINAK APPLICATION POLICY

The purpose of the application policy is to define areas of responsibilities in relation to applying a LINAK product defined as hardware, software, technical advice, etc. related to an existing or new customer application.

LINAK products, as defined above, are applicable for a wide range of applications within the Medical, Furniture, Desk and Industry areas. Yet, LINAK cannot know all the conditions under which LINAK products will be installed, used, and operated, as each individual application is unique.

The suitability and functionality of the LINAK product and its performance under varying conditions (application, vibration, load, humidity, temperature, frequency, etc.) can only be verified by testing, and shall ultimately be the responsibility of the LINAK customer using any LINAK product.

LINAK shall be responsible solely that the LINAK products comply with the specifications set out by LINAK and it shall be the responsibility of the LINAK customer to ensure that the specific LINAK product can be used for the application in question.

## FACTORIES

### China

LINAK (Shenzhen) Actuator Systems, Ltd.  
Phone: +86 755 8610 6656  
Phone: +86 755 8610 6990  
E-mail: sales@linak.cn  
www.linak.cn

### Denmark - Headquarters

#### LINAK A/S - Group Headquarters

Phone: +45 73 15 15 15  
Fax: +45 74 45 80 48  
Fax (Sales): +45 73 15 16 13  
E-mail: info@linak.com  
www.linak.com

### USA

#### LINAK U.S. Inc.

North and South American Headquarters  
Phone: +1 502 253 5595  
Fax: +1 502 253 5596  
E-mail: info@linak-us.com  
www.linak-us.com

## SUBSIDIARIES

### Australia

LINAK Australia Pty. Ltd.  
Phone: +61 3 8796 9777  
Fax: +61 3 8796 9778  
E-mail: sales@linak.com.au  
www.linak.com.au

### Austria

LINAK Repräsentanz - Österreich (Wien)  
Phone: +43 (1) 890 7446  
Fax: +43 (1) 890 744615  
E-mail: info@linak.de  
www.linak.at

### Belgium

LINAK Actuator-Systems NV/SA  
(Belgium & Luxembourg)  
Phone: +32 (0)9 230 01 09  
Fax: +32 (0)9 230 88 80  
E-mail: beinfo@linak.be  
www.linak.be - www.fr.linak.be

### Brazil

LINAK DO BRASIL COMÉRCIO DE  
ATUADORES LTDA.  
Phone: +55 (11) 2832 - 7070  
Fax: +55 (11) 2832 - 7060  
E-mail: info@linak.com.br  
www.linak.com.br

### Canada

LINAK Canada Inc.  
Phone: +1 502 253 5595  
Fax: +1 416-255-7720  
E-mail: info@linak.ca  
www.linak-us.com

### Czech Republic

LINAK C&S S.R.O.  
Phone: +420581741814  
Fax: +420581702452  
E-mail: info@linak.cz  
www.linak.cz

### Denmark - International

LINAK International  
Phone: +45 73 15 15 15  
E-mail: info@linak.com  
www.linak.com

### Denmark - Sales

LINAK DANMARK A/S  
Phone: +45 86 80 36 11  
Fax: +45 86 82 90 51  
E-mail: linak@linak-silkeborg.dk  
www.linak.dk

### Finland

LINAK OY  
Phone: +358 10 841 8700  
E-mail: linak@linak.fi  
www.linak.fi

### France

LINAK FRANCE E.U.R.L  
Phone: +33 (0) 2 41 36 34 34  
Fax: +33 (0) 2 41 36 35 00  
E-mail: linak@linak.fr  
www.linak.fr

### Germany

LINAK GmbH  
Phone: +49 6043 9655 0  
Fax: +49 6043 9655 60  
E-mail: info@linak.de  
www.linak.de

### India

LINAK A/S India Liaison Office  
Phone: +91 120 4531797  
Fax: +91 120 4786428  
E-mail: info@linak.in  
www.linak.in

### Ireland

LINAK UK Limited (Ireland)  
Phone: +44 (0)121 544 2211  
Fax: +44 (0)121 544 2552  
+44 (0)796 855 1606 (UK Mobile)  
+35 387 634 6554 (Republic Of  
Ireland Mobile)

E-mail: sales@linak.co.uk  
www.linak.ie

### Italy

LINAK ITALIA S.r.l.  
Phone: +39 02 48 46 33 66  
Fax: +39 02 48 46 82 52  
E-mail: info@linak.it  
www.linak.it

### Japan

LINAK K.K.  
Phone: 81-45-533-0802  
Fax: 81-45-533-0803  
E-mail: linak@linak.jp  
www.linak.jp

### Malaysia

LINAK Actuators Sdn. Bhd.  
Phone: +60 4 210 6500  
Fax: +60 4 226 8901  
E-mail: info@linak-asia.com  
www.linak.my - www.linak.co.id  
www.linak.pk - www.linak.ph

### Netherlands

LINAK Actuator-Systems B.V.  
Phone: +31 76 5 42 44 40 /  
+31 76 2 00 11 10  
E-mail: info@linak.nl  
www.linak.nl

### New Zealand

LINAK New Zealand Ltd  
Phone: +64 9580 2071  
Fax: +64 9580 2072  
E-mail: nzsales@linak.com.au  
www.linak.com.au

### Norway

LINAK Norge AS  
Phone: +47 32 82 90 90  
E-mail: info@linak.no  
www.linak.no

### Poland

LINAK Polska  
LINAK Danmark A/S (Spółka Akcyjna)  
Phone: +48 22 295 09 70 /  
+48 22 295 09 71  
E-mail: info@linak.pl  
www.linak.pl

### Republic of Korea

LINAK Korea Ltd.  
Phone: +82 2 6231 1515  
Fax: +82 2 6231 1516  
E-mail: info@linak.kr  
www.linak.kr

### Russia

LINAK LLC  
Phone: +7 495 780 31 61  
Fax: +7 495 687 14 26  
E-mail: info@linak.ru  
www.linak.ru

### Spain

LINAK Actuadores, S.L.U  
Phone: +34 93 588 27 77  
Fax: +34 93 588 27 85  
E-mail: esma@linak.es  
www.linak.es

### Sweden

LINAK Scandinavia AB  
Phone: +46 8 732 20 00  
Fax: +46 8 732 20 50  
E-mail: info@linak.se  
www.linak.se

### Switzerland

LINAK AG  
Phone: +41 43 388 31 88  
Fax: +41 43 388 31 87  
E-mail: info@linak.ch  
www.linak.ch - www.fr.linak.ch  
www.it.linak.ch

### Taiwan

LINAK (Shenzhen) Actuator systems Ltd.  
Taiwan Representative office  
Phone: +886 2 27290068  
Fax: +886 2 27290096  
E-mail: sales@linak.com.tw  
www.linak.tw

### Turkey

LINAK İth. İhr. San. ve Tic. A.Ş.  
Phone: +90 312 4726338  
Fax: +90 312 4726635  
E-mail: info@linak.com.tr  
www.linak.com.tr

### United Kingdom

LINAK UK Limited  
Phone: +44 (0)121 544 2211  
Fax: +44 (0)121 544 2552  
E-mail: sales@linak.co.uk  
www.linak.co.uk

## DISTRIBUTORS

### Argentina

NOVOTEC ARGENTINA SRL  
Phone: 011-4303-8989 / 8900  
Fax: 011-4032-0184  
E-mail: info@novotecargentina.com  
www.novotecargentina.com

### Colombia

MEM Ltda  
Phone: +57 (1) 334-7666  
Fax: +57 (1) 282-1684  
E-mail: servicioalcliente@memltda.com.co  
www.mem.net.co

### India

Mechatronics Control Equipments India Pvt Ltd  
Phone: +91-44-28558484, 85  
E-mail: bala@mechatronicscontrol.com  
www.mechatronicscontrol.com

### Indonesia

PT. HIMALAYA EVEREST JAYA  
Phone: +6 221 544 8956, +6 221 544 8965  
Fax: +6 221 619 1925  
Fax (Sales): +6 221 619 4658  
E-mail: hejplastic-div@centrin.net.id  
www.hej.co.id

### Israel

NetivTech LTD  
Phone: +972 55-2266-535  
Fax: +972 2-9900-560  
Email: info@NetivTech.com  
www.netivtech.com

### Russia

OOO FAM  
Phone: +7 812 3319333  
Fax: +7 812 3271454  
E-mail: purchase@fam-drive.ru  
www.fam-drive.ru

### Singapore

Servo Dynamics Pte Ltd  
Phone: +65 6844 0288  
Fax: +65 6844 0070  
E-mail: servodynamics@servo.com.sg

### South Africa

Industrial Specialised Applications CC  
Phone: +27 011 466 0346  
E-mail: gartht@isagroup.co.za  
www.isaza.co.za

### United Arab Emirates

Mechatronics  
Phone: +971 4 267 4311  
Fax: +971 4 267 4312  
E-mail: mechtron@emirates.net.ae

## Terms of use

The user is responsible for determining the suitability of LINAK products for specific application. LINAK takes great care in providing accurate and up-to-date information on its products.

However, due to continuous development in order to improve its products, LINAK products are subject to frequent modifications and changes without prior notice. Therefore, LINAK cannot guarantee the correct and actual status of said information on its products.

While LINAK uses its best efforts to fulfil orders, LINAK cannot, for the same reasons as mentioned above, guarantee the availability of any particular product. Therefore, LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or other written material drawn up by LINAK.

All sales are subject to the Standard Terms of Sale and Delivery for LINAK. For a copy hereof, please contact LINAK.



WE IMPROVE YOUR LIFE