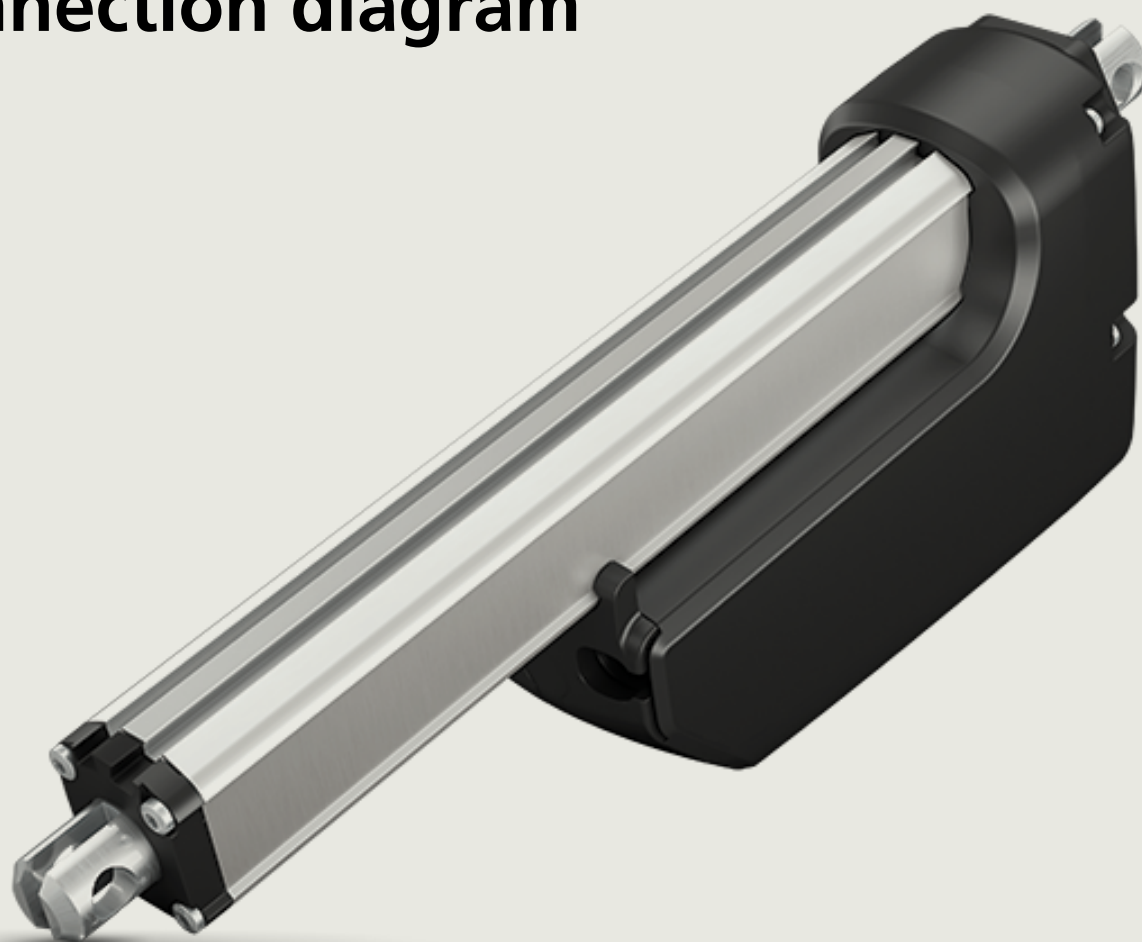


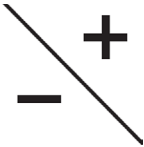
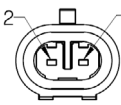
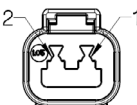

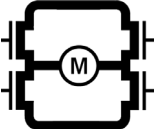
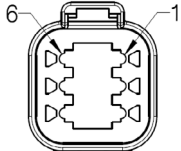


Actuator LA33
With CAN bus J1939, 0-point
and Software Addressing

Connection diagram



Connection diagram

33XXXXXXXXX003X2X=XXXXXX0GXXXXX

				Power	AMP	Deutsch
	24/48 V DC +	BROWN		2		
	GND -	BLUE		1		
				Signal		
		Not to be connected	ORANGE	5		
	Digital input	RED		1		
	Digital input	BLACK		2		
	Not to be connected	LIGHT BLUE		6		
	Bus	YELLOW		3		
	Bus	GREEN		4		
	Not to be connected	GREY		0		
	Data	VIOLET		7		
	Data GND	WHITE		8		



The BusLink software tool is available for CAN bus actuators and can be used for:

Diagnostics, manual run and configuration


The newest version is available online [here](#).



Please note: The BusLink configuration cable must be purchased separately

Item number for BusLink cable kit: 0367997 (adapter + USB2Lin)

I/O specifications

Input/Output	Specification	Comments																						
Description	Compatible with the SAE J1939 standard. Uses CAN messages to command movement, setting parameters and to deliver feedback from the actuator. See the LINAK® CAN bus user manual. Actuator identification is provided, using standard J1939 SW addressing.																							
Brown Connect to positive	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">Vsup</th> <th style="width: 15%;">Vmin</th> <th style="width: 15%;">Vmax</th> <th style="width: 55%;"></th> </tr> </thead> <tbody> <tr> <td rowspan="2" style="text-align: center; vertical-align: middle;">24 V</td> <td style="text-align: center;">16 V</td> <td style="text-align: center;">36 V</td> <td>Motor running</td> </tr> <tr> <td style="text-align: center;">10 V</td> <td style="text-align: center;">60 V</td> <td>Motor not running CAN communication possible</td> </tr> <tr> <td rowspan="2" style="text-align: center; vertical-align: middle;">48 V</td> <td style="text-align: center;">36 V</td> <td style="text-align: center;">58 V</td> <td>Motor running</td> </tr> <tr> <td style="text-align: center;">24 V</td> <td style="text-align: center;">60 V</td> <td>Motor not running CAN communication possible</td> </tr> <tr> <td colspan="4" style="text-align: center;"> 24 V, current limit 13 A 48 V, current limit 8 A </td> </tr> </tbody> </table>	Vsup	Vmin	Vmax		24 V	16 V	36 V	Motor running	10 V	60 V	Motor not running CAN communication possible	48 V	36 V	58 V	Motor running	24 V	60 V	Motor not running CAN communication possible	24 V, current limit 13 A 48 V, current limit 8 A				<p>Note: Do not swap the power supply polarity on the Brown and Blue wires! The PCB is coupled to the housing through a capacitor. Current limit levels can be adjusted through Actuator Connect®. If the temperature drops below 0 °C, all current limits will automatically increase with a factor 2.</p>
Vsup	Vmin	Vmax																						
24 V	16 V	36 V	Motor running																					
	10 V	60 V	Motor not running CAN communication possible																					
48 V	36 V	58 V	Motor running																					
	24 V	60 V	Motor not running CAN communication possible																					
24 V, current limit 13 A 48 V, current limit 8 A																								
Blue Connect to negative	- (GND)																							
Orange	Not to be used																							
Red	Extends the actuator	The signal becomes active at: > 67% of V_{IN} = ON																						
Black	Retracts the actuator	The signal becomes inactive at: < 33% of V_{IN} = OFF																						
Light Blue	Not to be used	Not to be used																						

Input/Output	Specification	Comments
Green	CAN_L	Actuators with CAN bus does not contain the 120 Ω terminal resistor. The physical layer is in accordance with J1939-15. * Speed: Autobaud up to 500 kbps Max. bus length: 40 meters Max. stub length: 3 meters
Yellow	CAN_H	Max. node count: 10 (can be extended to 30 under certain circumstances) Wiring: Unshielded twisted pair
Violet	Service interface	Only Actuator Connect® can be used as service interface. Use Grey adapter cable
White	Service interface GND	



* J1939-15 refers to Twisted Pair and Shielded cables. The standard/default cables delivered with CAN bus actuators do not comply with this. Find more information about the CAN bus in the CAN bus user manual - The newest version is available online [here](#).

Terms of use

LINAK® takes great care in providing accurate and up-to-date information on its products. However, the user is responsible for determining the suitability of LINAK products for a specific application. Due to continual development, LINAK products are subject to frequent modifications and changes. LINAK reserves the rights to conduct modifications, updates, and changes without any prior notice. For the same reason, LINAK cannot guarantee the correctness and actual status of imprinted information on its products.

LINAK uses its best efforts to fulfil orders. However, for the reasons mentioned above, LINAK cannot guarantee availability of any particular product at any given time. LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or in other written material created and produced by LINAK, LINAK subsidiaries, or LINAK affiliates. All sales are subject to the 'Standard Terms of Sale and Delivery for LINAK A/S' available on LINAK websites. LINAK and the LINAK logotype are registered trademarks of LINAK A/S. All rights reserved.