

DL12, DL14, DB14 and DL17 system
with CBD6S
User manual

Contents

Preface	3
Valid for	4
Important information	5
Safety instructions	5
General	5
Before installation, reinstallation or troubleshooting	6
Before start-up	6
During operation	6
Misc.	6
Only for EU markets	7
Only for Non EU markets	7
Misuse	7
Repairs	8
Manufacturer's declaration	8
Misc. on the DESKLINE® system	9
Warranty	9
Maintenance	9
Service of double-insulated products	9
ETL-markering	10
Description of the DESKLINE® system	11
Mounting guidelines for the DL14 system	12
Mounting top	12
Mounting foot	14
Mounting guidelines for the DL12 system	15
Mounting top	15
Mounting foot	15
Mounting the desk	15
Mounting guidelines for the DL17 system	16
Mounting top	16
Mounting foot	16
Mounting guidelines for the DB14	18
Mounting guidelines for the CBD6S (SMPS)	20
Electric connection of the DB/DL system	21
Initialisation of the DESKLINE parallel system	22
PIEZO™ description (optional)	23
Accessories and repair	24
Disposal of LINAK products	25
Labels	26
Drawing appendix	27
Declaration of conformity	36
Addresses	40

Preface

Dear User,

We are delighted that you have chosen a product from LINAK®.

LINAK systems are high-tech products based on many years of experience in the manufacture and development of actuators, electric control boxes, controls and chargers.

This User Manual does not address the end-user. It is intended as a source of information for the manufacturer of the equipment or system only, and it will tell you how to install, use and maintain your LINAK electronics. It is the responsibility of the manufacturer of the end-user product to provide a User Manual where relevant safety information from this manual is passed on to the end-user.

We are sure that your LINAK product/system will give you many years of problem-free operation.

Before our products leave the factory, they undergo full function and quality testing. Should you nevertheless experience problems with your LINAK product/system, you are always welcome to contact your local contact. LINAK subsidiaries and some distributors situated all over the world have authorised service centres, which are always ready to help you.

LINAK provides a warranty on all its products. This warranty, however, is subject to correct use in accordance with the specifications, maintenance being done correctly and any repairs being carried out at a service centre, which is authorised to repair LINAK products.

Changes in installation and use of LINAK products/systems can affect the operation and durability of the products/systems. The products are not to be opened by unauthorised personnel.

The User Manual has been written based on our present technical knowledge. We are constantly working on updating the information and we therefore reserve the right to carry out technical modifications.

LINAK A/S

Valid for:

This User Manual is valid for the following products:

(See the first 3 - 5 characters on the label)

Columns:	DL12, DL14, DL17
Built-in actuators:	DB14
Control boxes:	CBD6S 200W, CBD6S 300W
Controls:	DP1U/DPF1M (if memory function is required) DP1C/DPT/DPF1C (if memory function and display is required) or DPA/DPB/DPH/DP1K/DP1V/DPF1K/DPG1K (if only up/down is required) or DPF1D (if display is required), or DPG1M/DPG1B (if reminder, Bluetooth® and memory is required) or DPG1C ("If reminder, Bluetooth®, memory and display is required)

Important information

Important information on LINAK® products can be found under the following headings:



Warning!

Failure to comply with these instructions may result in accidents involving serious personal injury.



Failing to follow these instructions can result in the product being damaged or being destroyed.

Safety instructions



General

Safe use of the system is possible only when the operating instructions are read completely and the instructions contained are strictly observed.

Failure to comply with instructions marked with the "NOTE" symbol may result in serious damage to the system or one of its components.



It is important for everyone who is to connect, install, or use the systems to have the necessary information and access to this User Manual. Follow the instructions for mounting – there is a risk of injury if these instructions are not followed.



The appliance is not intended for use by young children or infirm persons without supervision.



If there is visible damage to the product, do not install it.



Please note that during construction of applications in which the actuator is to be fitted, there must be no possibility of personal injury, for example squeezing of fingers or arms.



Assure free space for movement of the application in both directions to avoid blockades.

Before installation, reinstallation, or troubleshooting

- Stop the DB/DL
- Pull out the mains plug.
- Relieve the DB/DL of any loads, which may be released during the work.

Before start-up:

- Make sure that the system has been installed as instructed in this User Manual.
- Make sure that the voltage of the control box is correct before connecting the system to the mains.
- System connection. The individual parts must be connected before connecting the control box to the mains. See the User Manual for LINAK actuators, if necessary.

During operation:

- If the control box makes unusual noises or smells, switch off the mains voltage immediately.
- Take care that the cables are not damaged.
- Unplug the mains cable on mobile equipment before moving it.
- The products must only be used in an environment, that corresponds to their IP protection.

Misc.

The actuator system has a sound level below 55dB(A) in typical applications.

Updated manuals and declarations can always be found here:

www.linak.com/deskline

Only for EU markets



This appliance can be used by children aged from aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Only for Non EU markets



Persons who do not have the necessary experience or knowledge of the product/products must not use the product/products. Besides, persons with reduced physical, sensory or mental abilities must not use the product/products, unless they are under surveillance or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.



Moreover, children must be under surveillance to ensure that they do not play with the product.



It is the operator's responsibility to ensure that there is free space for the application to move without risk for the operator or bystanders before operating the application.

Misuse



Do not overload the actuators – this can cause danger of personal injury and damage to the system.



Do not use the actuator system for lifting persons. Do not sit or stand on a table while operating – risk of personal injury.



Do not use the system in environments other than the intended indoor use

Repairs

In order to avoid the risk of malfunction, all DESKLINE® repairs must only be carried out by authorised LINAK workshops or repairers, as special tools must be used and special gaskets must be fitted. Lifting units under warranty must also be returned to authorised LINAK workshops.



Warning!

If any of the DESKLINE® products are opened, there will be a risk of subsequent malfunction.



Warning!

The DESKLINE® systems do not withstand cutting oil.

DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY

LINAK A/S
Smedevænget 8
DK - 6430 Nordborg

Herewith declares that LINAK DESKLINE® products as characterized by the following models and types:

Control Boxes	CBD6S
Linear Actuators	DB5, DB6, DB7, DB9, DB12, DB14, DB16, LA23, LA31
Lifting Columns	DL1A, DL2, DL4S, DL5, DL6, DL7, DL8, DL9, DL10, DL11, DL12, DL14, DL15, DL16, DL17, DL19, BASE1
Desk Panels	DPA, DPB, DPH, DPF, DPG1K, DPG1M, DPG1B, DPG1C, DPT, DP1, DP1CS, DP1K, DP1V, DP1U
RF Controls	HB10RF, HB20RF, RFT, RFRL
Accessories	BA001, SLS, Kick & Click

comply with the following parts of the Machinery Directive 2006/42/EC, ANNEX I, *Essential health and safety requirements relating to the design and construction of machinery*:

1.5.1 Electricity supply

The relevant technical documentation is compiled in accordance with part B of Annex VII and that this documentation or part hereof will be transmitted by post or electronically to a reasoned request by the national authorities.

This partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC where appropriate.

Nordborg, 2017-12-08

LINAK A/S
John Kling, B.Sc.E.E.
Certification and Regulatory Affairs
Authorized to compile the relevant technical documentation

Misc. on the DESKLINE® system

This system is a DESKLINE system developed for desks and for indoor use in offices. Do not use it in industrial kitchens or in other environments that have to be cleaned with aggressive detergents.

Do not bolt the legs to the floor so that free movement is prevented. This could cause serious damage to the legs in fault situations.

Warranty - 60 months on DESKLINE®

This will be valid for all DESKLINE® products produced after 1 May 2015.

Products produced before 1 May 2015 will still be covered by 36 months.

Products used in DESKLINE applications: If these products are used in another application, they will be covered by 18 months warranty.

If there is any doubt that returned products are within the warranty period, this must be treated as if they are covered by the warranty. We recommend that you use the date of the control box or actuator as reference, if possible. We will have our purchase no. printed on the label.

Maintenance

Clean dust and dirt on the outside of the system at appropriate intervals and inspect them for damage and breaks.

Inspect the connections, cables and plugs and check for correct functioning as well as fixing points.

Service of double insulated products:



Class II

A Class II or **double insulated** electrical appliance is one which has been designed in such a way that it does not require a safety electric earth connection (US: ground).

The basic requirement is that no single failure can result in dangerous voltage becoming exposed so that it might cause an electric shock and that this is achieved without relying on an earthed metal casing. This is usually achieved at least in part by having two layers of insulating material surrounding live parts or by using reinforced insulation.

There is no earthing/grounding means provided on the product, and no earthing/grounding means is to be added to the product.

In Europe, a double insulated appliance must be labelled "Class II", "double insulated" or bear the double insulation symbol (a square inside another square).

Servicing a double-insulated product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace.



Cleaners and disinfectants must not be highly alkaline or acidic (pH value 6-8).

ETL-marking

Due to space limitations, the complete ETL-marking demands are not represented on the marking plates.
The full ETL Recognized Component markings are shown here.



C/N 120690
Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States



C/N 9901916
Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States



C/N 4008003
Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States



C/N 4008004
Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States



C/N 4008005
Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States



C/N 4008671
Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States



C/N 4009507
Conforms to UL962
Cert. to CSA Std. C22.2 No. 68-09
ETL Recognized Component mark for Canada and United States

Description of the DESKLINE® system

Each DESKLINE® actuator/column is equipped with a motor and parallel/memory drive is ensured by means of software in the CBD6S (SMPS) that also takes account of an oblique load on the desk. Soft start and stop are also part of this software, which ensures a soft start and stop when adjusting the desk.

Application of the DESKLINE® system:

Irrespective of the load, the **duty cycle 10% ~ 6 min./ hour or max. 2 min. at continuous use** stated in the data sheets, must **NOT** be exceeded as this will result in a superheating of the motor and the control box. Exceeding the duty cycle will result in a dramatic reduction of the life of the system.




The DB/DL system range contains following products:


- 1 control box CBD6S 200W or CBD6S 300W (SMPS - Switch Mode Power Supply)
- DL12, DL14, DB14 or DL17 (1 - 4)
- 1 exchangeable mains cable
- Motor cables (1 - 4)
- DP1U/DPF1M (if memory function is required)
DP1C/DPT/DPF1C (if memory function and display is required)
or DPA/DPB/DPH/DP1K/DP1V/DPF1K/DPG1K (if only up/down is required)
or DPF1D (if display is required),
or DPG1M/DPG1B (if reminder, Bluetooth® and memory is required)
or DPG1C ("If reminder, Bluetooth®, memory and display is required)

Mounting guidelines for the DL14 system


Mounting top

The top of the column is supplied with 4 M6 threaded holes meant for mounting onto the desk frame. We advise you to fasten the desk frame by means of 4 pcs. M6 screws of a good quality (min. 8.8) and a suitable length, which must not go further than max. 14 mm into the column. The thrust moment must not exceed 10 Nm.

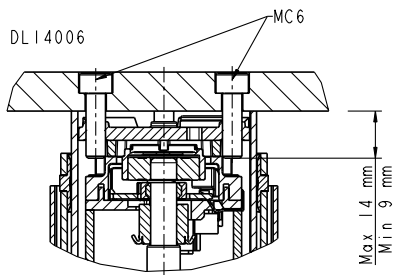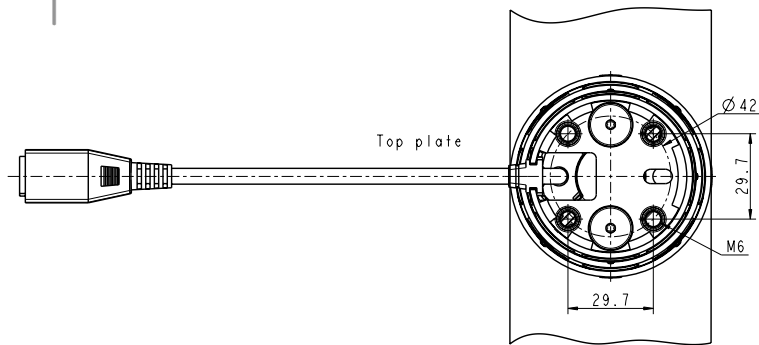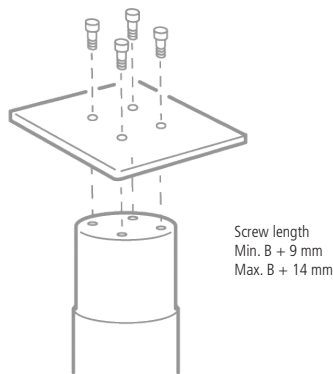

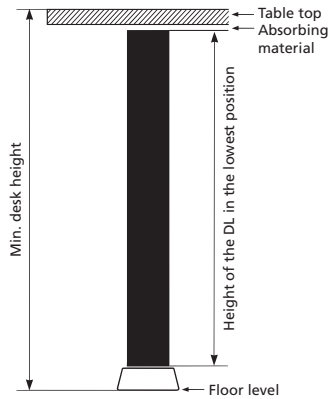

As the desktop amplifies the sound, we advise you to place a vibration/shock absorbing material between the desktop and the desk frame.

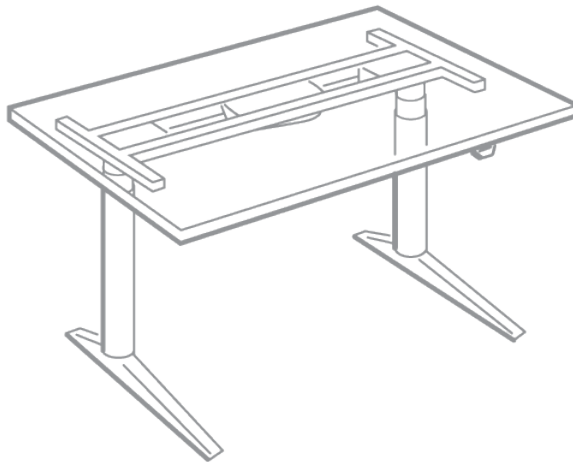

(Example of how to mount a 2-parallel DESKLINE® DL system)




LINAK recommends that the DESKLINE® DL system should be used in push applications.


Mounting foot

The DL 14 is supplied with 4 M6 threaded holes and 2 M8 screws for mounting of the foot. You can either use 2 M8 screws or 4 M6 screws dependent on your foot design. We advise you to use screws of a good quality min. 8.8 and of a suitable length, which must not go further than 16 mm into the DL14 column. The thrust moment must not exceed 10 Nm in the bottom plate thread.



The holes in the foot ought to be sufficiently larger than $\varnothing 6$ so that it is possible to bring the foot to a level line at assembly/ mounting of the table.

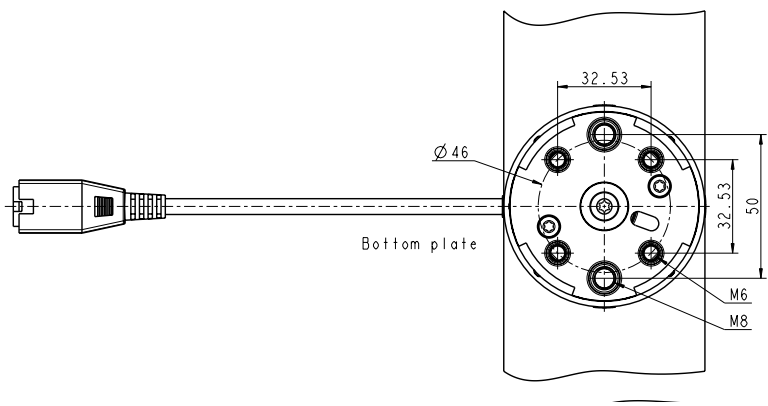

Mounted with 2 x M8

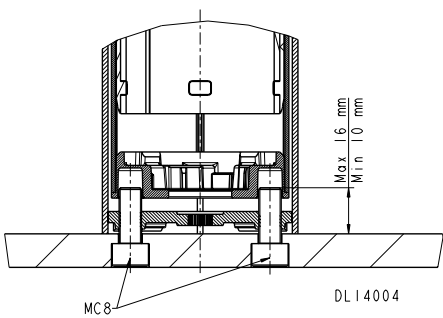

Mounted with 4 x M6

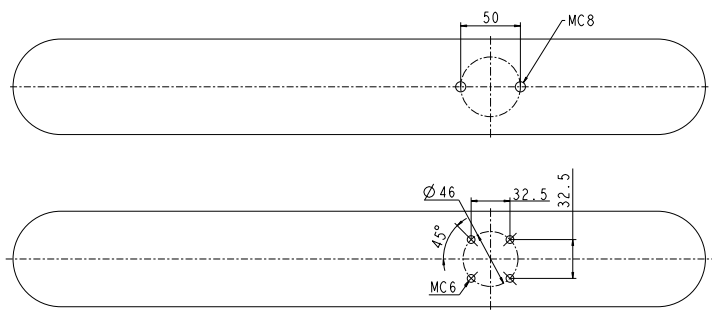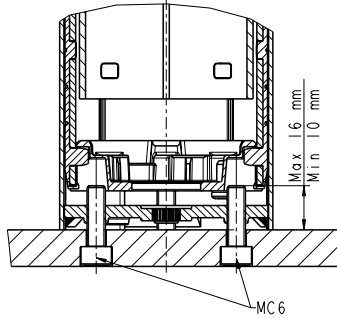


DL 14003

Mounting guidelines for the DL12

Mounting the top

The DL12 top plate is supplied with four M6 threaded holes for mounting onto the top frame.

1. Mount column top on top frame using four M6 bolts with the following specifications:
Quality: Min. grade 8.8
Length: Min. 12 mm (plus top frame thickness);
Max. 16 mm (plus top frame thickness)
2. Fasten bolts thoroughly (torque: max. 10 Nm).

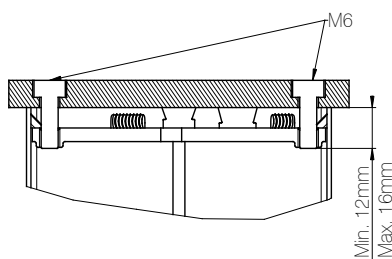


Mounting the feet

The DL12 bottom plate is supplied with four M6 threaded holes.

1. Mount column bottom on desk feet using four M6 bolts with the following specifications:
Quality: Min. grade 8.8
Length: Min. 12 mm (plus desk feet thickness);
Max. 16 mm (plus desk feet thickness)
2. Fasten bolts thoroughly (torque: max. 10 Nm).


The holes in the foot must be sufficiently larger than $\varnothing 6$ to enable levelling of the assembled desk.

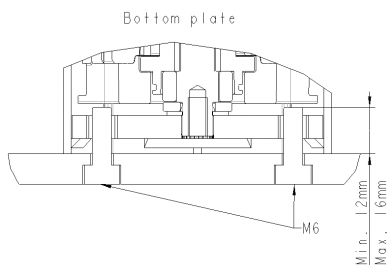

Mounting the desk

The sound from the lifting column spreads as vibrations to the tabletop which amplifies the sound. This can, however, be reduced.


1. Place vibration/shock-absorbing material between tabletop and top frame.

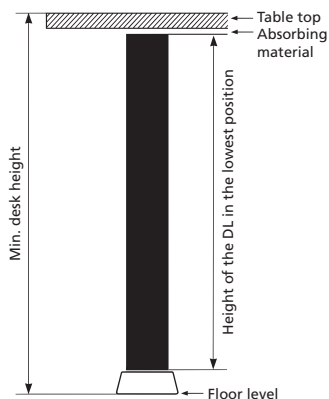

Mounting guidelines for the DL17 system

Mounting top


The top of the column is supplied with 4 x M6 threaded holes meant for mounting onto the desk frame. We advise you to fasten the desk frame by means of 4 x M6 screws of a good quality (min. 8.8) and a suitable length of minimum 10 mm and must not go into the column further than maximum 14 mm. The screw torque must not exceed 10 Nm

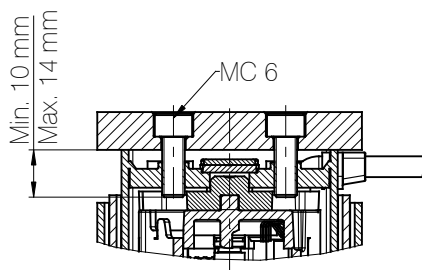


Mounting foot

The DL17 is supplied with 4 x M6 threaded holes and 2 x M8 screws for mounting of the foot. You can use either 2 x M8 screws or 4 x M6 screws dependent on your foot design. We advise you to use screws of a good quality min. 8.8 and of a suitable length, which must not go into the DL17 column further than 16 mm. The screw torque must not exceed 10 Nm in the bottom plate thread.

The holes in the foot ought to be sufficiently larger than (1) 6 so that it is possible to bring the foot to a level line at assembly/mounting of the table.

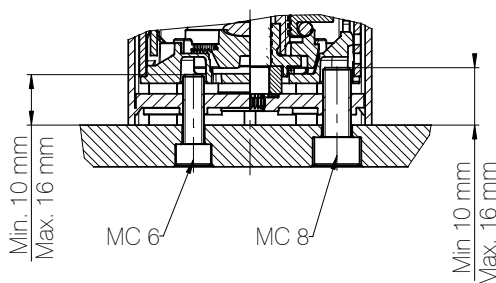


As the desktop amplifies the sound, we advise you to place a vibration/shock absorbing material between the desktop and the desk frame.

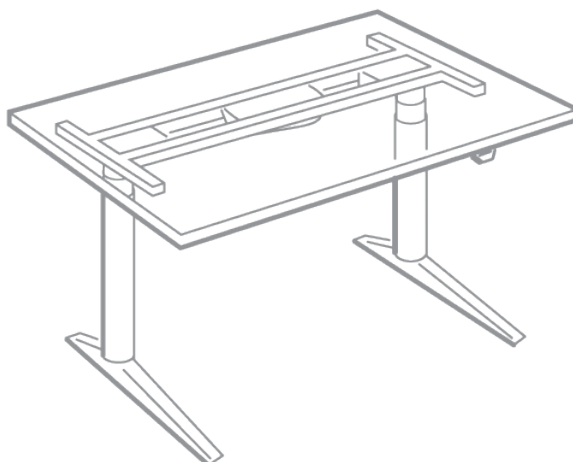

(Example of how to mount the DESKLINE® system)

When mounting the DL17 to the tabletop and feet, we recommend orienting the column, so the cable is pointing in direction of the centre of the desk.

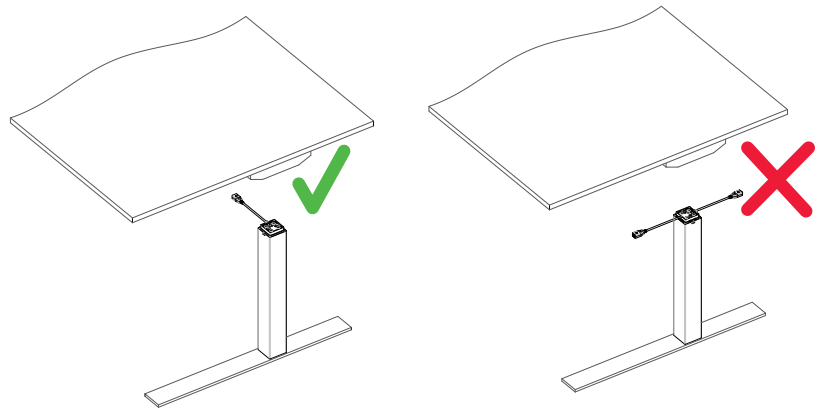


Mounting guidelines for the DB14



For detailed information on how to mount the DB14, please contact LINAK A/S.


The top of the motor is supplied with holes for the self-tapping special screws. These screws together with the 2 rubber washers are supplied with the DB14.
On the top of the motor there is the special rubber suspension, which should always be used when the DB14 is mounted in a column. The top flange where the motor is mounted must be 4 mm thick ± 0.1 mm, and the 2 mounting holes should be $\varnothing 12$ mm with a centre distance of 36 mm. The screw torque must be 2 Nm ± 0.1 Nm.

Top:

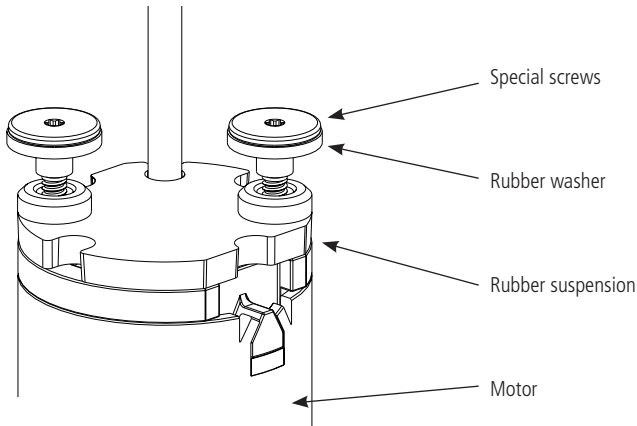

Middle tube: For detailed information on how to mount the middle tube of your column, please contact LINAK A/S

Bottom: At the bottom of the DB14 the inner spindle should be mounted by means of a 22-teeth spline profile and a M5 screw in the bottom of the spindle. The trust moment must not exceed 2.3 Nm.

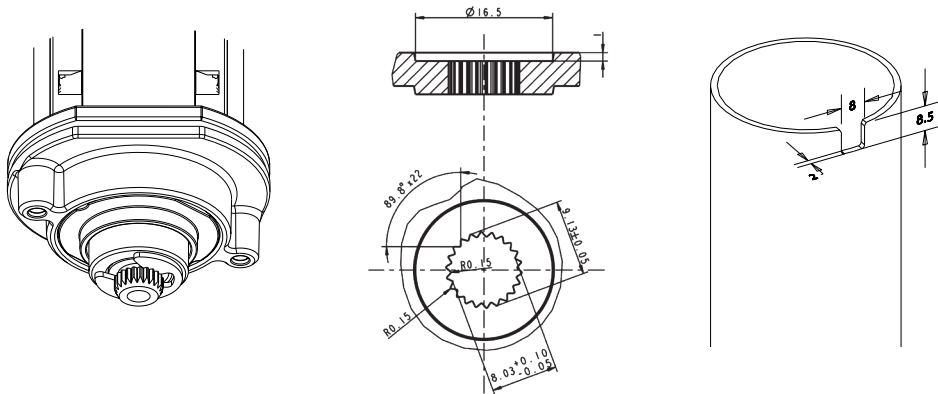



The DB14 gives the possibility of synchronous drive of the middle profile - to make sure that the profiles are in the right place you have to secure that both the hollow and the massive spindles are driven in the bottom position. For detailed information on how to mount the DB14, please contact LINAK A/S.



From the factory, the DB14 is delivered with the hollow spindle driven into end position. Please observe that the solid spindle may roll out during transportation/handling, but it must be rolled back to end position before mounting in the profile.



As the desktop amplifies the sound, we advise you to place a vibration/shock absorbing material between the desktop and the desk frame



Do not drive the DB14 to the outer end position before mounting. This will result in damaging the DB.



Example of how to mount the DESKLINE® system

Mounting guidelines for the CBD6S (SMPS)

The control box is to be fastened with 2 screws with a head diameter between $\varnothing 8$ and $\varnothing 10$ mm. With regard to the tension surface $\varnothing 10$ mm is preferable due to a lower surface tension. See drawing appendix for placing of mounting holes and the space the CBD takes up.





CBD6S 200W and CBD6S 300W

The CBD must not be packed in heat insulating material, but must be placed so that it can emit waste heat into the surroundings. There are no ventilation holes to consider, the CBD emits heat through the surface. The plug must be visible when the CBD is mounted so that the supply to the CBD can be disconnected at replacement, if any. The mounting screws on the control box must be fastened with a max. torque of 1 Nm. The mounting surface to which the control box is attached should have a surface evenness of better than ± 0.5 mm.

Bottom with cable grooves

The bottom of the CBD6S (SMPS) is equipped with two cable grooves improving the cable management when mounting. The grooves can be used to bypass the CBD for both motor cables and the mains cable (EU version only) from one side to the other, giving a cleaner design.

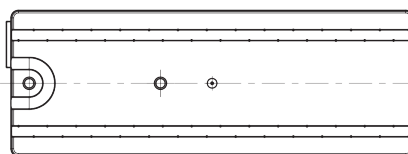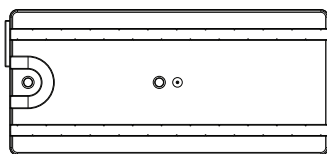

Remember to lead the cables through the grooves before mounting the control box.

For mounting and operation of the desk panel, please see the separate user manual for desk panels.

Electric connection of the DB/DL system

The DB/DL system is to be connected as shown on figure 7. The DB/DL is to be connected to the sockets on the control box by means of the motor cables, which have a 6-pin plug in each end.



Finally, the mains cable is to be mounted and power switched on. Please note that the control box must only be connected to the voltage stated on the label.

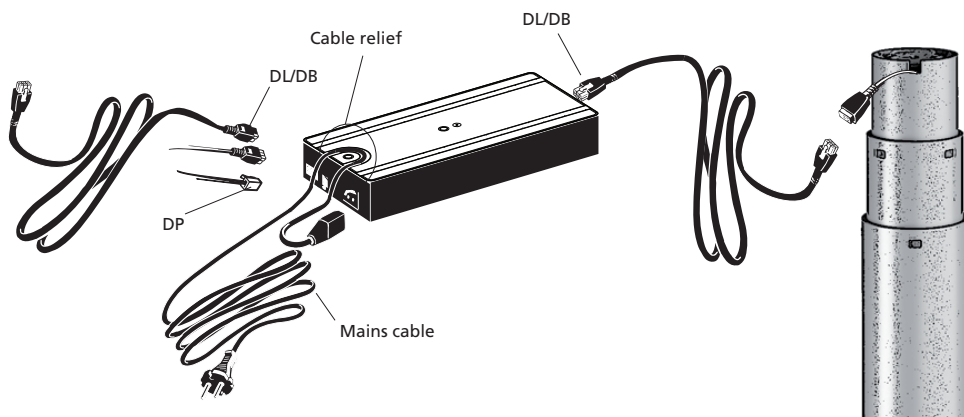


Figure 7


Initialisation of the DESKLINE® parallel system

The DESKLINE system is initialised by pressing the down button once or twice and holding it down until the DB/DL runs into end stop. It will then automatically run approx. 3 mm out again and hereafter slowly run in again. Only release the down button when the movement has stopped completely.



If the button is released before the sequence is completed, the initialisation is interrupted and must be started again from the beginning.

The first two times the system runs into the outward end-stop, it will automatically run approx. 3 mm back in inward direction.

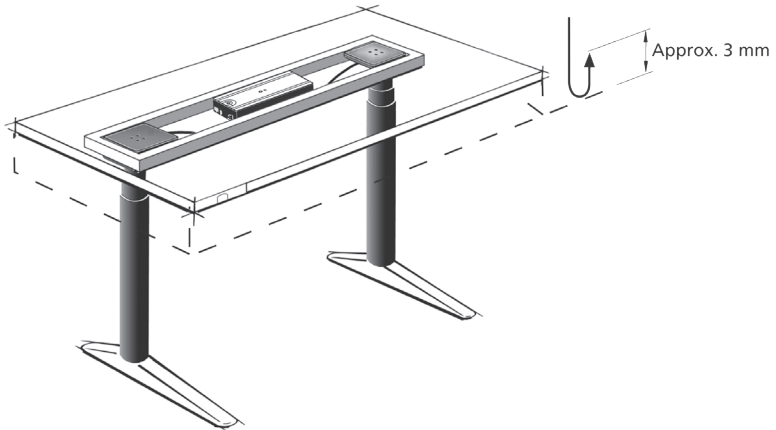

The CBD6S (SMPS) can control the DB/DL in 2-parallel, 3-parallel, 4-parallel or even multi-parallel.

PIEZO™ description (optional)

For optimised safety against squeezing and blocking on a desk, LINAK has developed the DESKLIFT columns with an integrated sensor, called PIEZO. The option minimises the risk of damage to a desk caused by squeezing or blocking of obstacles in up and down direction. Examples could be driving down into an office chair or into a container or up into a windowsill. To a certain extent, the system also increases the personal safety, but it does not comply with legislation describing personal safety.

PIEZO allows the DBs or columns to have the standard built-in dimension and the standard stroke length. There are no visible changes to the column.



Examples where PIEZO avoids squeezing situations.

Accessories and repair

Ordering accessories

Order from your nearest LINAK® contact, distributor or subsidiary.

Accessories

Please contact your nearest LINAK contract, distributor or subsidiary.

Repairs

Systems should only be repaired by an authorised LINAK service centre or engineer. Systems to be repaired under warranty must be sent to an authorised LINAK service centre.



Warning!

By unauthorised opening of the system there is a risk that it may malfunction at a later date.

Spare parts

Please contact your nearest LINAK contact for information on spare parts.

Disposal of LINAK product

As LINAK customers often ask us how our products can be disposed or scrapped we have prepared this guide that enables a classification to different waste fractions for recycling or combustion.

Guide

We recommend that our products be disassembled as much as possible and divided into different waste groups for recycling or combustion.

For example, waste can be sorted into metals, plastics, cable scrap, combustible materials and recoverable resources.

Some of these main groups can be further divided into subgroups; e.g. metal can be divided into steel/aluminium/copper and plastic can be divided into ABS/PA/PE/PP.

As an example, the table below breaks down the different components in LINAK products to various recycling groups:

Product	Components	Recycling group
Column/ Actuator :	Spindle and motor Plastic housing Cable PC boards	Metal scrap Plastic recycling or combustion Cable scrap or combustion Electronic scrap
Control Box :	PC boards Plastic housing Cable Transformer	Electronic scrap Plastic recycling or combustion Cable scrap or combustion Metal scrap
Handset/Control :	Plastic housing Cable PC boards	Plastic recycling or combustion Cable scrap or combustion Electronics scrap

By now, almost all our casted plastic parts are supplied with an interior code for plastic types and fibre contents, if any.

Main groups of disposal

Product main groups	Metal scrap	Cable scrap	Electronics scrap	Plastic recycling or combustin	Comments
DL12	X	X	X	X	
DL12XL	X	X	X	X	
DL14	X	X	X	X	
DB14	X	X	X	X	
DL17	X	X	X	X	
CBD6S (SMPs)			X	X	
DPXX		X	X	X	

Disposal of batteries

Details regarding safe disposal of used and leaking batteries:

Batteries should be disposed in accordance with appropriate federal, state and local regulations. LINAK recommends that used or leaking batteries are disposed through local recycling system. Please do not throw used or leaking batteries in normal household waste or in nature. This will cause damage to the enviroment.

How to deal with leaking batteries

Leaking batteries should be disposed as described above.

If leaking batteries are discovered in the products, the batteries must be moved immediately to minimise damage to the product. If leaking batteries are left in the product it might become defect.

It is recommended to use plastic gloves when handling of leaking batteries. The contents of a leaking batteries can cause chemical burns and respiratory irritation.

If exposed to the contents of a leaking battery, please wash with soap and water. If irritation persists, please seek medical attention. In case of eye contact, please flush eyes thoroughly with water for 15 minutes and seek medical attention."

Labels

Label for DL12



WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Duty Cycle: 10 %
Max. Load: 700 N



DL12000A0E660518
2013.10.07
P.O. 12345678-0001
S.O. 12345678

Label for DL17




WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Duty Cycle: 10 %
Max. Load: 700 N




DL17000A0E660518
2013.10.07
P.O. 12345678-0001
S.O. 12345678

Label for DB14




WE IMPROVE YOUR LIFE

Item No. : DB1400000660508
Prod. Date : 2009.05.12
Max. Load : 700 N (Push only)
Power Rate : 18 V= Max.10 Amp
Duty Cycle : 10%, max. 2 min. / 18 min.
NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
MADE BY LINAK A/S DENMARK
P.O.95143-0001




Label for DL14



WE IMPROVE YOUR LIFE

Item No. : DL14000A0660525
Prod. Date : 2009.05.12
Max. Load : 700 N (Push only)
Power Rate : 18 V= Max.10 Amp
Duty Cycle : 10%, max. 2 min. / 18 min.
NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL
MADE BY LINAK A/S DENMARK
P.O.95143-0001



Label for CBD6S 200W (SMPS)



GROUP HEADQUARTERS
SMEDEVAENGET 8
DK 6430 NORDBORG

WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Item : CBD6SP00020A-009
Date : 2012.11.09
U In : 230 V~, 50 Hz
P In : 300 W
U Out: 12 V= - 40 V=
Op. : Int. 10 %, Max. 2 min. / 18 min.
S.W. P/N.: 03002000 Ver. B1.00



0.1 W
Standby
Power

NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL



P.O.1234567-0001 MADE BY LINAK A/S DENMARK

Label for CBD6S 300W (SMPS)
up to 4 channels



GROUP HEADQUARTERS
SMEDEVAENGET 8
DK 6430 NORDBORG

WE IMPROVE YOUR LIFE
DESIGNED IN DENMARK

Item : CBD6SP00020A-709
Date : 2014.02.07
U In : 90 V - 240 V -, 48 Hz - 63 HZ
P In : 450 W
U Out: 12 V= - 40 V=
Op. : Int. 10 %, Max. 2 min./18 min.
S.W. P/N.: 03002009 Ver. XXX



NOT TO BE OPENED BY UNAUTHORIZED PERSONNEL





P.O.-0000


Assembled in China 01


DRAWING APPENDIX


DL12

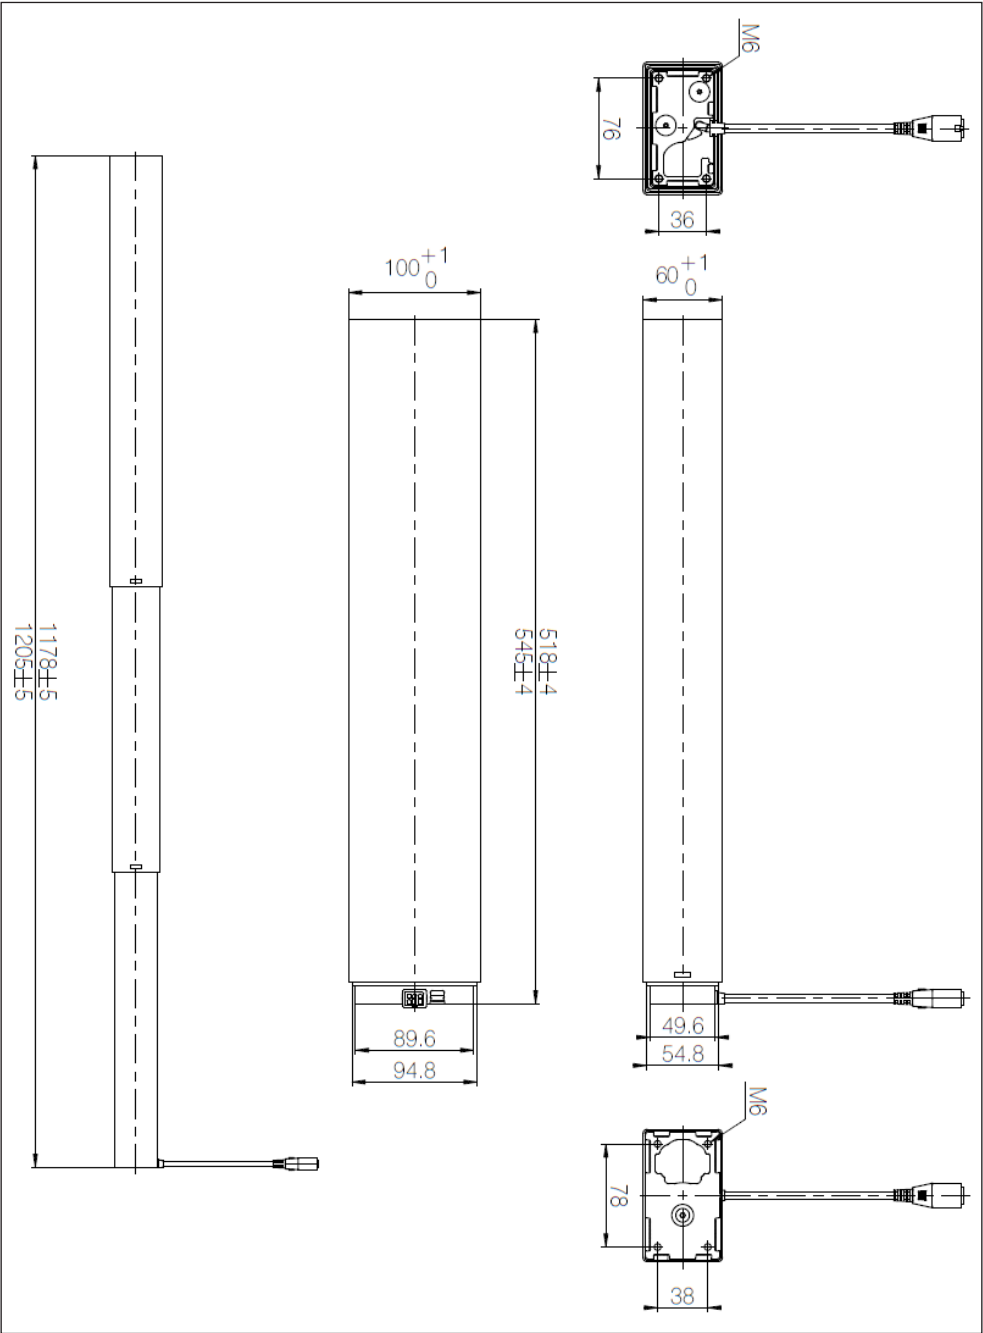

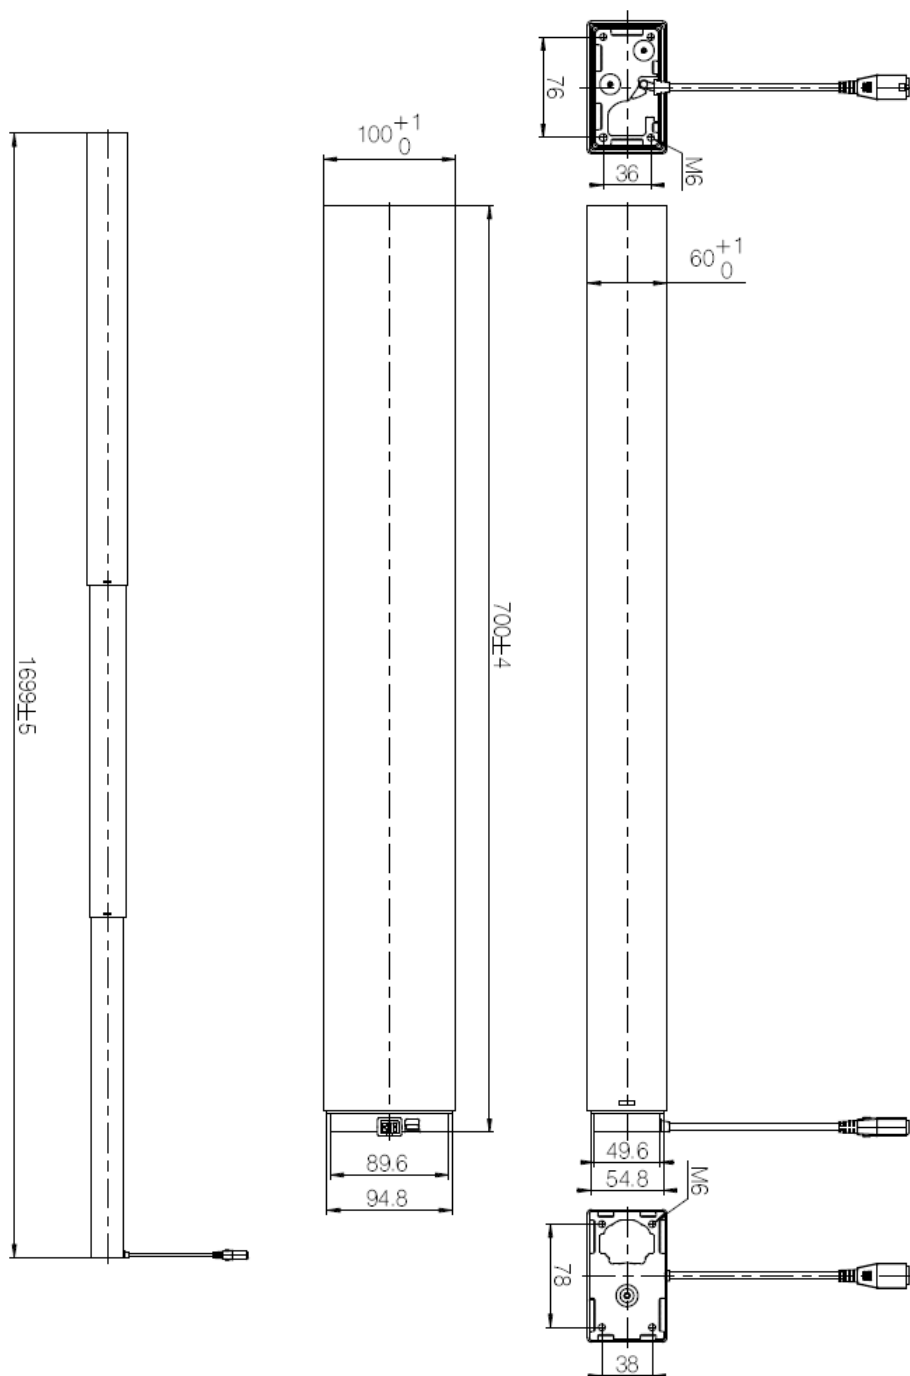


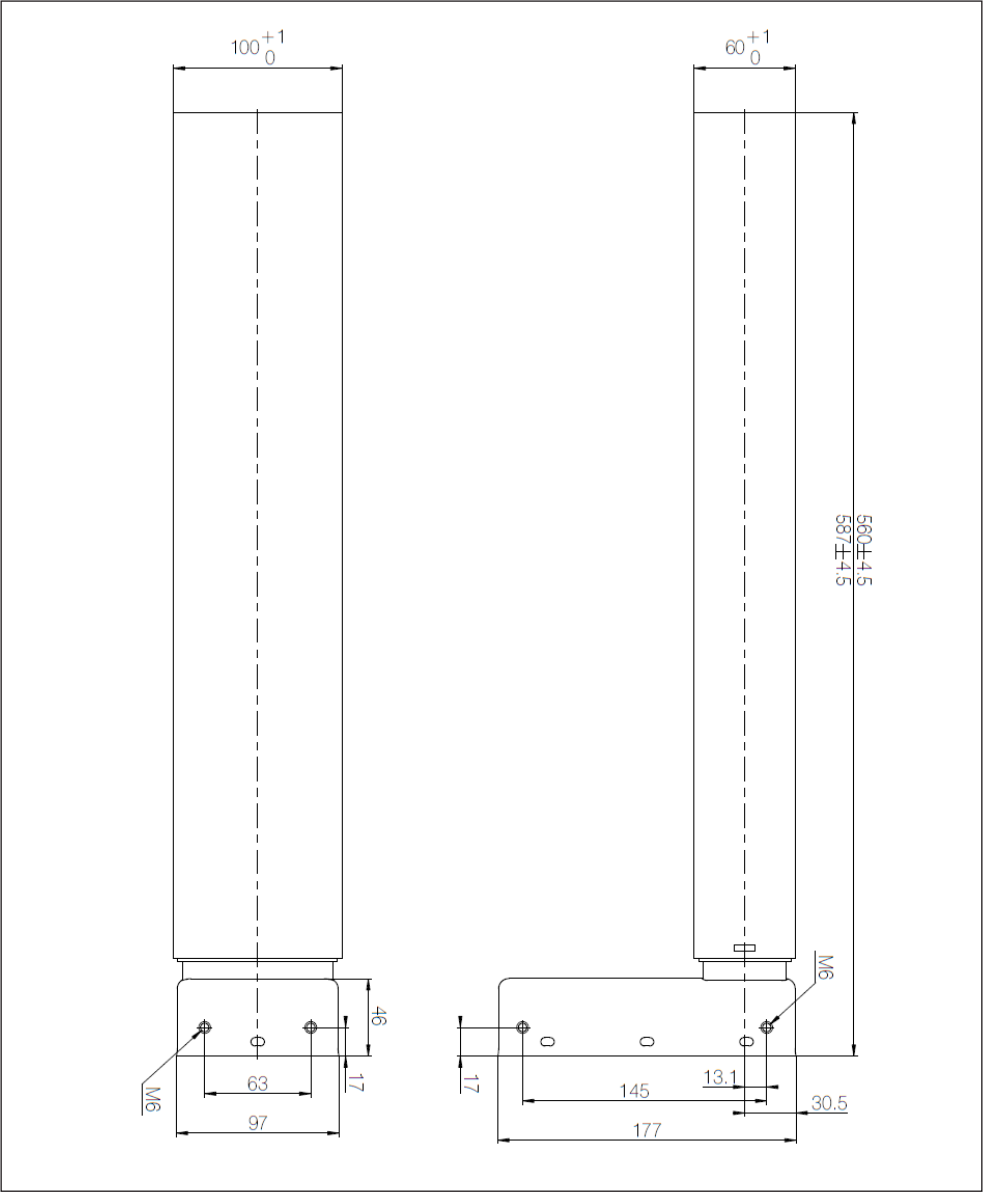

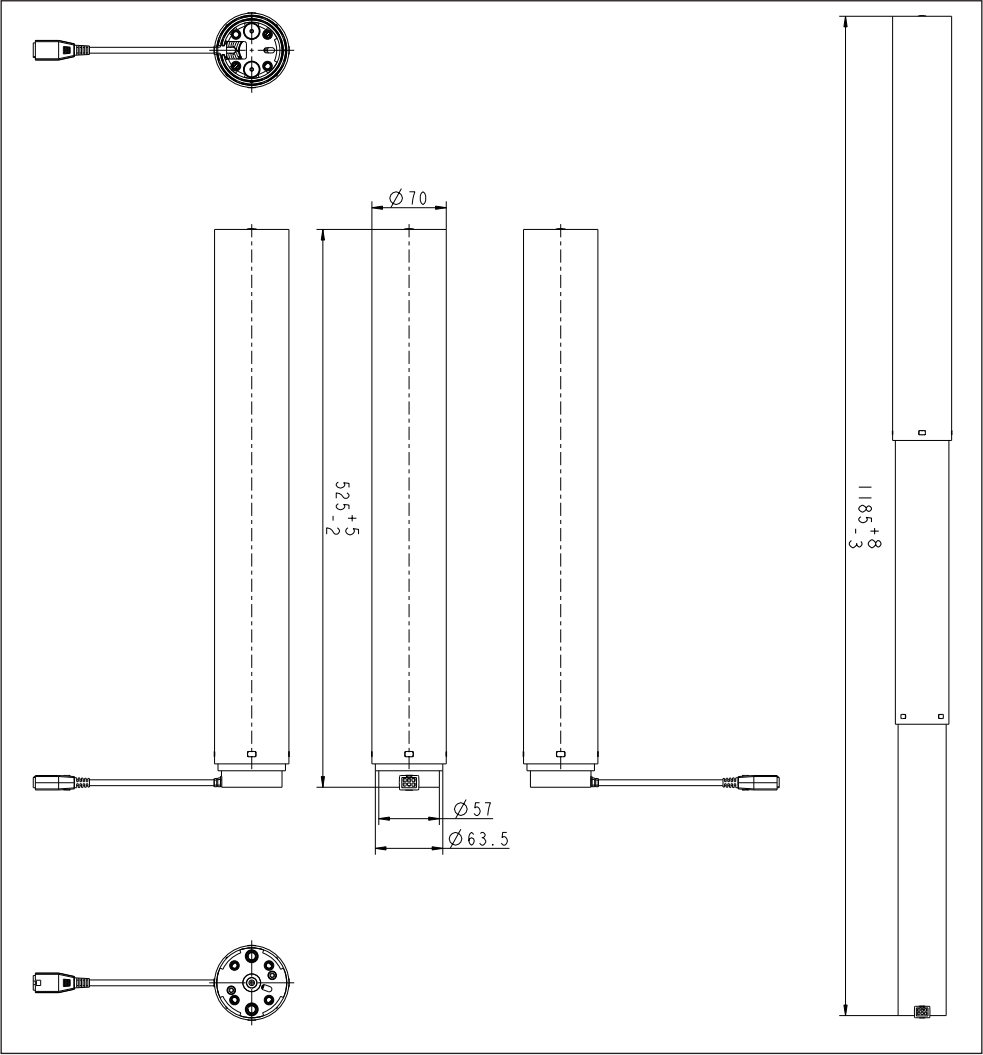


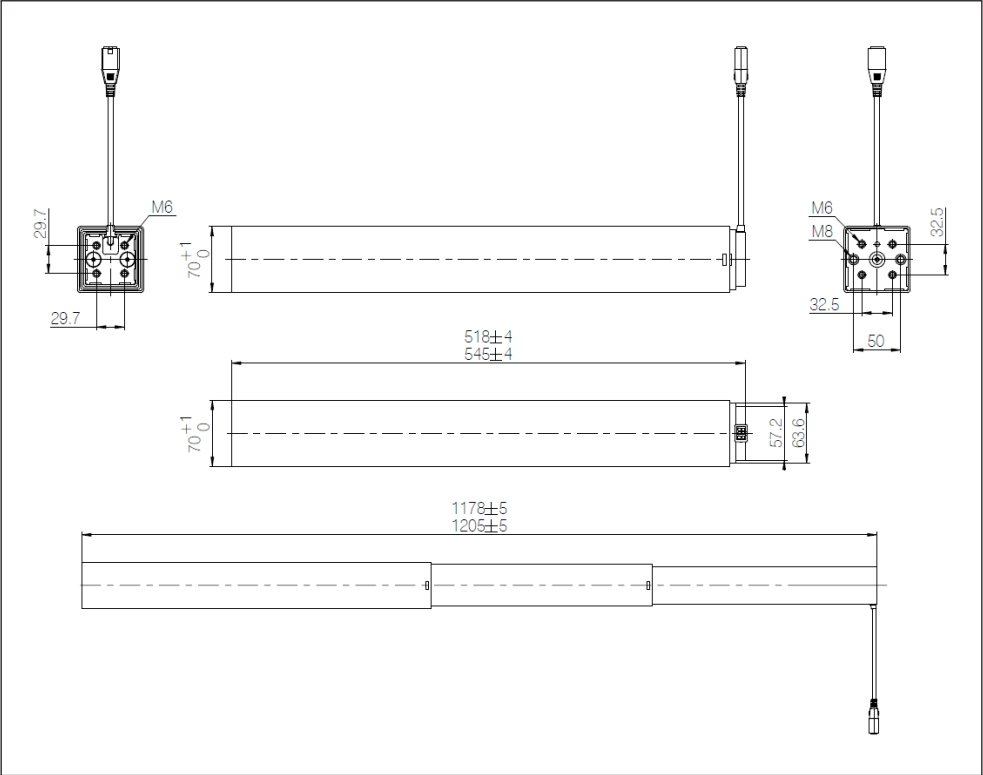


DL17 with bench bracket
Left column

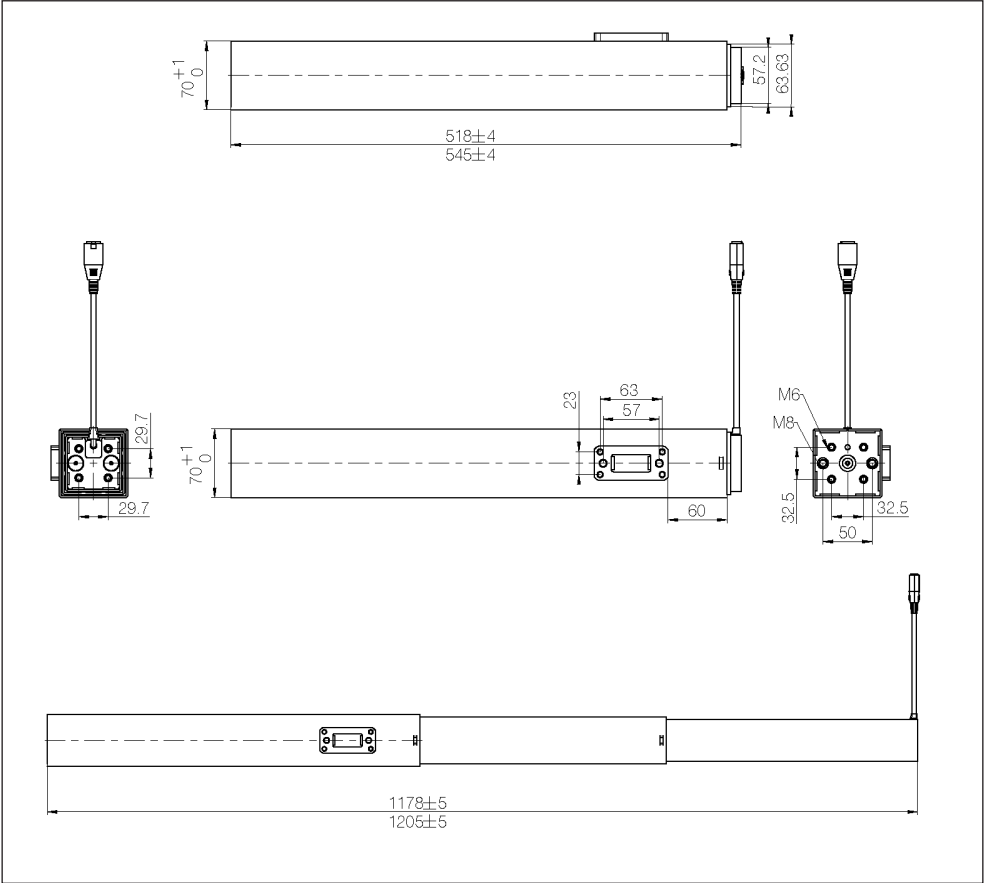



DL17 with bench bracket
Right column

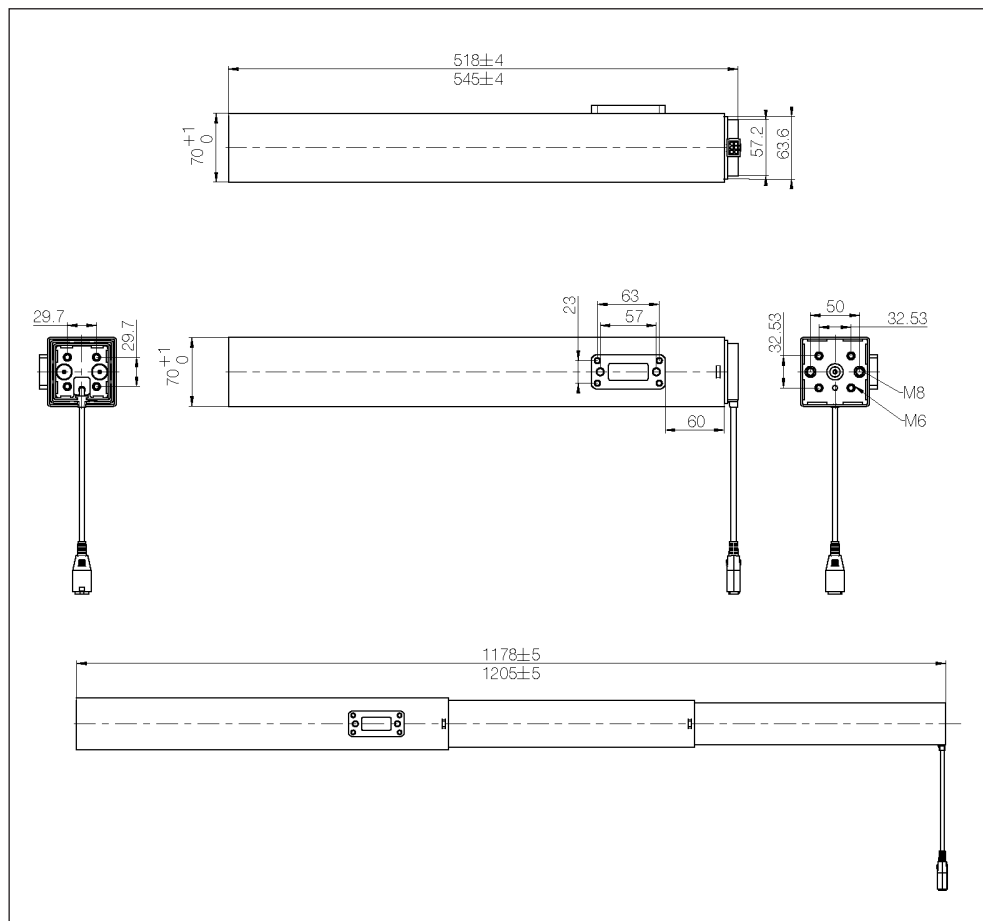

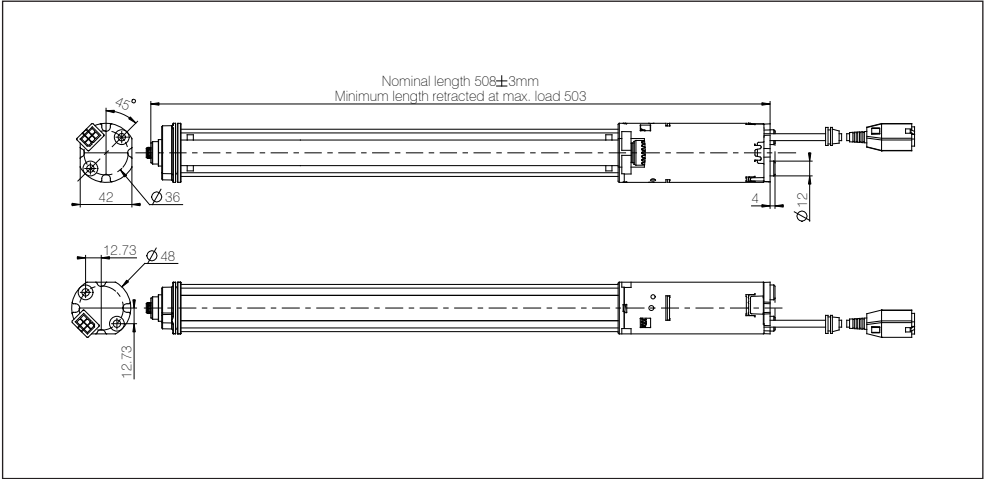

CBD6S 200W (SMPS)

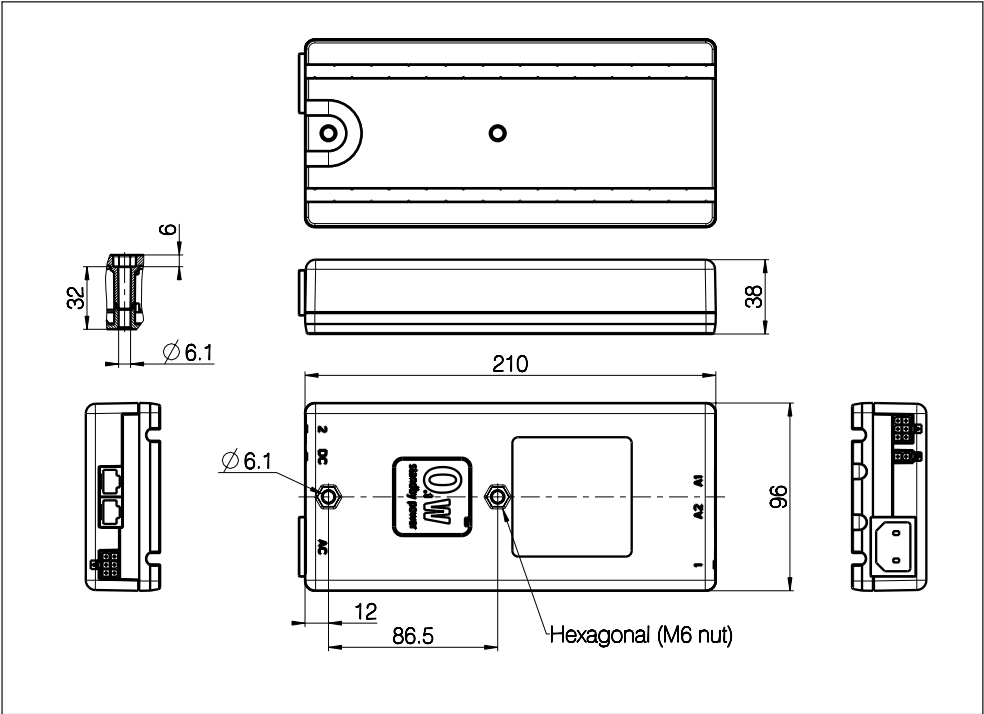

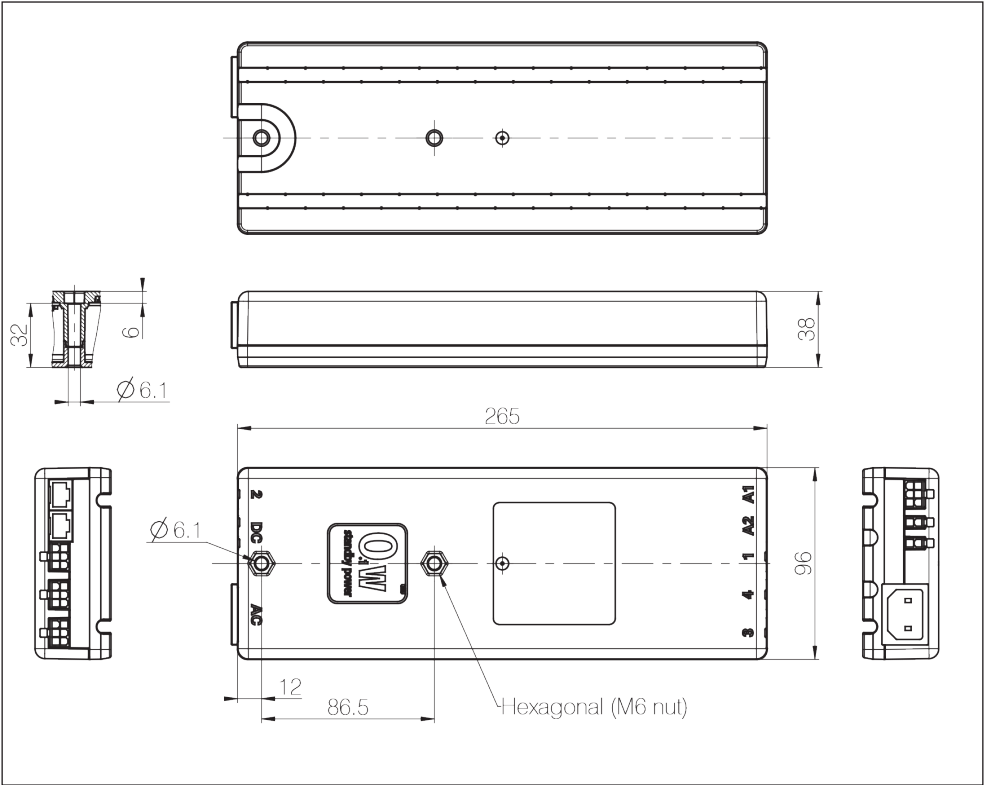

DECLARATION OF CONFORMITY

LINAK A/S
Smedevænget 8
DK - 6430 Nordborg

hereby declares that LINAK Actuator System composed of:

Control Box(s) CBD6SP00020A-309
 CBD6S*000*0A-709

(The "*" in the product description can either be a character or a number, thereby defining the variation of the product)

And

Linear Actuator(s) 31, DB4, DB5, DB6, DB7, DB9, DB12, DB14, DB16, LA23 series and / or
Lifting Column(s) DL1A, DL2, DL4, DL5, DL6, DL7, DL8, DL9, DL10, DL11, DL12, DL14, DL15, DL16, DL17, DL19,
 BASE1 series

And

Desk Panel(s) DP1C, DP1K, DP1L, DP1V, DP1U, DPA, DPB, DPF, DPG, DPH, DPT, WDPL1 series

complies with EMC Directive: 2014/30/EU according to following standards:
EN 61000-6-1:2007, EN 61000-6-3:2007+A1:2011+AC:2012

complies with Low Voltage Directive 2014/35/EU according to the standard:
EN 60335-1:2012+A11:2014

complies with RoHS2 Directive 2011/65/EU according to the standard:
EN 55581:2012

Additional information:

The system does also comply with the standard: EN 13849-1:2015 SRP/CS Cat. B, PL = b and SRESW PL = b
Note 1: Exempted CBD6S with SW03003007 printed on the label.

Nordborg, 2017-12-08



LINAK A/S
John Kling, B.Sc.E.E.
Certification and Regulatory Affairs
Authorized to compile the relevant technical documentation

Original Declaration

LINAK APPLICATION POLICY

The purpose of the application policy is to define areas of responsibilities in relation to applying a LINAK product defined as hardware, software, technical advice, etc. related to an existing or a new customer application.

LINAK products, as defined above, are applicable for a wide range of applications within the Medical, Furniture, Desk and Industry areas. Yet, LINAK cannot know all the conditions under which LINAK products will be installed, used, and operated, as each individual application is unique.

The suitability and functionality of the LINAK product and its performance under varying conditions (application, vibration, load, humidity, temperature, frequency, etc.) can only be verified by testing, and shall ultimately be the responsibility of the LINAK customer using any LINAK product.

LINAK shall be responsible solely that LINAK products comply with the specifications set out by LINAK and it shall be the responsibility of the LINAK customer to ensure that the specific LINAK product can be used for the application in question.

FACTORIES

China

LINAK (Shenzhen) Actuator Systems, Ltd.
Phone: +86 755 8610 6656
Phone: +86 755 8610 6990
E-mail: sales@linak.cn
www.linak.cn

Denmark - Headquarters LINAK A/S - Group Headquarters

Phone: +45 73 15 15 15
Fax: +45 74 45 80 48
Fax (Sales): +45 73 15 16 13
E-mail: info@linak.com
www.linak.com

USA

LINAK U.S. Inc.

North and South American Headquarters
Phone: +1 502 253 5595
Fax: +1 502 253 5596
E-mail: info@linak-us.com
www.linak-us.com

SUBSIDIARIES

Australia

LINAK Australia Pty. Ltd.
Phone: +61 3 8796 9777
Fax: +61 3 8796 9778
E-mail: sales@linak.com.au
www.linak.com.au

Austria

LINAK Repräsentanz - Österreich (Wien)
Phone: +43 (1) 890 7446
Fax: +43 (1) 890 744615
E-mail: info@linak.de
www.linak.at

Belgium

LINAK Actuator-Systems NV/SA
(Belgium & Luxembourg)
Phone: +32 (0)9 230 01 09
E-mail: beinfo@linak.be
www.linak.be - www.fr.linak.be

Brazil

LINAK DO BRASIL COMÉRCIO DE
ATUADORES LTDA.
Phone: +55 (11) 2832 - 7070
Fax: +55 (11) 2832 - 7060
E-mail: info@linak.com.br
www.linak.com.br

Canada

LINAK Canada Inc.
Phone: +1 502 253 5595
Fax: +1 416-255-7720
E-mail: info@linak.ca
www.linak-us.com

Czech Republic

LINAK C&S S.R.O.
Phone: +420581741814
Fax: +420581702452
E-mail: info@linak.cz
www.linak.cz

Denmark - International

LINAK International
Phone: +45 73 15 15 15
E-mail: info@linak.com
www.linak.com

Denmark - Sales

LINAK DANMARK A/S
Phone: +45 86 80 36 11
Fax: +45 86 82 90 51
E-mail: linak@linak-silkeborg.dk
www.linak.dk

Finland

LINAK OY
Phone: +358 10 841 8700
E-mail: linak@linak.fi
www.linak.fi

France

LINAK FRANCE E.U.R.L.
Phone: +33 (0) 2 41 36 34 34
Fax: +33 (0) 2 41 36 35 00
E-mail: linak@linak.fr
www.linak.fr

Germany

LINAK GmbH
Phone: +49 6043 9655 0
Fax: +49 6043 9655 60
E-mail: info@linak.de
www.linak.de

India

LINAK A/S India Liaison Office
Phone: +91 120 4531797
Fax: +91 120 4786428
E-mail: info@linak.in
www.linak.in

Ireland

LINAK UK Limited (Ireland)
Phone: +44 (0)121 544 2211
Fax: +44 (0)121 544 2552
+44 (0)796 855 1606 (UK Mobile)
+35 387 634 6554 (Republic Of
Ireland Mobile)

E-mail: sales@linak.co.uk
www.linak.ie

Italy

LINAK ITALIA S.r.l.
Phone: +39 02 48 46 33 66
Fax: +39 02 48 46 82 52
E-mail: info@linak.it
www.linak.it

Japan

LINAK K.K.
Phone: 81-45-533-0802
Fax: 81-45-533-0803
E-mail: linak@linak.jp
www.linak.jp

Malaysia

LINAK Actuators Sdn. Bhd.
Phone: +60 4 210 6500
Fax: +60 4 226 8901
E-mail: info@linak-asia.com
www.linak.my - www.linak.co.id
www.linak.pk - www.linak.ph

Netherlands

LINAK Actuator-Systems B.V.
Phone: +31 76 5 42 44 40 /
+31 76 2 00 11 10
E-mail: info@linak.nl
www.linak.nl

New Zealand

LINAK New Zealand Ltd
Phone: +64 9580 2071
Fax: +64 9580 2072
E-mail: nzsales@linak.com.au
www.linak.com.au

Norway

LINAK Norge AS
Phone: +47 32 82 90 90
E-mail: info@linak.no
www.linak.no

Poland

LINAK Polska
LINAK Danmark A/S (Spółka Akcyjna)
Phone: +48 22 295 09 70 /
+48 22 295 09 71
E-mail: info@linak.pl
www.linak.pl

Republic of Korea

LINAK Korea Ltd.
Phone: +82 2 6231 1515
Fax: +82 2 6231 1516
E-mail: info@linak.kr
www.linak.kr

Russia

LINAK LLC
Phone: +7 495 780 31 61
Fax: +7 495 687 14 26
E-mail: info@linak.ru
www.linak.ru

Spain

LINAK Actuadores, S.L.u
Phone: +34 93 588 27 77
Fax: +34 93 588 27 85
E-mail: esma@linak.es
www.linak.es

Sweden

LINAK Scandinavia AB
Phone: +46 8 732 20 00
Fax: +46 8 732 20 50
E-mail: info@linak.se
www.linak.se

Switzerland

LINAK AG
Phone: +41 43 388 31 88
Fax: +41 43 388 31 87
E-mail: info@linak.ch
www.linak.ch - www.fr.linak.ch
www.it.linak.ch

Taiwan

LINAK (Shenzhen) Actuator systems Ltd.
Taiwan Representative office
Phone: +886 2 27290068
Fax: +886 2 27290096
E-mail: sales@linak.com.tw
www.linak.tw

Turkey

LINAK İth. İhr. San. ve Tic. A.Ş.
Phone: +90 312 4726338
Fax: +90 312 4726635
E-mail: info@linak.com.tr
www.linak.com.tr

United Kingdom

LINAK UK Limited
Phone: +44 (0)121 544 2211
Fax: +44 (0)121 544 2552
E-mail: sales@linak.co.uk
www.linak.co.uk

DISTRIBUTORS

Argentina

NOVOTEC ARGENTINA SRL
Phone: 011-4303-8989 / 8900
Fax: 011-4032-0184
E-mail: info@novotecargentina.com
www.novotecargentina.com

Colombia

MEM Ltda
Phone: +57 (1) 334-7666
Fax: +57 (1) 282-1684
E-mail: servicioalcliente@memltda.com.co
www.mem.net.co

India

Mechatronics Control Equipments India Pvt Ltd
Phone: +91-44-28558484, 85
E-mail: bala@mechatronicscontrol.com
www.mechatronicscontrol.com

Indonesia

PT. HIMALAYA EVEREST JAYA
Phone: +6 221 544 8956, +6 221 544 8965
Fax: +6 221 619 1925
Fax (Sales): +6 221 619 4658
E-mail: hejplastic-div@centrin.net.id
www.hej.co.id

Israel

NetivTech LTD
Phone: +972 55-2266-535
Fax: +972 2-9900-560
Email: info@NetivTech.com
www.netivtech.com

Russia

OOO FAM
Phone: +7 812 3319333
Fax: +7 812 3271454
E-mail: purchase@fam-drive.ru
www.fam-drive.ru

Singapore

Servo Dynamics Pte Ltd
Phone: +65 6844 0288
Fax: +65 6844 0070
E-mail: servodynamics@servo.com.sg

South Africa

Industrial Specialised Applications CC
Phone: +27 011 466 0346
E-mail: gartht@isagroup.co.za
www.isaza.co.za

United Arab Emirates

Mechatronics
Phone: +971 4 267 4311
Fax: +971 4 267 4312
E-mail: mechtron@emirates.net.ae

Terms of use

The user is responsible for determining the suitability of LINAK products for specific application. LINAK takes great care in providing accurate and up-to-date information on its products.

However, due to continuous development in order to improve its products, LINAK products are subject to frequent modifications and changes without prior notice. Therefore, LINAK cannot guarantee the correct and actual status of said information on its products.

While LINAK uses its best efforts to fulfil orders, LINAK cannot, for the same reasons as mentioned above, guarantee the availability of any particular product. Therefore, LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or other written material drawn up by LINAK.

All sales are subject to the Standard Terms of Sale and Delivery for LINAK. For a copy hereof, please contact LINAK.



WE IMPROVE YOUR LIFE